


**ATyS t**

Automatic Transfer Switching Equipment

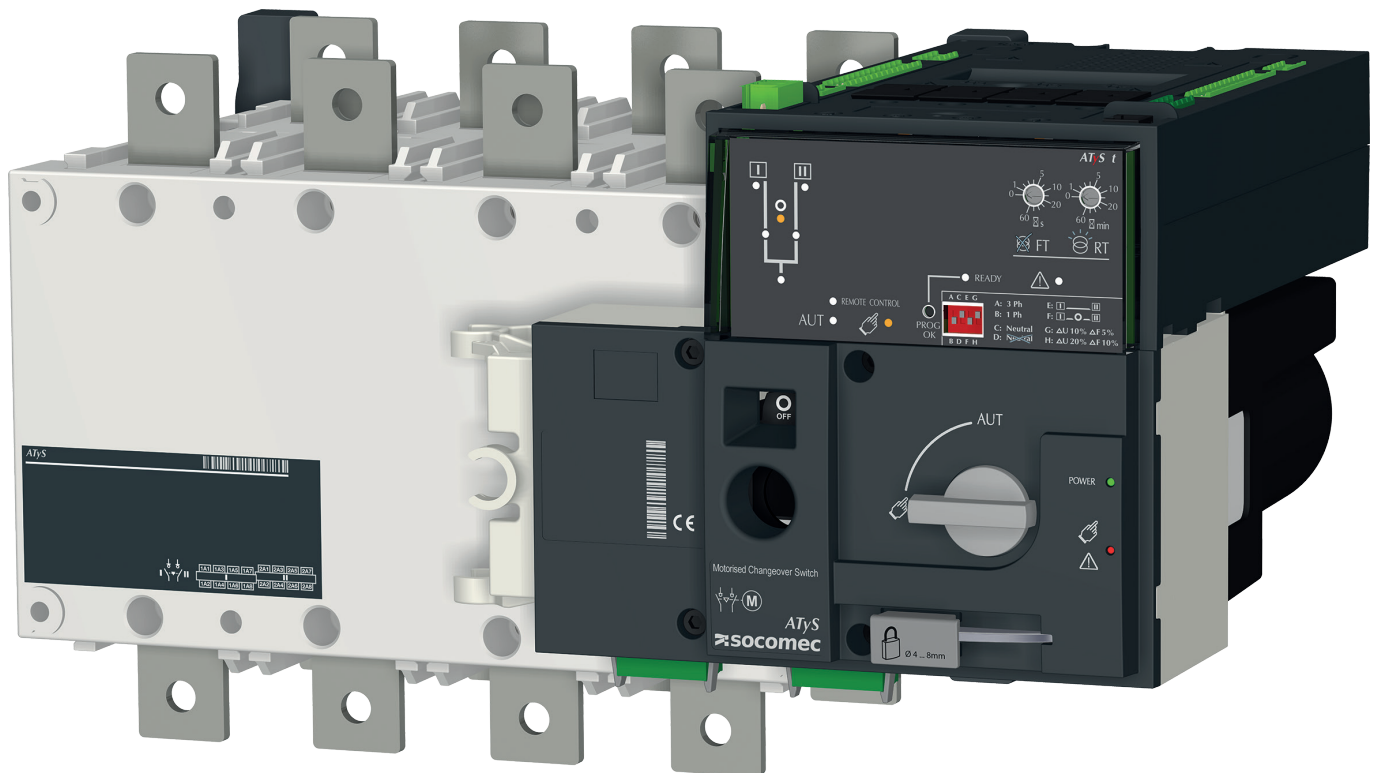

|  |    |
|--|----|
| 1. GENERAL SAFETY INSTRUCTIONS . . . . .                                     | 6  |
| 2. INTRODUCTION . . . . .  | 7  |
| 3. THE ATYS FAMILY PRODUCT RANGE . . . . .                                   | 8  |
| 3.1. The ATyS Range Key Features . . . . .                                   | 9  |
| 4. QUICK START . . . . .   | 10 |
| 4.1. Quick Start ATyS t Frame B3 to B5 (125 A to 630 A) . . . . .            | 10 |
| 4.2. Quick Start ATyS t Frame B3 to B5 (125 A to 630 A) continued . . . . .  | 12 |
| 4.3. Quick Start ATyS t Frame B6 to B8 (800 A to 3200 A) . . . . .           | 14 |
| 4.4. Quick Start ATyS t Frame B6 to B8 (800 A to 3200 A) continued . . . . . | 16 |
| 5. GENERAL OVERVIEW. . . . .   | 18 |
| 5.1. Product introduction . . . . .  | 18 |
| 5.2. Product identification. . . . .   | 19 |
| 5.3. ATS control module interface . . . . .                                  | 20 |
| 5.4. Environmental . . . . .   | 21 |
| 5.4.1. IP Rating . . . . .   | 21 |
| 5.4.2. Operating Conditions . . . . .  | 21 |
| 5.4.2.1. Temperature . . . . .   | 21 |
| 5.4.2.2. Hygrometry . . . . .  | 21 |
| 5.4.2.3. Altitude . . . . .  | 21 |
| 5.4.3. Storage Conditions . . . . .  | 21 |
| 5.4.3.1. Temperature . . . . .   | 21 |
| 5.4.3.2. Storage duration period . . . . .                                   | 22 |
| 5.4.3.3. Storage position . . . . .  | 22 |
| 5.4.4. Volume and shipping weights by reference ATyS t . . . . .             | 22 |
| 5.4.5. CE marking . . . . .  | 23 |
| 5.4.6. Lead free process . . . . .   | 23 |
| 5.4.7. WEEE . . . . .  | 23 |
| 5.4.8. EMC standard. . . . .   | 23 |
| 5.5. ATyS t ACCESSORIES AVAILABLE . . . . .                                  | 24 |
| 6. INSTALLATION . . . . .  | 26 |
| 6.1. Product dimensions . . . . .  | 26 |
| 6.1.1. Dimensions: Frame B3 to B5 (125 A to 630 A) . . . . .                 | 26 |
| 6.1.2. Dimensions: Frame B6 & B7 (800 A to 1600 A) . . . . .                 | 28 |
| 6.1.3. Dimensions: Frame B8 (2000 A to 3200 A) . . . . .                     | 29 |
| 6.2. Mounting orientation . . . . .  | 30 |
| 6.3. Assembly of customer mounted accessories . . . . .                      | 30 |
| 6.3.1. Clip for emergency handle storage . . . . .                           | 30 |
| 6.3.2. Bridging bar installation . . . . .                                   | 31 |
| 6.3.3. Terminal shrouds . . . . .  | 31 |
| 6.3.4. Terminal screens . . . . .  | 32 |
| 6.3.5. Copper bar connection kits (2000A to 3200A : Frame B8) . . . . .      | 33 |
| 6.3.6. Incoming copper bar connection kit assembly . . . . .                 | 34 |
| 6.3.7. Outgoing bridge connection assembly . . . . .                         | 34 |
| 6.3.8. Power supply . . . . .  | 35 |
| 6.3.9. Padlocking key interlocks . . . . .                                   | 36 |
| 6.3.10. Additional auxiliary contacts . . . . .                              | 36 |




|   |           |
|---|-----------|
| <b>7. CONNECTIONS</b> .....   | <b>37</b> |
| 7.1. Power circuits .....   | 37        |
| 7.1.1. Cable or bar connections .....                                 | 37        |
| 7.1.2. Power connection terminals .....                               | 37        |
| 7.1.3. Power connection cross-section .....                           | 38        |
| 7.1.4. Connection .....   | 39        |
| 7.2. Networks and Power Connection possibilities .....                | 40        |
| 7.2.1. Type of networks .....   | 40        |
| 7.2.2. Sensing details .....  | 41        |
| 7.3. Control circuits .....   | 42        |
| 7.3.1. Typical ATyS t wiring .....                                    | 42        |
| 7.3.2. ATyS t input and output contacts .....                         | 43        |
| 7.3.2.1. Motorisation module wiring .....                             | 43        |
| 7.3.2.2. ATS control module wiring .....                              | 43        |
| 7.3.2.3. Terminal denomination, description and characteristics ..... | 44        |
| 7.4. Voltage sensing and power supply kit .....                       | 45        |
| 7.4.1. Standard configuration .....                                   | 45        |
| 7.4.2. Sensing kit wiring diagram .....                               | 46        |
| 7.4.3. Network .....  | 47        |
| <b>8. ATYS T OPERATING MODES AND SEQUENCES</b> .....                  | <b>48</b> |
| 8.1. Manual operation .....   | 49        |
| 8.1.1. Emergency manual operation .....                               | 49        |
| 8.1.2. Padlocking .....   | 49        |
| 8.2. Electrical operation .....                                       | 50        |
| 8.2.1. Dual power supply .....  | 50        |
| 8.2.2. Voltage sensing inputs .....                                   | 50        |
| 8.2.3. Fixed inputs .....   | 51        |
| 8.2.3.1. Description .....  | 51        |
| 8.2.3.2. Technical data .....   | 52        |
| 8.2.3.3. Remote control logic .....                                   | 53        |
| 8.2.4. Fixed outputs - Dry contacts .....                             | 54        |
| 8.2.4.1. Description .....  | 54        |
| 8.2.4.2. Position auxiliary contact .....                             | 54        |
| 8.2.4.3. ATyS t Product available output (motorisation) .....         | 54        |
| 8.2.4.4. Technical data .....   | 55        |
| 8.3. Operating Sequences .....  | 55        |
| <b>9. PROGRAMMING</b> .....   | <b>56</b> |
| 9.3.1. Step 1: ATyS t DIP switches setting options .....              | 57        |
| 9.3.2. Step 2: ATyS t potentiometer setting options .....             | 57        |
| 9.3.3. Step 3: ATyS t Auto configuration .....                        | 58        |
| 9.3.4. Step 4: Saving the configured values .....                     | 58        |
| 9.3.5. Step 5: Putting the ATyS t into auto operation .....           | 58        |
| <b>10. CHARACTERISTICS</b> .....                                      | <b>60</b> |

|  |    |
|--|----|
| 11. PREVENTIVE MAINTENANCE .....                   | 62 |
| 12. TROUBLE SHOOTING GUIDE .....                   | 63 |
| 13. ACCESSORIES .....                              | 64 |
| 13.1. Terminal shrouds .....                       | 64 |
| 13.2. Terminal screens .....                       | 64 |
| 13.3. Inter-phase barrier .....                    | 64 |
| 13.4. Bridging bars .....                          | 65 |
| 13.5. Copper bar connection kits .....             | 65 |
| 13.6. Solid neutral .....                          | 66 |
| 13.7. Autotransformer 400/230 VAC .....            | 66 |
| 13.8. DC power supply .....                        | 66 |
| 13.9. Voltage sensing and power supply kit .....   | 66 |
| 13.10. Voltage relay .....                         | 66 |
| 13.11. Door protective surround .....              | 67 |
| 13.12. Auxiliary contacts (additional) .....       | 67 |
| 13.13. 3 position padlocking (I - 0 - II) .....    | 67 |
| 13.14. RONIS Key interlocking system .....         | 67 |
| 13.15. Remote interface .....                      | 68 |
| 13.16. Connection cable for remote interface ..... | 68 |
| 13.17. Sealable cover .....                        | 68 |
| 13.18. Auto/Manual key selector .....              | 68 |
| 14. SPARE PARTS .....                              | 69 |
| 14.1. Electronic module .....                      | 69 |
| 14.2. Motorisation module .....                    | 69 |
| 14.3. Power section .....                          | 69 |
| 14.4. Kit of connectors .....                      | 69 |
| 14.5. Metal mounting brackets .....                | 69 |
| 15. ATYS FAMILY: ORDERING INFORMATION .....        | 70 |



# 1. GENERAL SAFETY INSTRUCTIONS

- This manual provides instructions on safety, connections and operation of the ATyS t motorised changeover switch manufactured by SOCOMEC.
- Whether the ATyS t is sold as a loose product, as a spare, as an enclosed solution or as any other configuration, this device must always be installed and commissioned by qualified and experienced personnel, in line with the manufacturers recommendations, following good engineering practices and after having read and understood the details in the latest release of the relative product instruction manual.
- Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.
- Each product is shipped with a label or other form of marking including rating and other important specific product information. One must also refer to and respect markings on the product prior to installation and commissioning for values and limits specific to that product.
- Using the product outside the intended scope, outside SOCOMEC recommendations or outside the specified ratings and limits can cause personal injury and/or damage to equipment.
- This instruction manual must be made accessible so as to be easily available to anyone who may need to read it in relation with the ATyS t.
- The ATyS t meets the European Directives governing this type of product and includes CE marking on each product.
- No covers on the ATyS t should be opened (with or without voltage) as there may still be dangerous voltages inside the product such as those from external circuits.
- **Do not handle any control or power cables connected to the ATyS t when voltage may be present on the product directly through the mains or indirectly through external circuits.**
- Voltages associated with this product may cause injury, electric shock, burns or death. Prior to carry out any maintenance or other work on live parts or other parts in the vicinity of exposed live parts, ensure that the switch including all control and associated circuits are de-energized.

|   |  |  |
|---|--|--|
|  <b>DANGER</b> |  <b>WARNING</b> |  <b>CAUTION</b> |
| <b>RISK:</b><br>Electric shock, burns, death  | <b>RISK:</b><br>Possible personal injury   | <b>RISK:</b><br>Equipment damage   |

- As a minimum the ATyS t comply with the following international standards:
  - IEC 60947-6-1
  - GB 14048-11
  - EN 60947-6-1
  - VDE 0660-107
  - BS EN 60947-6-1
  - NBN EN 60947-6-1
  - IEC 60947-3
  - IS 13947-3
  - EN 60947-3
  - NBN EN 60947-3
  - BS EN 60947-3

The information provided in this instruction manual is subject to change without notice, remains for general information only and is non-contractual.

## 2. INTRODUCTION

ATyS t “Automatic Transfer Switching Equipment” (ATSE) is designed for use in power systems for the safe transfer of a load supply between a normal and an alternate source. The changeover is done in open transition and with minimum supply interruption during transfer ensuring full compliance with IEC 60947-6-1, GB 14048-11 and other international TSE standards as listed.

The ATyS t is a full load break (switch type) derived transfer switching equipment where the main components are proven technology devices also fulfilling requirements in IEC 60947-3 standards.

As a Class PC ATSE, the ATyS t is capable of “making and withstanding short circuit currents” assigned to IEC 60947-3 utilization categories of up to AC23A, GB 14048-11, IEC 60947-6-1 and equivalent standards with utilization categories of up to AC33B.

### ATyS t motorised source changeover switches ensure:

- Power Control and Safety between a normal and an alternate source.
- A complete product delivered as a fully assembled and tested solution.
- Intuitive HMI for emergency / local operation.
- Integrated and robust switch disconnection.
- Window with clearly visible position indication I – 0 - II.
- An inherent failsafe mechanical interlock.
- Stable positions (I – 0 – II) non affected by typical vibration and shocks.
- Constant pressure on the contacts non effected by network voltage.
- Energy Efficient with virtually no consumption whilst on the normal, alternate or off positions.
- Quick, easy and safe dual “on-load” emergency manual operation.  
(Manual operation is functional with and without the motorization in place).
- Extremely rugged, error free and built in padlocking facility.
- Straight forward installation with effective ergonomics.
- Minimal downtime with the possibility to perform easy maintenance.
- Simple and secure motorization controls interface with remote control.
- Straightforward ATS configuration for easy and fast commissioning.
- Integrated switch position auxiliary contacts.
- Dual active “product availability” status feedback for motorisation and ATS controllers.
- Ample accessories to suit specific requirements.
- Fully integrated ATS controller specifically designed for Mains / Mains Applications.
- Power supply continuity for most network (transformer) applications...



### 3. THE ATyS FAMILY PRODUCT RANGE

The ATyS t has been engineered by the SOCOMEC centre of excellence in France who boasts it's very own in-house 100MVA instantaneous power test lab accredited by COFRAC and working in partnership with: KEMA, CEPEC, UL, CSA, ASTA, Lloyd's Register of Shipping, Bureau Veritas, BBJ-SEP, EZU, GOST-R... and others.

SOCOMECEC has been manufacturing power control and safety products since 1922. The first generation SOCOMEC "motorised changeover switches" were introduced in 1990 and today the ATyS brand has become trusted by major players in the power industry worldwide.





The ATyS Family includes a complete range of remotely operated transfer switch equipment (RTSE) as well as automatic fully integrated products and solutions (ATSE). Selecting the right ATyS will depend on the application as well as the nature of installation in which the ATyS will be installed.

This instruction manual includes details and instructions specific to the "ATyS t" ATSE only. For all other ATyS family of products please refer to the specific instruction manual related to that product. (Available for download on [www.socomec.com](http://www.socomec.com))

**An overview of the complete ATyS range is presented below:**

*(The encircled device is the product detailed in this instruction manual).*

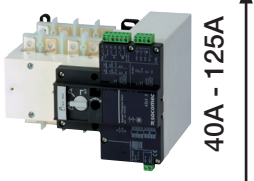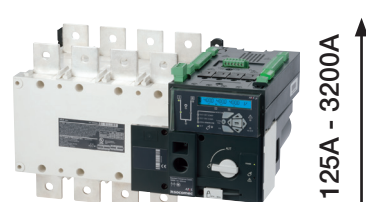**Just the right ATyS for your application...**

| ATyS: Small Footprint  |  | ATyS M: Modular Profile   |
|--|--|---|
| <p>Back to Back Configuration</p>  <p>40A - 125A ↑</p> <p><b>ATyS d S</b><br/>Small Genset with DPS</p> <p><b>ATyS S (RTSE)</b><br/>Small Gense</p> |  <p>125A - 3200A ↑</p> <p><b>ATyS p</b><br/>Power / Genset Management</p> <p><b>ATyS g</b><br/>Simple Genset Management</p> <p><b>ATyS t</b><br/>Transformer Management</p> <p><b>ATyS d</b><br/>RTSE (DPS)</p> <p><b>ATyS r</b><br/>RTSE</p> <p><sup>(1)</sup><b>ATyS</b> <br/>RTSE</p> |  <p>40A - 160A ↑</p> <p><b>ATyS p M</b><br/>Evolved Genset Management</p> <p><b>ATyS g M</b><br/>Simple Genset Management</p> <p><b>ATyS t M</b><br/>Transformer (building) Management</p> <p><b>ATyS d M</b><br/>RTSE (DPS)</p> <p>Side by Side Configuration</p> |

<sup>(1)</sup> The UL version of ATyS r is available from 100 - 400A



### 3.1. The ATyS Range Key Features

Selecting the right ATyS will depend on the application, the functionality required as well as the nature of the installation in which the ATyS will be installed. Below is an outline product selection chart listing the key features of each product to help to select the right ATyS for your needs.

|   | IEC 60947-6-1 | ATyS <i>S</i> | ATyS <i>Sd</i> | ATyS <i>r</i>  | ATyS <i>d</i> | ATyS <i>t</i> | ATyS <i>g</i> | ATyS <i>p</i> |
|---|---------------|---------------|----------------|--|---------------|---------------|---------------|---------------|
|   | UL 1008       |               |                | ATyS  |               |               |               |               |
| Motorised Changeover with control driven by dry contacts              |               | •             | •              | •  | •             | •             | •             | •             |
| Manual Emergency Operation with external handle                       |               | •             | •              | •  | •             | •             | •             | •             |
| Wide band AC control voltage supply                                   |               | •             | •              | •  | •             | •             | •             | •             |
| Wide band DC control voltage supply                                   |               | •             |                |  |               |               |               |               |
| Watchdog relay to ensure product availability                         |               |               |                | •  | •             | •             | •             | •             |
| Ratings from 40 – 125 A as indicated or 125 A - 3200 A for •          |               | 40 – 125 A    | 40 – 125 A     | UL 100 – 400 A   | •             | •             | •             | •             |
| Override controls and force switch to zero (off) position             |               |               |                | •  | •             | •             | •             | •             |
| Integrated position auxiliary contacts (I - O - II)                   |               | •             | •              | •  | •             | •             | •             | •             |
| Source availability LED display                                       |               |               |                |  | •             | •             | •             | •             |
| Remote Display module RJ45 connection for D10                         |               |               |                |  | •             | •             | •             |               |
| Integrated Dual power supply  |               |               | •              |  | •             | •             | •             | •             |
| Network - Network Applications  |               | •             | •              | •  | •             | •             |               | •             |
| Network - Genset Applications   |               | •             | •              | •  | •             |               | •             | •             |
| Genset - Genset Applications  |               | •             | •              | •  | •             |               |               |               |
| Pre-defined fixed I/O   |               |               |                | • 5/1  | • 5/1         | • 9/2         | • 11/3        | • 5/2         |
| Programmable I/O  |               |               |                |  |               |               |               | • 6/1         |
| Additional programmable I/O modules (Optional up to 4 modules)        |               |               |                |  |               |               |               | • 8/8         |
| Remotely operated Transfer Switching Equipment (RTSE Class PC)        |               | •             | •              | •  | •             |               |               |               |
| Automatic Transfer Switching Equipment (ATSE Class PC)                |               |               |                |  |               | •             | •             | •             |
| Remote + Manual Control   |               | •             | •              | •  | •             |               |               |               |
| Auto + Remote + Manual Control  |               |               |                |  |               | •             | •             |               |
| Auto + Remote + Local + Manual Control                                |               |               |                |  |               |               |               | •             |
| Auto-configuration of voltage and frequency levels                    |               |               |                |  |               | •             | •             | •             |
| Switch Position LED display   |               |               |                |  |               | •             | •             | •             |
| Security Sealing Cover  |               |               |                |  |               | •             | •             |               |
| Configuration through potentiometers and dip switches                 |               |               |                |  |               | •             | •             |               |
| Test on load functionality  |               |               |                |  |               |               | •             | •             |
| Test off load functionality   |               |               |                |  |               |               | •             | •             |
| Programmable configuration with keypad and LCD display                |               |               |                |  |               |               |               | •             |
| Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh              |               |               |                |  |               |               |               | •             |
| Communication RS485   |               |               |                |  |               |               | •             | •             |
| Ethernet + Ethernet gateway (Optional)                                |               |               |                |  |               |               |               | •             |
| Webserver Access through optional Ethernet module (Optional)          |               |               |                |  |               |               |               | •             |
| Easy Configuration software (Through Ethernet/Modbus)                 |               |               |                |  |               |               |               | •             |
| Remote Terminal Unit RJ45 connection for D20                          |               |               |                |  |               |               |               | •             |
| Data Logger for Event Recording with RTC (Through Ethernet/Modbus)    |               |               |                |  |               |               |               | •             |
| Programmable Engine Exerciser functionality (Through Ethernet/Modbus) |               |               |                |  |               |               |               | •             |
| Multi level password access   |               |               |                |  |               |               |               | •             |
| Load Shedding function  |               |               |                |  |               |               |               | •             |
| Capacity Management functionality                                     |               |               |                |  |               |               |               | •             |
| Peak shaving functionality  |               |               |                |  |               |               |               | •             |
| 4 - 20mA analogue output module (Optional)                            |               |               |                |  |               |               |               | •             |
| KWh Pulsed output module (Optional)                                   |               |               |                |  |               |               |               | •             |
| Counters KWh, permutation...  |               |               |                |  |               |               |               | •             |
| LCD display for programming, metering, timers and counters            |               |               |                |  |               |               |               | •             |
| Possibility to add optional functionality                             |               |               |                |  |               |               |               | •             |

# 4. QUICK START

## 4.1. Quick Start ATyS t Frame B3 to B5 (125 A to 630 A)



# ATyS t

125 A - 630 A

Motorised Source Changeover Switch  
Automatic Transfer Switching Equipment

### Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition
- The product reference corresponds to the order
- Contents should include:
  - Qty 1 x ATyS t
  - Qty 1 x Emergency handle and fixing clip
  - Quick Start Guide instruction sheet

### Warning

**⚠ Risk of electrocution, burns or injury to persons and / or damage to equipment.**

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorised personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).

- For 125 - 160 A (Uimp = 8 kV). Terminations must respect a minimum of 8 mm clearance from live parts to parts intended to be earthed and between poles.
- For 200 - 630 A (Uimp = 12 kV). Terminations must respect a minimum of 14 mm clearance from live parts to parts intended to be earthed and between poles.

Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.

**⚠ Risk of damaging the device** In case the product is dropped or damaged in any way it is recommended to replace the complete product.

### Accessories

- Bridging bars and connection kits.
- Control voltage transformer (400 VAC → 230 VAC).
- DC power supply (12/24 VDC → 230 VAC).
- Phase barriers.
- Terminal shrouds.
- Terminal screens.
- Auxiliary contacts (Additional).
- Padlocking in 3 positions (I - O - II).
- Lockout accessories (RONIS - EL 11 AP).
- Door escutcheon frame.
- ATyS D10 Interface (remote display).
- Voltage sensing kit.
- Sealable cover.
- RJ45 cable for ATyS D10.

For further details refer to the product instruction manual under chapter "Spares and Accessories".




[www.socomec.com](http://www.socomec.com)  
To download, brochures, catalogues and technical manuals:  
[https://www.socomec.com/range-automatic-transfer-switches\\_en.html?product=atys-t-atys-g\\_en.html](https://www.socomec.com/range-automatic-transfer-switches_en.html?product=atys-t-atys-g_en.html)

## QUICK START GUIDE EN

### Installation and Commissioning

|                                   |                            |  |  |               |                              |
|-----------------------------------|----------------------------|--|--|---------------|------------------------------|
| <b>STEP 1</b>                     | <b>STEP 2</b>              | <b>STEP 3</b>                          | <b>STEP 4</b>  | <b>STEP 5</b> | <b>STEP 6</b>                |
| Cabinet / Back Plate Installation | Power Terminal Connections | COMMAND / CONTROL terminal connections | Power SUPPLY and ATS Controller Terminal Connections | CHECK         | PROGRAMMING                  |
|                                   |                            |  |  |               | <b>STEP 7A</b>               |
|                                   |                            |  |  |               | AUT Mode (Automatic Control) |
|                                   |                            |  |  |               | <b>STEP 7B</b>               |
|                                   |                            |  |  |               | AUT Mode (Remote Control)    |
|                                   |                            |  |  |               | <b>STEP 7C</b>               |
|                                   |                            |  |  |               | Manual Mode                  |
|                                   |                            |  |  |               | <b>STEP 7D</b>               |
|                                   |                            |  |  |               | Padlocking Mode              |

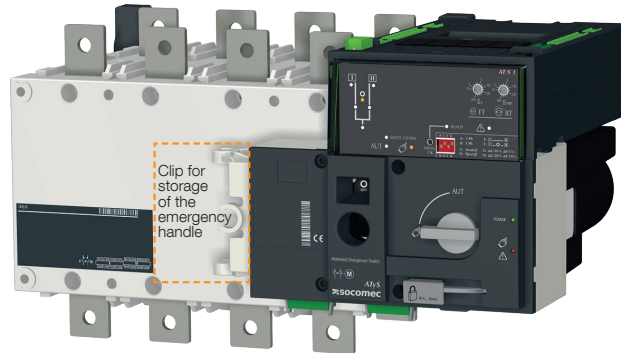

### 1 Installation

**1** Installation

①

②

M8 Type Z

M8

Max. 0.51 in. 13 mm.

**⚠ Caution:** ensure that the product is installed on a flat rigid surface.

**Recommended orientation**

OK

OK

### 3 Mounting

Removing covers

click!

click!

125 A to 400 A.

500 A, 630 A.


### 2 Power Terminal Connections

To be connected using terminal lugs, rigid or flexible busbars.

|  | FRAME B3  |           |           | FRAME B4  |           |           | FRAME B5  |           |
|--|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
|  | 125 A     | 160 A     | 200 A     | 250 A     | 315 A     | 400 A     | 500 A     | 630 A     |
| Minimum cable section Cu (mm <sup>2</sup> )            | 35        | 35        | 50        | 95        | 120       | 185       | 2x95      | 2x120     |
| Recommended Cu busbar cross-section (mm <sup>2</sup> ) | -         | -         | -         | -         | -         | -         | 2x32x5    | 2x40x5    |
| Maximum Cu cable cross-section (mm <sup>2</sup> )      | 50        | 95        | 120       | 150       | 240       | 240       | 2x185     | 2x300     |
| Maximum Cu busbar width (mm)                           | 25        | 25        | 25        | 32        | 32        | 32        | 50        | 50        |
| Type of screw  | M8        | M8        | M8        | M10       | M10       | M10       | M12       | M12       |
| Recommended tightening torque (lb.in/N.m)              | 73.46/8.3 | 73.46/8.3 | 73.46/8.3 | 177.02/20 | 177.02/20 | 177.02/20 | 354.04/40 | 354.04/40 |
| Maximum tightening torque (lb.in/N.m)                  | 115.06/13 | 115.06/13 | 115.06/13 | 230.13/26 | 230.13/26 | 230.13/26 | 398.30/45 | 398.30/45 |


### 3 CONTROL / COMMAND Terminals

Ensure that the product is in Manual Mode.

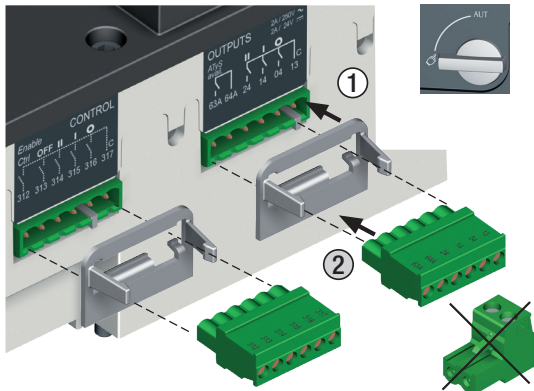

### 4 Power Supply, Sensing and Control wiring (ATS Controller)

Example: Control wiring for a 400 VAC application having a 3 phase and neutral supply.

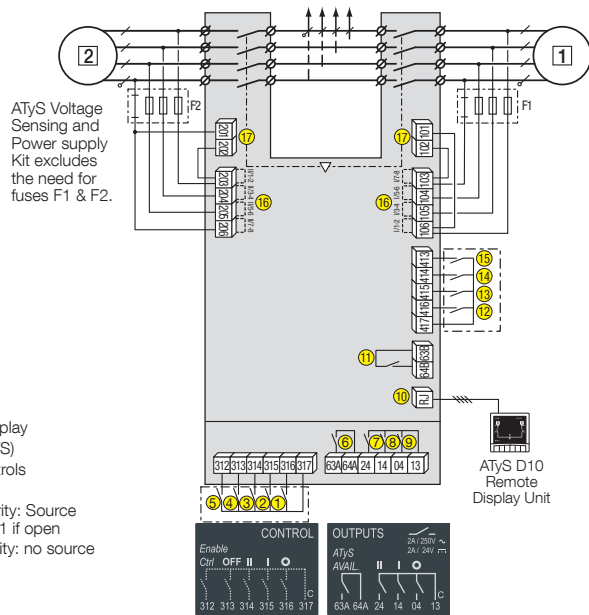

1 preferred source

2 alternate source

1. Position 0 order

2. Position I order

3. Position II order

4. Zero position priority order

5. Remote Control Enable (Priority over Auto)

6. Product Available output (Motor)

7. Position II aux contact

8. Position I aux contact

9. Position 0 aux contact

10. O/P to ATyS D10 remote display

11. Product Available output (ATS)

12. I/P Inhibition of the ATS controls

13. I/P Manual retransfer (RTC)

14. I/P to define the source priority: Source priority set to S2 if closed, S1 if open



15. I/P with/without source priority: no source priority when closed

16. Voltage Sensing Inputs

17. Power Supply Inputs


Connect the product with a cable of section of 1,5 to 2,5 mm<sup>2</sup>.

Screw M3 - Tightening torque: min.: 0.5 Nm - max.: 0.6 Nm / min.: 4.43 lbin - max.: 5.31 lbin

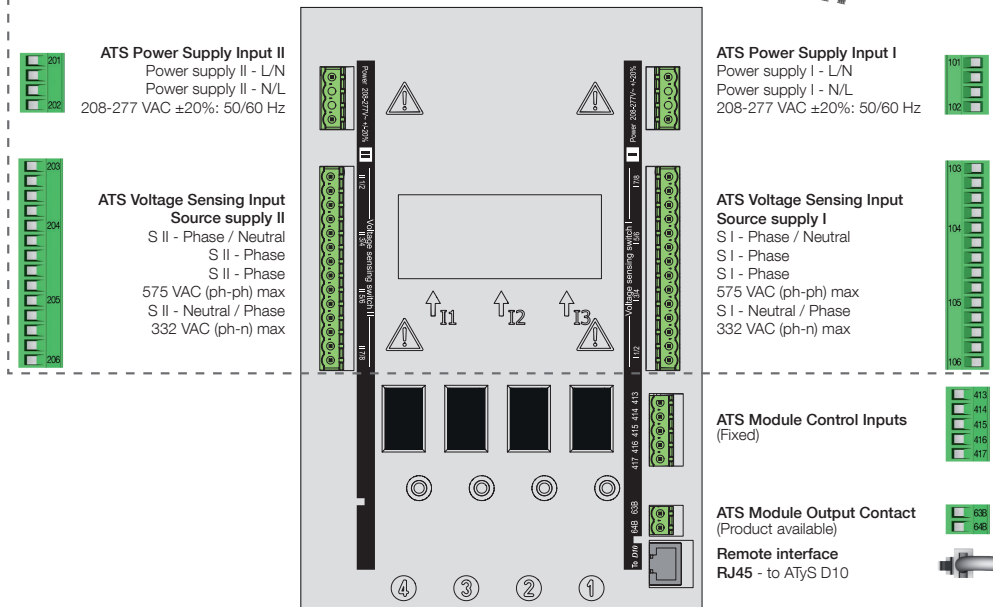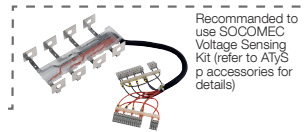

### 5 Check

Whilst in manual mode, check the wiring and if ok power up the product.

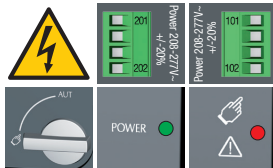


LED "Power" Green: ON  
LED Manual/Fault Red: ON

## 4.2. Quick Start ATyS t Frame B3 to B5 (125 A to 630 A) continued

### 6 Programming the ATyS t

The ATyS t is programmed after wiring verification tests through the front of the ATS Controller in 5 steps:

Note: Ensure that the ATyS t is in "Manual Mode", powered and with at least one network supply available.

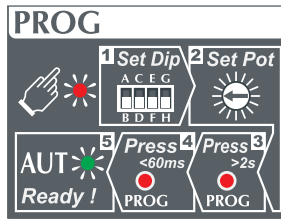

#### WARNING!

As a safety measure the READY LED will flash when any of the settings shown on the controller are different to those that are saved. To return to the steady READY LED revert to the saved setting values or save the displayed value by pressing the PROG OK button briefly. (This is intended as a visual alarm in case one has changed the configuration settings but has not yet saved the new values in the product).


For added security the ATyS t may be equipped with a sealable cover so as to limit the access to configuration settings. Refer to the product accessory section for details.



#### Dip Switch Setting Options

SET the 4 Dip Switches using a small screw driver. Possible variants vary from positions "A to H" as described in the table below. For convenience, the position functions are also described on the front of the ATS controller adjacent to the dip switches.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.

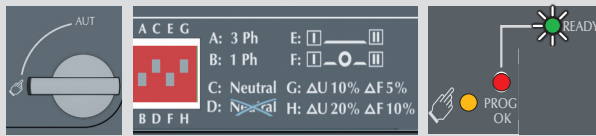

DIP SWITCH SETTING OPTIONS


|                      |   |   |
|----------------------|---|---|
| Dipswitch 1<br>A / B | A | Three Phase Network   |
|                      | B | Single Phase Network<br>(Attn : Dipswitch 2 is inactive in this position)                                   |
| Dipswitch 2<br>C / D | C | Three Phase 4 wire Network (Including Neutral)<br>(Allows to detect a loss of neutral for unbalanced loads) |
|                      | D | Three Phase 3 wire Network (Without Neutral)  |
| Dipswitch 3<br>E / F | E | Load supply down time of 0 second (ODT = 0 sec)   |
|                      | F | Load supply down time of 2 seconds (ODT = 2 sec)  |
| Dipswitch 4<br>G / H | G | Threshold Delta U : 10% / Delta F : 5%  |
|                      | H | Threshold Delta U : 20% / Delta F : 10%   |



#### Potentiometer Setting Options

SET the 2 potentiometers using a small screw driver paying attention to the arrow indicating the position. There are a total of 14 positions for which the specific settings are described in the table below.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.

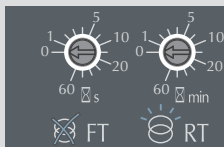

FUNCTIONAL DESCRIPTION

|                 |    |   |
|-----------------|----|---|
| Potentiometer 1 | FT | Supply Source Failure time : 0 to 60s   |
| Potentiometer 2 | RT | Supply Source Return Time : 0 to 60 min |

POSITION SETTING IDENTIFICATION

|          |   |   |   |   |   |   |   |    |    |    |    |    |    |    |
|----------|---|---|---|---|---|---|---|----|----|----|----|----|----|----|
| FT (sec) | 0 | 1 | 2 | 3 | 4 | 5 | 8 | 10 | 15 | 20 | 30 | 40 | 50 | 60 |
| RT (min) | 0 | 1 | 2 | 3 | 4 | 5 | 8 | 10 | 15 | 20 | 30 | 40 | 50 | 60 |




#### Auto Configuration of Mains Voltage and Frequency

The ATyS t includes an "Auto Configuration" feature to detect the mains voltage and frequency nominal values, phase rotation and neutral position and saves them in the ATS controller.

Note: Before configuring the nominal values ensure that the product is properly wired, verified and ready for commissioning. It is imperative that the network supply is available and that the wiring to the ATyS t voltage sensing terminals 103 - 106 and 203 - 206 has been done. It is preferable to use the ATyS sensing kit that may be provided as an accessory.

- Press and hold the Red "PROG OK" button for >2s to measure the mains voltage and frequency.

Note: The source available LED will flash while the available network is being measured. The READY LED will flash green as soon as settings are measured and until these settings have been saved by pressing the PROG OK button a second time momentarily. (Refer to STEP 4).

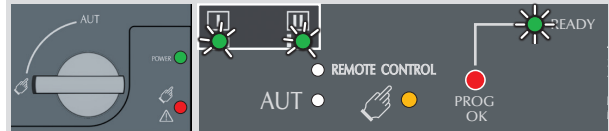


#### Saving the configured values

To SAVE the recorded setting configuration press the PROG OK button momentarily: <60ms.

Note: The flashing READY LED goes off once the values are saved in the ATS controller.


At least one of the source availability LED must be ON.

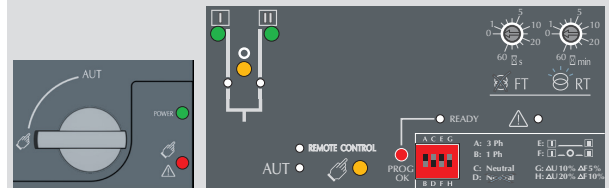

#### Putting the ATyS t into Auto Operation


After following Steps 1 to 4, and once ready to put the ATyS t into AUTO operation turn the mode selector switch to Auto.

Note: When the product is powered and properly configured, after switching the product from Manual Mode to Auto Mode the READY light should be a steady green light

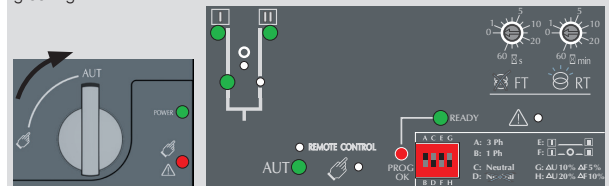

WARNING! Depending on the state of the ATyS t the ATS automation may change the switch position as soon as the mode selector is switched to AUTO. This is a normal operation.


- MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
- AUTO Mode LED indication. Green steady light when in Auto mode with no timers running. Green flashing light when in Auto with timers running in the background.
- REMOTE CONTROL Mode LED indication. Yellow steady light when in remote control mode. Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317.
- Switch 1 LED position indication. (Green when in position 1).
- Source supply I availability LED indication. (Green when supply I voltage is within the set limits).
- Zero position LED indication. (Yellow when in position 0).
- Switch 2 LED position indication. (Green when in position 2).
- Source supply II availability LED indication. (Green when supply II voltage is within the set limits).
- Sealing screw location 1 for use with sealing cover (Available as an accessory)
- Potentiometer 1: Supply FAILURE Time (FT) Adjustable from 0 to 60 seconds.
- Potentiometer 2: Supply RETURN Time (RT) Adjustable from 0 to 60 minutes.
- READY LED indication. Green steady light : Product in AUTO, Watchdog OK, Product Available to changeover. Green flashing: Settings displayed not saved or have been changed since last saved. (Press PROG OK button in manual mode to save or revert to last saved settings).
- Sealing screw location 2 for use with the sealing cover.
- FAULT LED indication. (Red steady light in case of an ATS controller internal fault).
- Configuration dip switches : (4 dip switches with 2 positions in each A to H).
- PROG OK: Configuration save push button. (ATTN: Active in Manual Mode ONLY). Press briefly to confirm and save all set configuration settings. Hold pressed for 2 seconds to set the network supply voltage and frequency by Auto Configuration. This is to be followed by pressing briefly to save the set value configured.
- Green LED Indication: Power
- Red LED Indication: Product Unavailable / Manual Mode / Fault Condition
- Auto / Manual mode selector switch (Key version available as an option)
- Emergency manual operation shaft location (Accessible only in manual mode)
- Padlocking facility (Up to 3 padlocks of dia. 4 – 8mm)

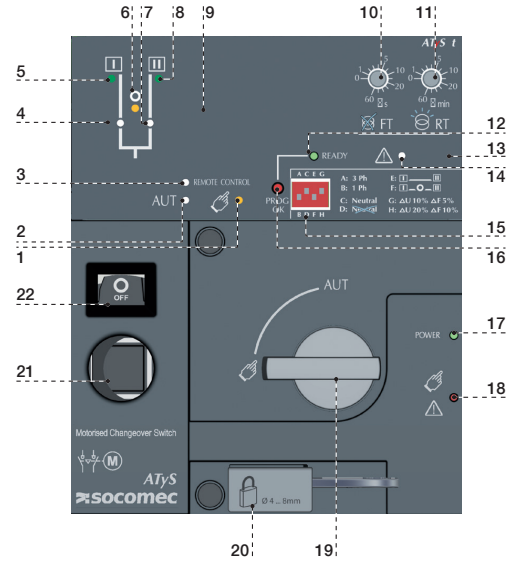


### 7A AUT Mode (Automatic Control)

Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position.

LED "Power" Green: ON  
LED Manual/Default: OFF

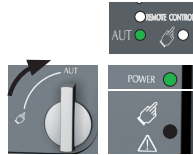



### 7B AUT Mode (Remote Control)

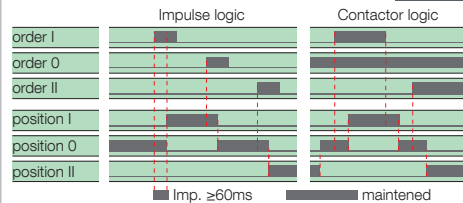


To enable control, close contact 312 with 317. For contactor logic bridge contact 316 with 317. To operate: close the contact corresponding to the desired position. To force the product to 0 position "OFF" bridge contact 313 with 317.




### 7C Manual Operation

 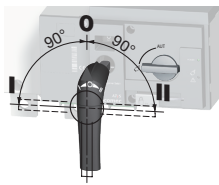

### 7D Padlocking Mode (as standard: in position 0)

 

### Dimensions in./mm.

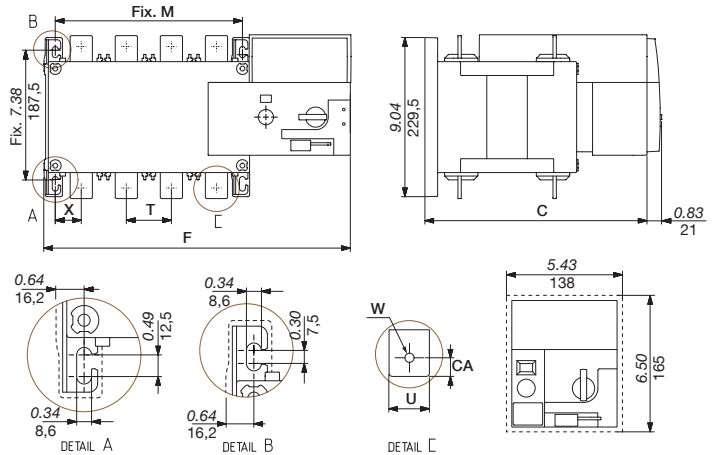

|    | 125 A |       | 160 A |     | 200 A |       | 250 A |     |       |     |
|----|-------|-------|-------|-----|-------|-------|-------|-----|-------|-----|
|    | 3 P   | 4 P   | 3 P   | 4 P | 3 P   | 4 P   | 3 P   | 4 P |       |     |
| C  | 9.61  | 244   | 9.61  | 244 | 9.61  | 244   | 9.61  | 244 | 9.61  | 244 |
| CA | 0.39  | 10    | 0.39  | 10  | 0.39  | 10    | 0.39  | 10  | 0.59  | 15  |
| F  | 11.28 | 286.5 | 12.48 | 317 | 11.28 | 286.5 | 12.48 | 317 | 12.91 | 328 |
| M  | 4.72  | 120   | 5.91  | 150 | 4.72  | 120   | 5.91  | 150 | 6.30  | 160 |
| T  | 1.42  | 36    | 1.42  | 36  | 1.42  | 36    | 1.42  | 36  | 1.97  | 50  |
| U  | 0.79  | 20    | 0.79  | 20  | 0.79  | 20    | 0.79  | 20  | 0.98  | 25  |
| W  | 0.35  | 9     | 0.35  | 9   | 0.35  | 9     | 0.35  | 9   | 0.43  | 11  |
| X  | 1.10  | 28    | 0.87  | 22  | 1.10  | 28    | 0.87  | 22  | 1.30  | 33  |

|    | 315 A |     | 400 A |     | 500 A |     | 630 A |      |       |      |
|----|-------|-----|-------|-----|-------|-----|-------|------|-------|------|
|    | 3 P   | 4 P | 3 P   | 4 P | 3 P   | 4 P | 3 P   | 4 P  |       |      |
| C  | 9.61  | 244 | 9.61  | 244 | 12.64 | 321 | 12.64 | 321  | 12.64 | 321  |
| CA | 0.59  | 15  | 0.59  | 15  | 0.59  | 15  | 0.59  | 15   | 0.79  | 20   |
| F  | 12.91 | 328 | 14.88 | 378 | 12.91 | 328 | 14.88 | 378  | 14.84 | 377  |
| M  | 6.30  | 160 | 8.27  | 210 | 6.30  | 160 | 8.27  | 210  | 10.63 | 270  |
| T  | 1.97  | 50  | 1.97  | 50  | 1.97  | 50  | 2.56  | 65   | 2.56  | 65   |
| U  | 1.38  | 35  | 1.38  | 35  | 1.38  | 35  | 1.26  | 32   | 1.26  | 32   |
| W  | 0.43  | 11  | 0.43  | 11  | 0.43  | 11  | 0.55  | 14   | 0.51  | 13   |
| X  | 1.30  | 33  | 1.30  | 33  | 1.30  | 33  | 1.67  | 42.5 | 1.48  | 37.5 |

CORPORATE HQ CONTACT: SOCOMEC SAS 1-4 RUE DE WESTHOUSE - 67235 BENFELD, FRANCE - WWW.SOCOMECS.COM



## ATyS t

800 A - 3200 A

Motorised Source Changeover Switch  
Automatic Transfer Switching Equipment

### Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition
- The product reference corresponds to the order
- Contents should include:

Qty 1 x ATyS t

Qty 1 x Emergency handle and fixing clip

Quick Start Guide instruction sheet

### Warning

- ⚠ Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorised personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).

- For 800 - 3200 A (Uimp = 12 kV). Terminations must respect a minimum of 14 mm clearance from live parts to parts intended to be earthed and between poles.

Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.

- ⚠ Risk of damaging the device In case the product is dropped or damaged in any way it is recommended to replace the complete product.

### Accessories

- Bridging bars and connection kits.
- Control voltage transformer (400 VAC → 230 VAC).
- DC power supply (12/24 VDC → 230 VAC).
- Phase barriers.
- Terminal shrouds.
- Terminal screens.
- Auxiliary contacts (Additional).
- Padlocking in 3 positions (I - O - II).
- Lockout accessories (RONIS - EL 11 AP).
- Door escutcheon frame.
- ATyS D10 Interface (remote display).
- Voltage sensing kit.
- Sealable cover.
- RJ45 cable for ATyS D10.


For further details refer to the product instruction manual under chapter "Spares and Accessories".



[www.socomec.com](http://www.socomec.com)  
To download, brochures, catalogues and technical manuals:  
[https://www.socomec.com/range-automatic-transfer-switches\\_en.html?product=/atys-t-atys-g\\_en.html](https://www.socomec.com/range-automatic-transfer-switches_en.html?product=/atys-t-atys-g_en.html)


## Installation and Commissioning

|                                   |                            |  |  |               |               |
|-----------------------------------|----------------------------|--|--|---------------|---------------|
| <b>STEP 1</b>                     | <b>STEP 2</b>              | <b>STEP 3</b>                          | <b>STEP 4</b>  | <b>STEP 5</b> | <b>STEP 6</b> |
| Cabinet / Back Plate Installation | Power Terminal Connections | COMMAND / CONTROL terminal connections | Power SUPPLY and ATS Controller Terminal Connections | CHECK         | PROGRAMMING   |

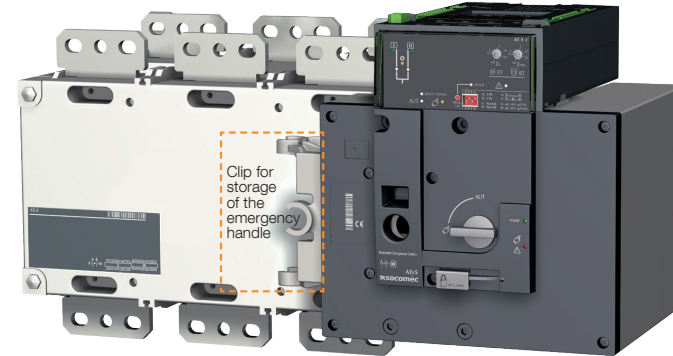


|                              |
|------------------------------|
| <b>STEP 7A</b>               |
| AUT Mode (Automatic Control) |
| <b>STEP 7B</b>               |
| AUT Mode (Remote Control)    |
| <b>STEP 7C</b>               |
| Manual Mode                  |
| <b>STEP 7D</b>               |
| Padlocking Mode              |

### 1 Installation

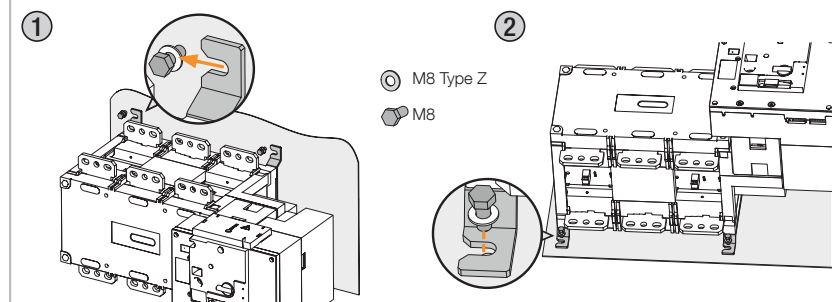

⚠ Caution: ensure that the product is installed on a flat rigid surface.

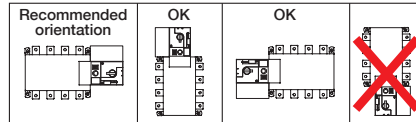


### 2 Power Terminal Connections

| To be connected using terminal lugs, rigid or flexible busbars. | FRAME B6  |           |           | FRAME B7  | FRAME B8  |           |           |
|---|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
|   | 800 A     | 1000 A    | 1250 A    | 1600 A    | 2000 A    | 2500 A    | 3200 A    |
| Minimum cable section Cu (mm <sup>2</sup> )                     | 2x185     | -         | -         | -         | -         | -         | -         |
| Recommended cable section Cu (mm <sup>2</sup> )                 | 2x50x5    | 2x63x5    | 2x63x7    | 2x100x5   | 3x100x5   | 2x100x10  | 3x100x10  |
| Maximum Cu cable cross-section (mm <sup>2</sup> )               | 4x185     | 4x185     | 4x185     | 6x185     | -         | -         | -         |
| Maximum Cu busbar width (mm)                                    | 63        | 63        | 63        | 100       | 100       | 100       | 100       |
| Type of screw   | M8        | M8        | M10       | M12       | M12       | M12       | M12       |
| Recommended tightening torque (lb.in/N.m)                       | 73.46/8.3 | 73.46/8.3 | 177.02/20 | 354.04/40 | 354.04/40 | 354.04/40 | 354.04/40 |
| Maximum tightening torque (lb.in/N.m)                           | 115.06/13 | 115.06/13 | 230.13/26 | 398.30/45 | 398.30/45 | 398.30/45 | 398.30/45 |

### 3 CONTROL / COMMAND Terminals

Ensure that the product is in Manual Mode.

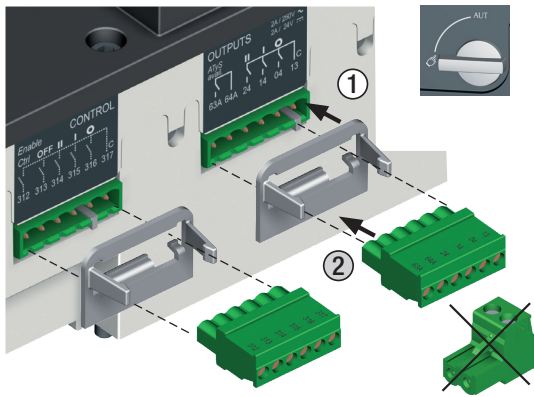

1 preferred source

2 alternate source

1. Position 0 order

2. Position I order

3. Position II order

4. Zero position priority order

5. Remote Control Enable (Priority over Auto)

6. Product Available output (Motor)

7. Position II aux contact

8. Position I aux contact

9. Position 0 aux contact

10. O/P to ATyS D10 remote display

11. Product Available output (ATS)

12. I/P Inhibition of the ATS controls

13. I/P Manual retransfer (RTC)

14. I/P to define the source priority: Source

priority set to S2 if closed, S1 if open

15. I/P with/without source priority: no source


priority when closed

16. Voltage Sensing Inputs

17. Power Supply Inputs


### 4 Power Supply, Sensing and Control wiring (ATS Controller)

Example: Control wiring for a 400 VAC application having a 3 phase and neutral supply.

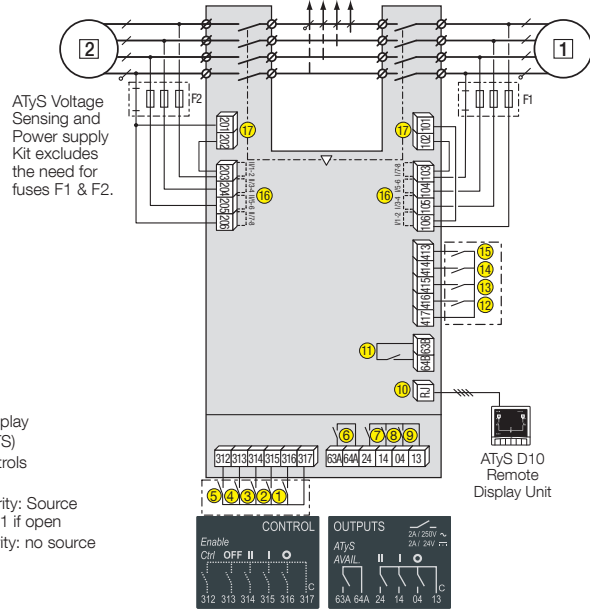


Connect the product with a cable of section of 1,5 to 2,5 mm<sup>2</sup>.

 Screw M3 - Tightening torque: min.: 0.5 Nm - max.: 0.6 Nm / min.: 4.43 lbin - max.: 5.31 lbin



Recommended to use SOCOMEC Voltage Sensing Kit (refer to ATyS p accessories for details)

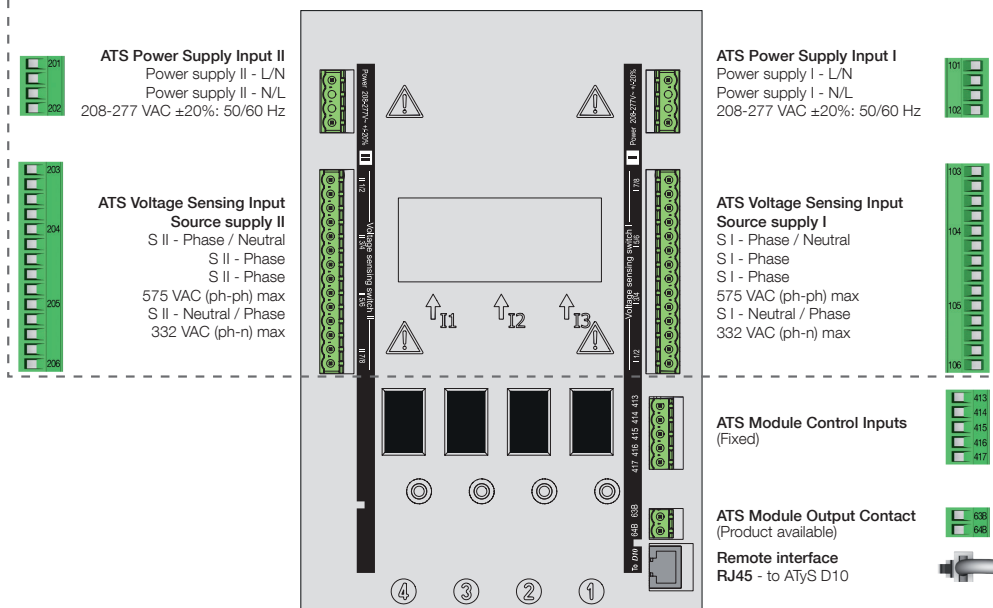

### 5 Check


Whilst in manual mode, check the wiring and if ok power up the product.



LED "Power" Green: ON  
LED Manual/Fault Red: ON

## 6 Programming the ATyS t

The ATyS t is programmed after wiring verification tests through the front of the ATS Controller in 5 steps:

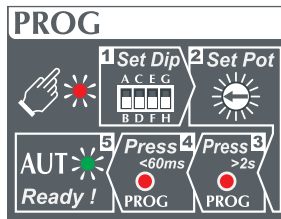

Note: Ensure that the ATyS t is in "Manual Mode", powered and with at least one network supply available.

### WARNING!

As a safety measure the READY LED will flash when any of the settings shown on the controller are different to those that are saved. To return to the steady READY LED revert to the saved setting values or save the displayed value by pressing the PROG OK button briefly. (This is intended as a visual alarm in case one has changed the configuration settings but has not yet saved the new values in the product).


For added security the ATyS t may be equipped with a sealable cover so as to limit the access to configuration settings. Refer to the product accessory section for details.



### Dip Switch Setting Options

SET the 4 Dip Switches using a small screw driver. Possible variants vary from positions "A to H" as described in the table below. For convenience, the position functions are also described on the front of the ATS controller adjacent to the dip switches.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.

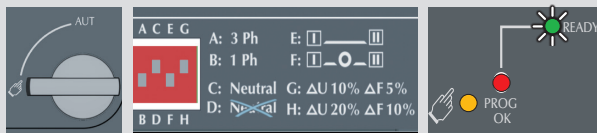

DIP SWITCH SETTING OPTIONS

| Dipswitch            | Position | Function   |
|----------------------|----------|--|
| Dipswitch 1<br>A / B | A        | Three Phase Network  |
|                      | B        | Single Phase Network (Attn : Dipswitch 2 is inactive in this position)                                   |
| Dipswitch 2<br>C / D | C        | Three Phase 4 wire Network (Including Neutral) (Allows to detect a loss of neutral for unbalanced loads) |
|                      | D        | Three Phase 3 wire Network (Without Neutral)   |
|                      | E        | Load supply down time of 0 second (ODT = 0 sec)  |
| Dipswitch 3<br>E / F | F        | Load supply down time of 2 seconds (ODT = 2 sec)   |
|                      | G        | Threshold Delta U : 10% / Delta F : 5%   |
| Dipswitch 4<br>G / H | H        | Threshold Delta U : 20% / Delta F : 10%  |



### Potentiometer Setting Options

SET the 2 potentiometers using a small screw driver paying attention to the arrow indicating the position. There are a total of 14 positions for which the specific settings are described in the table below.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.



FUNCTIONAL DESCRIPTION

| Potentiometer   | Label | Function                                |
|-----------------|-------|---|
| Potentiometer 1 | FT    | Supply Source Failure time : 0 to 60s   |
| Potentiometer 2 | RT    | Supply Source Return Time : 0 to 60 min |

POSITION SETTING IDENTIFICATION

| FT (sec) | 0 | 1 | 2 | 3 | 4 | 5 | 8 | 10 | 15 | 20 | 30 | 40 | 50 | 60 |
|----------|---|---|---|---|---|---|---|----|----|----|----|----|----|----|
| RT (min) | 0 | 1 | 2 | 3 | 4 | 5 | 8 | 10 | 15 | 20 | 30 | 40 | 50 | 60 |




### Auto Configuration of Mains Voltage and Frequency

The ATyS t includes an "Auto Configuration" feature to detect the mains voltage and frequency nominal values, phase rotation and neutral position and saves them in the ATS controller.

Note: Before configuring the nominal values ensure that the product is properly wired, verified and ready for commissioning. It is imperative that the network supply is available and that the wiring to the ATyS t voltage sensing terminals 103 – 106 and 203 – 206 has been done. It is preferable to use the ATyS sensing kit that may be provided as an accessory.

• Press and hold the Red "PROG OK" button for >2s to measure the mains voltage and frequency.

Note: The source available LED will flash while the available network is being measured. The READY LED will flash green as soon as settings are measured and until these settings have been saved by pressing the PROG OK button a second time momentarily. (Refer to STEP 4).

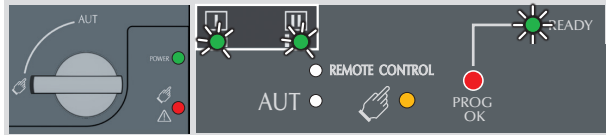


### Saving the configured values

To SAVE the recorded setting configuration press the PROG OK button momentarily: <60ms.

Note: The flashing READY LED goes off once the values are saved in the ATS controller.


At least one of the source availability LED must be ON.

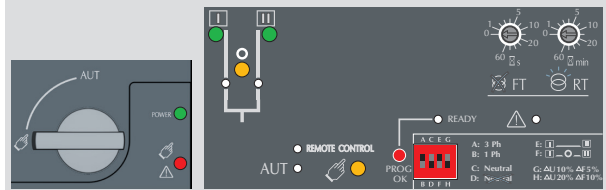

### Putting the ATyS t into Auto Operation

After following Steps 1 to 4, and once ready to put the ATyS t into AUTO operation turn the mode selector switch to Auto.

Note: When the product is powered and properly configured, after switching the product from Manual Mode to Auto Mode the READY light should be a steady green light

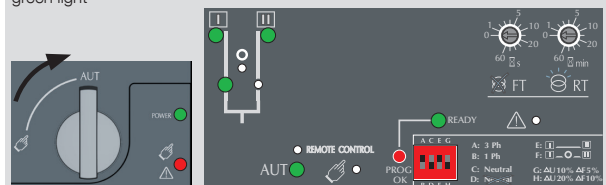


WARNING ! Depending on the state of the ATyS t the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.



- MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
- AUTO Mode LED indication. Green steady light when in Auto mode with no timers running. Green flashing light when in Auto with timers running in the background.
- REMOTE CONTROL Mode LED indication. Yellow steady light when in remote control mode. Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317.
- Switch 1 LED position indication. (Green when in position 1).
- Source supply I availability LED indication. (Green when supply I voltage is within the set limits).
- Zero position LED indication. (Yellow when in position 0).
- Switch 2 LED position indication. (Green when in position 2).
- Source supply II availability LED indication. (Green when supply II voltage is within the set limits).
- Sealing screw location 1 for use with sealing cover (Available as an accessory)
- Potentiometer 1: Supply FAILURE Time (FT) Adjustable from 0 to 60 seconds.
- Potentiometer 2: Supply RETURN Time (RT) Adjustable from 0 to 60 minutes.
- READY LED indication. Green steady light : Product in AUTO, Watchdog OK, Product Available to changeover. Green flashing: Settings displayed not saved or have been changed since last saved. (Press PROG OK button in manual mode to save or revert to last saved settings).
- Sealing screw location 2 for use with the sealing cover.
- FAULT LED indication. (Red steady light in case of an ATS controller internal fault).
- Configuration dip switches : (4 dip switches with 2 positions in each A to H).
- PROG OK: Configuration save


- push button. (ATTN: Active in Manual Mode ONLY). Press briefly to confirm and save all set configuration settings. Hold pressed for 2 seconds to set the network supply voltage and frequency by Auto Configuration. This is to be followed by pressing briefly to save the set value configured.
- Green LED Indication: Power Unavailable / Manual Mode / Fault Condition
  - Auto / Manual mode selector switch (Key version available as an option)
  - Padlocking facility (Up to 3 padlocks of dia. 4 – 8mm)
  - Emergency manual operation shaft location (Accessible only in manual mode)
  - Switch position indication window: I (On switch I) O (Off) II (On switch II).

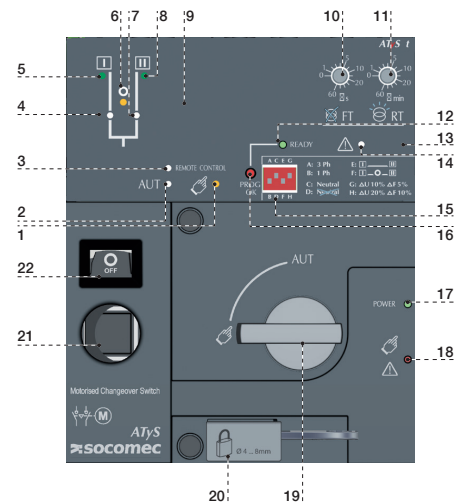


### 7A AUT Mode (Automatic Control)

Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position.


LED "Power" Green: ON  
LED Manual/Default: OFF

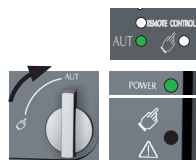


### 7C Manual Operation

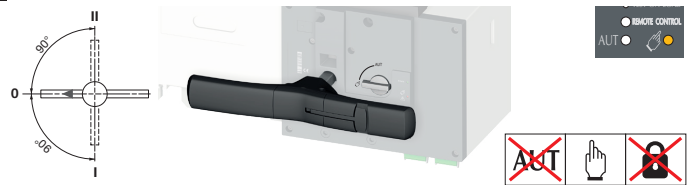

### 7B AUT Mode (Remote Control)

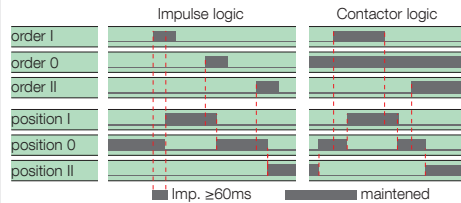

 
To enable control, close contact 312 with 317. For contactor logic bridge contact 316 with 317. To operate: close the contact corresponding to the desired position. To force the product to 0 position "OFF" bridge contact 313 with 317.



### 7D Padlocking Mode (as standard: in position 0)



### Dimensions in./mm.

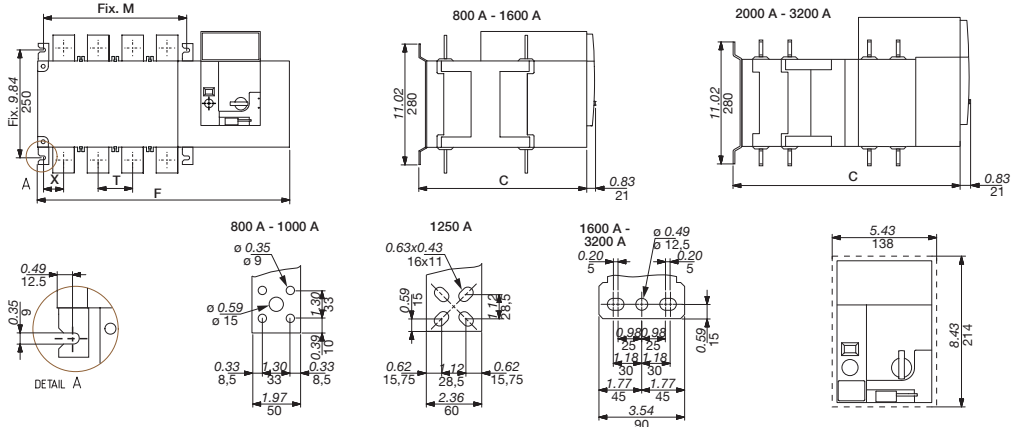


|   | 800 A |      | 1000 A |      | 1250 A |      | 1600 A |      | 2000 A |     | 2500 A |     | 3200 A |      |
|---|-------|------|--------|------|--------|------|--------|------|--------|-----|--------|-----|--------|------|
|   | 3 P   | 4 P  | 3 P    | 4 P  | 3 P    | 4 P  | 3 P    | 4 P  | 3 P    | 4 P | 3 P    | 4 P | 3 P    | 4 P  |
|   | in    | mm   | in     | mm   | in     | mm   | in     | mm   | in     | mm  | in     | mm  | in     | mm   |
| C | 15.39 | 391  | 15.39  | 391  | 15.39  | 391  | 15.39  | 391  | 15.39  | 391 | 15.39  | 391 | 15.39  | 391  |
| F | 19.84 | 504  | 22.99  | 584  | 19.84  | 504  | 22.99  | 584  | 23.46  | 596 | 28.19  | 716 | 23.46  | 596  |
| M | 10.04 | 255  | 13.19  | 335  | 10.04  | 255  | 13.19  | 335  | 13.66  | 347 | 18.39  | 467 | 13.66  | 347  |
| T | 3.15  | 80   | 3.15   | 80   | 3.15   | 80   | 3.15   | 80   | 4.72   | 120 | 4.72   | 120 | 4.72   | 120  |
| X | 1.87  | 47.5 | 1.87   | 47.5 | 1.87   | 47.5 | 1.87   | 47.5 | 2.09   | 53  | 2.09   | 53  | 2.11   | 53.5 |

CORPORATE HQ CONTACT: SOCOMEC SAS 1-4 RUE DE WESTHOUSE - 67235 BENFELD, FRANCE - WWW.SOCOMECS.COM


# 5. GENERAL OVERVIEW

## 5.1. Product introduction

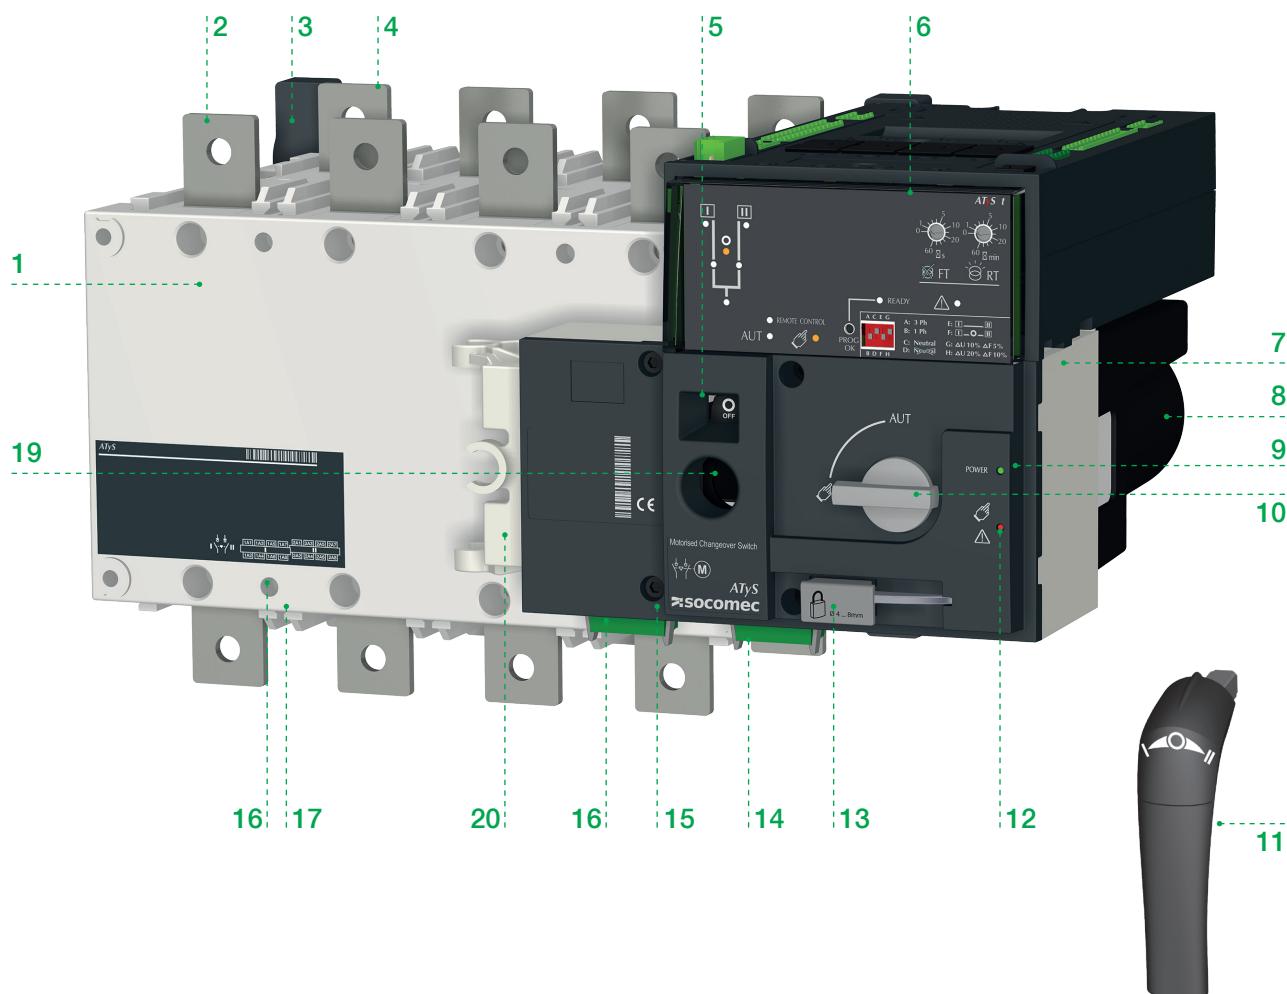


1. Power Section: Changeover switch assembly with inherent mechanical interlock
2. Front: Switch number 1 terminals (3 or 4 pole)
3. Back-plate mounting ATyS fixing brackets
4. Back: Switch number 2 terminals (3 or 4 pole)
5. Switch position indication window: I (On) – O (Off) – II (On)
6. ATS control module with integrated dual power supply
7. Motorized Control Unit
8. Motor housing
9. Green LED Indication: Power
10. Auto / Manual mode selector switch
11. Emergency manual operation “Direct Handle”
12. Red LED Indication: Product Unavailable / Manual Mode / Fault Condition
13. Padlocking facility (Up to 3 padlocks of dia. 4 – 8mm)
14. Output contacts x 4 (Position indication I-O-II and product availability outputs)
15. Facility for locking all controls in the zero position using a RONIS EL11AP Lock
16. Input contacts x 5:
  - Position order I-O-II
  - Remote control enable
  - Override controls and force to Off position
17. Sliders for Terminal Shields
18. Fixing holes for terminal Shields
19. Emergency manual operation shaft location (Accessible only in manual mode)
20. Clip for emergency handle storage

## 5.2. Product identification

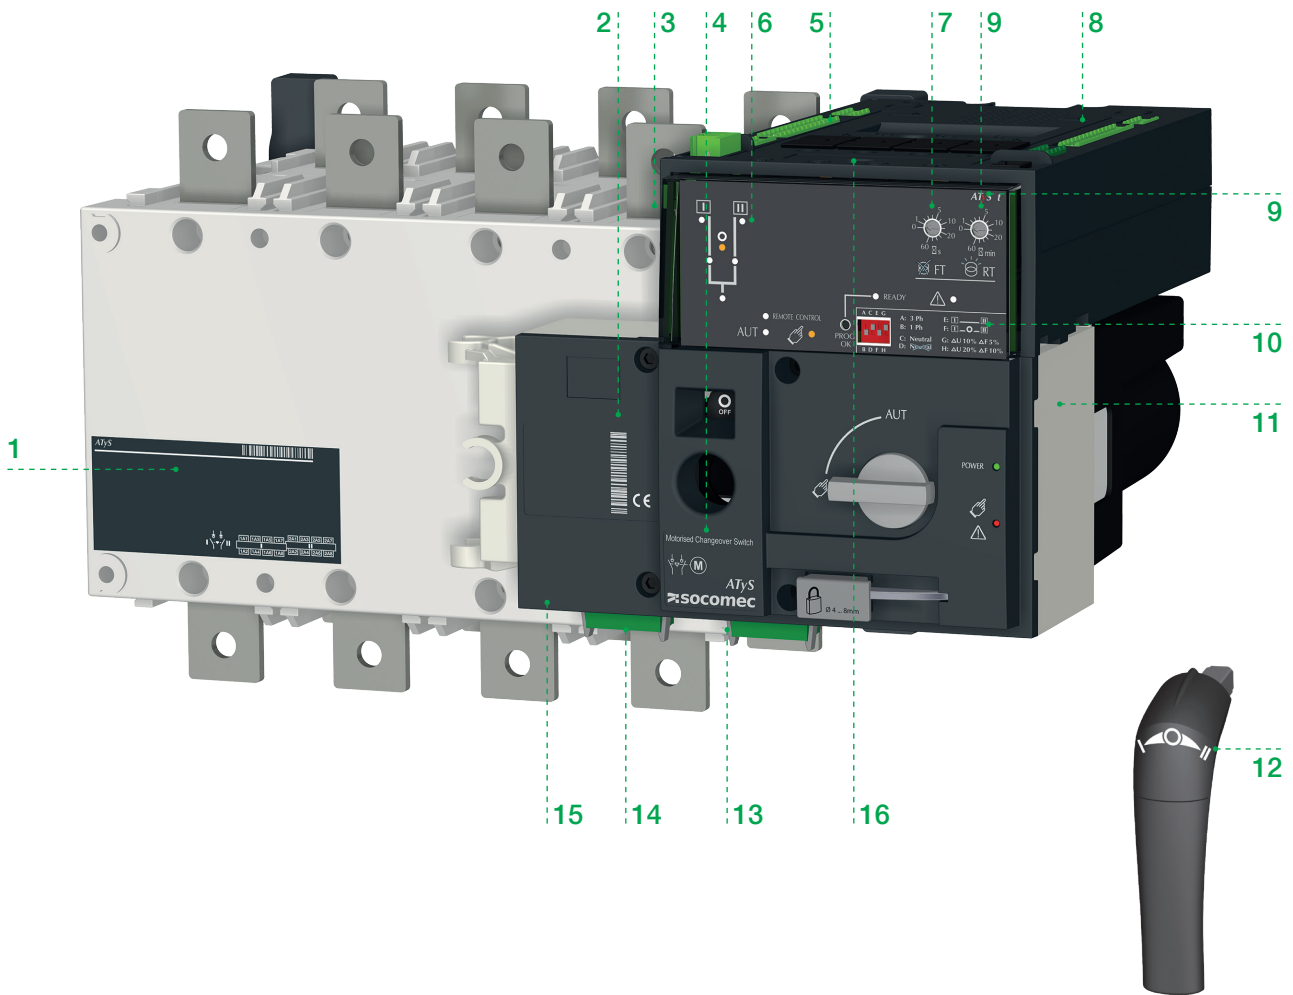

1. Main changeover switch identification label:  
Electrical characteristics  
Applicable standards and  
Terminal incoming and outgoing wiring details.
2. Complete ATyS t product serial number, barcode and CE marking.
3. Switch 1 (Front) and Switch 2 (back) identification labels
4. ATyS t product current rating and reference number label
5. ATS controller contact identification labels
6. Network status and switch position pictogram with LED's
7. Mains failure timer setting dial. (0-60s)
8. ATyS product type identification. (ATyS t, ATyS g or ATyS p)
9. Mains return timer setting dial. (0-60mins)
10. Dip switch configuration identification.
11. Motor barcode and serial number
12. Emergency manual operation direction of rotation indication
13. Output contacts identification label.
14. Input contacts identification label.
15. Guide to ATyS t programming steps.
16. Reset button (Push and hold for at least 1s to restart the ATS controller).

## 5.3. ATS control module interface

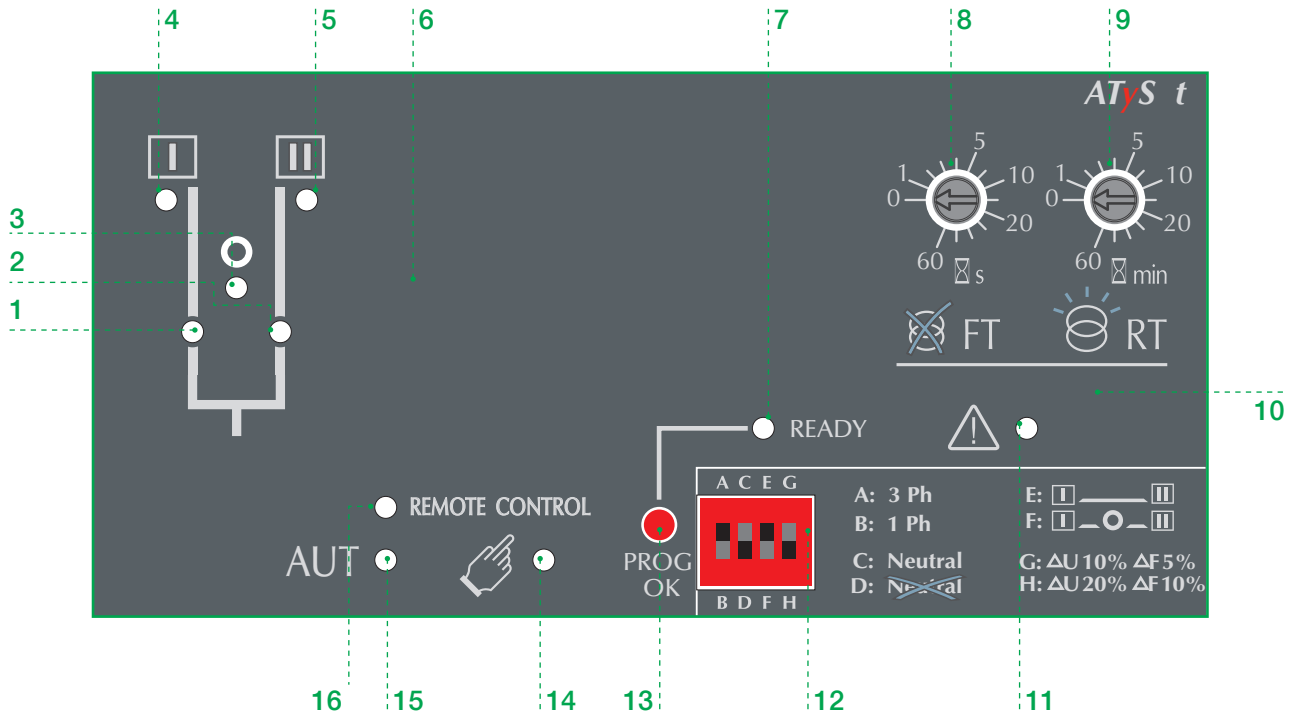

1. Switch 1 LED position indication (Green when in position I)
2. Switch 2 LED position indication (Green when in position II)
3. Zero position LED indication (Yellow when in position 0)
4. Source supply I availability LED indication (Green when supply I voltage is within the set limits)
5. Source supply II availability LED indication (Green when supply II voltage is within the set limits)
6. Sealing screw location 1 for use with sealing cover (Available as an accessory)
7. READY LED indication  
*Green steady light : Product in AUTO, Watchdog OK, Product Available to changeover.  
 Green flashing : Settings displayed not saved or have been changed since last saved.  
 (Press PROG OK button in manual mode to save or revert to last saved settings).*
8. FAILURE Time (FT) Potentiometer to set the supply adjustable from 0 to 60s
9. RETURN Time (RT) Potentiometer to set the supply adjustable from 0 to 60min
10. Sealing screw location 2 for use with the sealing cover.
11. FAULT LED indication.  
*Red steady light in case of an ATS controller internal fault and blinking in case of an external fault  
 (rotation incorrect / neutral position incorrect)  
 Switch the product from Auto to Manual and back to Auto to reset a fault condition.*
12. Configuration dip switches  
*4 dip switches with 2 positions in each*
13. PROG OK: Configuration save push button.  
*ATTN: Active in Manual Mode ONLY  
 Press briefly to confirm and save all set configuration settings.  
 Hold pressed for 2 seconds to set the network supply voltage and frequency by Auto Configuration.  
 This is to be followed by pressing briefly to save the set value configured (see «8.3. Programming», page 56).*
14. MANUAL Mode LED indication  
*Yellow steady light when in Manual Mode*
15. AUTO Mode LED indication  
*Green steady light when in Auto mode with no timers running.  
 Green flashing light when in Auto with timers running in the background.*
16. REMOTE CONTROL Mode LED indication.  
*Yellow steady light when in remote control mode.  
 Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317.*

## 5.4. Environmental

The ATyS t product meets the following environmental requirements:

### 5.4.1. IP Rating



- IP2X against direct contact for the ATyS t motorization control unit.
- IP2X against direct contact for the power section with the connections in place and when including suitable, correctly installed incoming and outgoing terminal shields.
- IP 0 for the bare power section without terminal shields in place.

### 5.4.2. Operating Conditions

#### 5.4.2.1. Temperature



- From -20 to +40°C without derating
- From -20 to +70°C when applying a Kt derating correction factor

| Kt: Correction Factor | Temperature     |
|-----------------------|-----------------|
| 0.9                   | 40 °C ... 50 °C |
| 0.8                   | 50 °C ... 60 °C |
| 0.7                   | 60 °C ... 70 °C |

\* Simplified derating method:  $I_{thu} \leq I_{th} \times K_t$

\* A more precise calculation may be done for specific applications. Should this be required please contact SOCOMEC.

#### 5.4.2.2. Hygrometry



- 80% humidity without condensation at 55°C
- 95% humidity without condensation at 40°C

#### 5.4.2.3. Altitude



- Up to 2000m in altitude without derating
- For higher altitude the Ka correction factors below apply

| Ka: Correction Factor | 2000 m < A ≤ 3000 m | 3000 m < A ≤ 4000 m |
|-----------------------|---------------------|---------------------|
| Ue                    | 0.95                | 0.8                 |
| Ie                    | 0.85                | 0.85                |

### 5.4.3. Storage Conditions

#### 5.4.3.1. Temperature



- From -40 to +70°C



### 5.4.3.2. Storage duration period

- Maximum storage up to a period of 12 months
- (Recommendation: To be stored in dry, non corrosive and non saline atmospheric conditions)

### 5.4.3.3. Storage position



≤ 630 A: a maximum of 3 boxes may be stocked vertically  
 ≥ 800 A: a maximum of 1 box may be stocked vertically

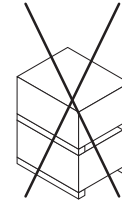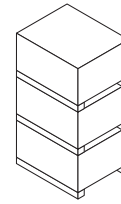

### 5.4.4. Volume and shipping weights by reference ATyS t

| Frame Size | Rating | N° of Poles | Reference Number | Weight (kg) |       | Volume (cm) inc Packing |
|------------|--------|-------------|------------------|-------------|-------|-------------------------|
|            |        |             |                  | Net         | Gross |                         |
| B3         | 125 A  | 3           | 9543 <b>3012</b> | 7,1         | 10,4  | 585x385x310             |
|            |        | 4           | 9543 <b>4012</b> | 8,3         | 11,6  | 585x385x310             |
|            | 160 A  | 3           | 9543 <b>3016</b> | 7,1         | 10,4  | 585x385x310             |
|            |        | 4           | 9543 <b>4016</b> | 8,3         | 11,6  | 585x385x310             |
|            | 200 A  | 3           | 9543 <b>3020</b> | 7,1         | 10,4  | 585x385x310             |
|            |        | 4           | 9543 <b>4020</b> | 8,3         | 11,6  | 585x385x310             |
| B4         | 250 A  | 3           | 9543 <b>3025</b> | 8,0         | 11,3  | 585x385x310             |
|            |        | 4           | 9543 <b>4025</b> | 8,8         | 12,1  | 585x385x310             |
|            | 315 A  | 3           | 9543 <b>3031</b> | 8,1         | 11,4  | 585x385x310             |
|            |        | 4           | 9543 <b>4031</b> | 9,2         | 12,5  | 585x385x310             |
|            | 400 A  | 3           | 9543 <b>3040</b> | 8,1         | 11,4  | 585x385x310             |
|            |        | 4           | 9543 <b>4040</b> | 9,2         | 12,5  | 585x385x310             |
| B5         | 500 A  | 3           | 9543 <b>3050</b> | 12,8        | 16,1  | 585x385x385             |
|            |        | 4           | 9543 <b>4050</b> | 14,7        | 18,0  | 585x385x385             |
|            | 630 A  | 3           | 9543 <b>3063</b> | 13,3        | 16,6  | 585x385x385             |
|            |        | 4           | 9543 <b>4063</b> | 15,4        | 18,7  | 585x385x385             |
| B6         | 800 A  | 3           | 9543 <b>3080</b> | 29,0        | 45,0  | 730x800x600             |
|            |        | 4           | 9543 <b>4080</b> | 33,3        | 49,3  | 730x800x600             |
|            | 1000 A | 3           | 9543 <b>3100</b> | 29,5        | 45,5  | 730x800x600             |
|            |        | 4           | 9543 <b>4100</b> | 34,0        | 50,0  | 730x800x600             |
|            | 1250 A | 3           | 9543 <b>3120</b> | 30,0        | 46,0  | 730x800x600             |
|            |        | 4           | 9543 <b>4120</b> | 34,7        | 50,7  | 730x800x600             |
| B7         | 1600 A | 3           | 9543 <b>3160</b> | 34,2        | 50,2  | 730x800x600             |
|            |        | 4           | 9543 <b>4160</b> | 40,5        | 56,5  | 730x800x600             |
| B8         | 2000 A | 3           | 9543 <b>3200</b> | 51,8        | 67,8  | 730x800x600             |
|            |        | 4           | 9543 <b>4200</b> | 62,7        | 78,7  | 730x800x600             |
|            | 2500 A | 3           | 9543 <b>3250</b> | 51,8        | 67,8  | 730x800x600             |
|            |        | 4           | 9543 <b>4250</b> | 62,7        | 78,7  | 730x800x600             |
|            | 3200 A | 3           | 9543 <b>3320</b> | 62,1        | 78,1  | 730x800x600             |
|            |        | 4           | 9543 <b>4320</b> | 76,4        | 92,4  | 730x800x600             |

### 5.4.5. CE marking

The ATyS t complies with the European directive for:

- The Electromagnetic compatibility no. 2004/108/CE dated 15th of December 2004.
- Low voltage directive no. 2006/95/CE dated 12th of December 2006.



### 5.4.6. Lead free process

- The ATyS t complies with the European directive for RoHS.



### 5.4.7. WEEE

The ATyS t is built in accordance with 2002/96/CE directive:



### 5.4.8. EMC standard

The ATyS t is designed and built in accordance with IEC 60947-1 standards (Products intended to be installed in an «Industrial, Commercial and/or Residential Environment» therefore respecting both Class A as well as Class B EMC requirements).

| Description           | Std (IEC) | Requirement (criteria)           |
|-----------------------|-----------|----------------------------------|
| Conducted             | CISPR 11  | Class B                          |
| Radiated              | CISPR 11  | Class B                          |
| ESD contact           | 61000-4-2 | 4KV (B)                          |
| ESD air               | 61000-4-2 | 8KV (B)                          |
| Electromagnetic field | 61000-4-3 | 10V/m (A)                        |
| RF Conducted          | 61000-4-6 | 10V (A)                          |
| Burst                 | 61000-4-4 | 2KV (B) power<br>1KV (B) control |
| Surge Common          | 61000-4-5 | 2KV (B)                          |
| Surge differential    | 61000-4-5 | 1KV (B)                          |

## 5.5. ATyS t ACCESSORIES AVAILABLE

### BRIDGING BARS

To connect switch I & II load terminals together.

### TERMINAL SHROUDS (125 TO 630 A)

Incoming and outgoing protection against direct contact with the connection terminals or parts. Cannot be mounted in the rear position at the same time as the voltage sensing and power outlet kit or the bridging bars.

Can be mounted top or bottom, in front or in rear position.

### TERMINAL SCREENS

Incoming and outgoing protection against direct contact with the connection terminals or parts.

### DOOR ESCUTCHEON PLATE

An accessory to be fixed onto a cabinet door to frame the controller part of flush mounted ATyS p transfer switches.

### DC POWER SUPPLY (DC -> AC)

Allows a standard 230Vac ATyS t to be supplied through a 12/24/48Vdc Aux Power supply.

### SUPPLEMENTARY AUXILIARY CONTACT (AC)

Pre-breaking and signaling of positions I and II: 1 additional auxiliary contact NO / NC auxiliary contact in each position. Included as standard for ratings from 2000 to 3200A. For Low level AC: please consult SOCOMEC.

### KEY LOCK AUTO / MANUAL SELECTOR SWITCH

The ATyS t mode selector switch is delivered with a rotary handle as standard. This can be replaced with a key lock.

### RONIS KEY PADLOCKING ACCESSORIES

Locking of the electrical and manual operation by means of a RONIS EL11AP lock. Possibility of locking in all positions, if the "Padlocking in the 3 positions" option is ordered.

Not compatible with flush mounting.

### PADLOCKING IN 3 POSITIONS

Allows locking of the operation in the 3 positions I, 0 and II. (Factory fitted accessory)

### CONTROL VOLTAGE TRANSFORMER

Allows a standard 230 V AC device to be supplied with 400 VAC.

### REMOTE INTERFACES D10

Remote Display: Allows source supply state and switch positions to be displayed remotely. (LED display)

Typically door mounted or  $\leq 3\text{m}$  away from the ATyS.

### COMMUNICATION CABLE

RJ 45 communication cable (3m long) for use with the D10 remote display/controller or Ethernet modules.

### Others:

Refer to the end of this instruction manual or the latest SOCOMEC product catalogue.

(Downloadable from [www.socomec.com](http://www.socomec.com))






# 6. INSTALLATION

## 6.1. Product dimensions

### 6.1.1. Dimensions: Frame B3 to B5 (125 A to 630 A)

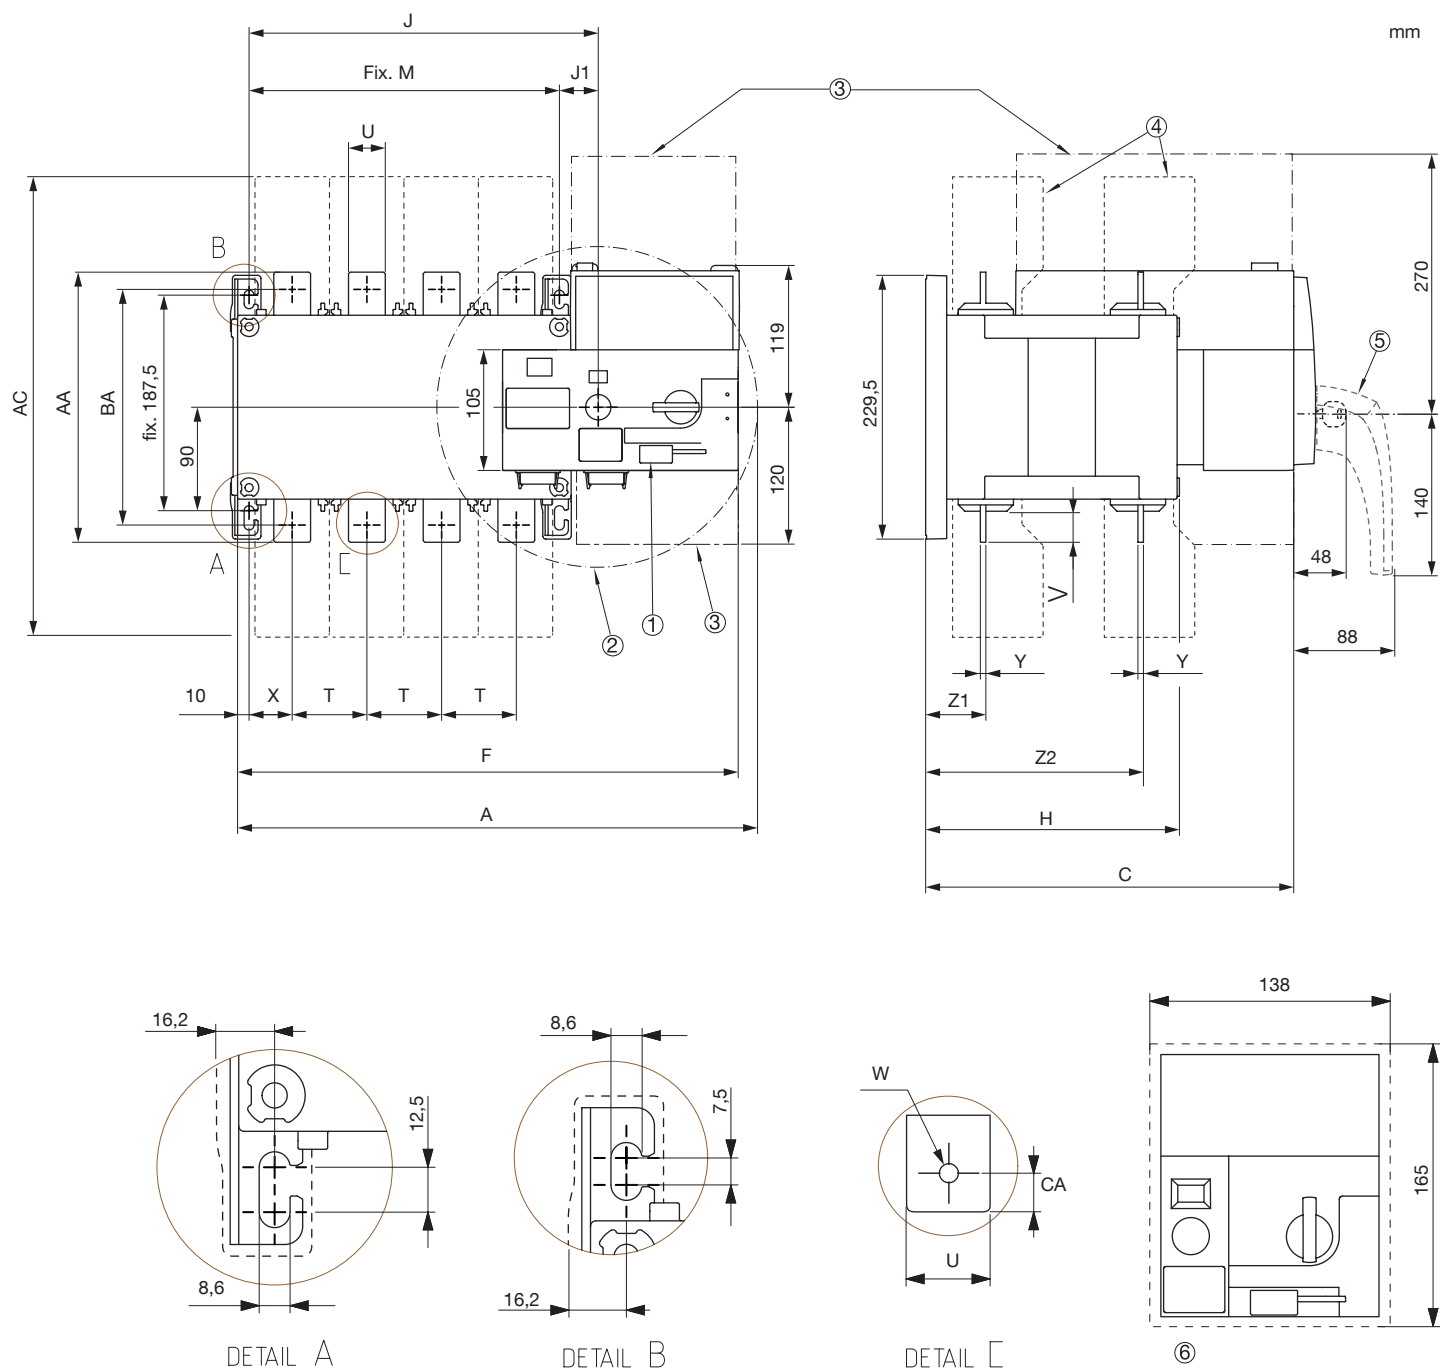

1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 – 8mm
2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°
3. Connection and disconnection area
4. Phase Barriers
5. Emergency removable handle
6. Flush mounting cutout dimensions for front door




**CAUTION !** To consider the space required for manual operation and wiring (when using the ATyS t emergency handle: note 2).




|           | 125 A |     | 160 A |     | 200 A |     | 250 A |       | 315 A |       | 400 A |       | 500 A |      | 630 A |      |
|-----------|-------|-----|-------|-----|-------|-----|-------|-------|-------|-------|-------|-------|-------|------|-------|------|
|           | 3 P   | 4 P | 3 P   | 4 P | 3 P   | 4 P | 3 P   | 4 P   | 3P    | 4P    | 3P    | 4P    | 3P    | 4P   | 3P    | 4P   |
| <b>A</b>  | 304   | 334 | 304   | 334 | 304   | 334 | 345   | 395   | 345   | 395   | 345   | 395   | 394   | 454  | 394   | 454  |
| <b>AA</b> | 135   | 135 | 135   | 135 | 135   | 135 | 160   | 160   | 170   | 170   | 170   | 170   | 260   | 260  | 260   | 260  |
| <b>AC</b> | 233   | 233 | 233   | 233 | 233   | 233 | 288   | 288   | 288   | 288   | 288   | 288   | 402   | 402  | 402   | 402  |
| <b>BA</b> | 115   | 115 | 115   | 115 | 115   | 115 | 130   | 130   | 140   | 140   | 140   | 140   | 220   | 220  | 220   | 220  |
| <b>C</b>  | 244   | 244 | 244   | 244 | 244   | 244 | 244   | 244   | 244   | 244   | 244   | 244   | 321   | 321  | 321   | 321  |
| <b>CA</b> | 10    | 10  | 10    | 10  | 10    | 10  | 15    | 15    | 15    | 15    | 15    | 15    | 15    | 15   | 20    | 20   |
| <b>F</b>  | 286,5 | 317 | 286,5 | 317 | 286,5 | 317 | 328   | 378   | 328   | 378   | 328   | 378   | 377   | 437  | 377   | 437  |
| <b>H</b>  | 151   | 151 | 151   | 151 | 151   | 151 | 152   | 152   | 152   | 152   | 152   | 152   | 221   | 221  | 221   | 221  |
| <b>J</b>  | 154   | 184 | 154   | 184 | 154   | 184 | 195   | 245   | 195   | 245   | 195   | 245   | 244   | 304  | 244   | 304  |
| <b>J1</b> | 34    | 34  | 34    | 34  | 34    | 34  | 35    | 35    | 35    | 35    | 35    | 35    | 34    | 34   | 34    | 34   |
| <b>M</b>  | 120   | 150 | 120   | 150 | 120   | 150 | 160   | 210   | 160   | 210   | 160   | 210   | 210   | 270  | 210   | 270  |
| <b>T</b>  | 36    | 36  | 36    | 36  | 36    | 36  | 50    | 50    | 50    | 50    | 50    | 50    | 65    | 65   | 65    | 65   |
| <b>U</b>  | 20    | 20  | 20    | 20  | 20    | 20  | 25    | 25    | 35    | 35    | 35    | 35    | 32    | 32   | 45    | 45   |
| <b>V</b>  | 25    | 25  | 25    | 25  | 25    | 25  | 30    | 30    | 35    | 35    | 35    | 35    | 50    | 50   | 50    | 50   |
| <b>W</b>  | 9     | 9   | 9     | 9   | 9     | 9   | 11    | 11    | 11    | 11    | 11    | 11    | 14    | 14   | 13    | 13   |
| <b>X</b>  | 28    | 22  | 28    | 22  | 28    | 22  | 33    | 33    | 33    | 33    | 33    | 33    | 42,5  | 37,5 | 42,5  | 37,5 |
| <b>Y</b>  | 3.5   | 3.5 | 3.5   | 3.5 | 3.5   | 3.5 | 3.5   | 3.5   | 3.5   | 3.5   | 3.5   | 3.5   | 5     | 5    | 5     | 5    |
| <b>Z1</b> | 38    | 38  | 38    | 38  | 38    | 38  | 39.5  | 39.5  | 39.5  | 39.5  | 39.5  | 39.5  | 53    | 53   | 53    | 53   |
| <b>Z2</b> | 134   | 134 | 134   | 134 | 134   | 134 | 133.5 | 133.5 | 133.5 | 133.5 | 133.5 | 133.5 | 190   | 190  | 190   | 190  |



### 6.1.3. Dimensions: Frame B8 (2000 A to 3200 A)

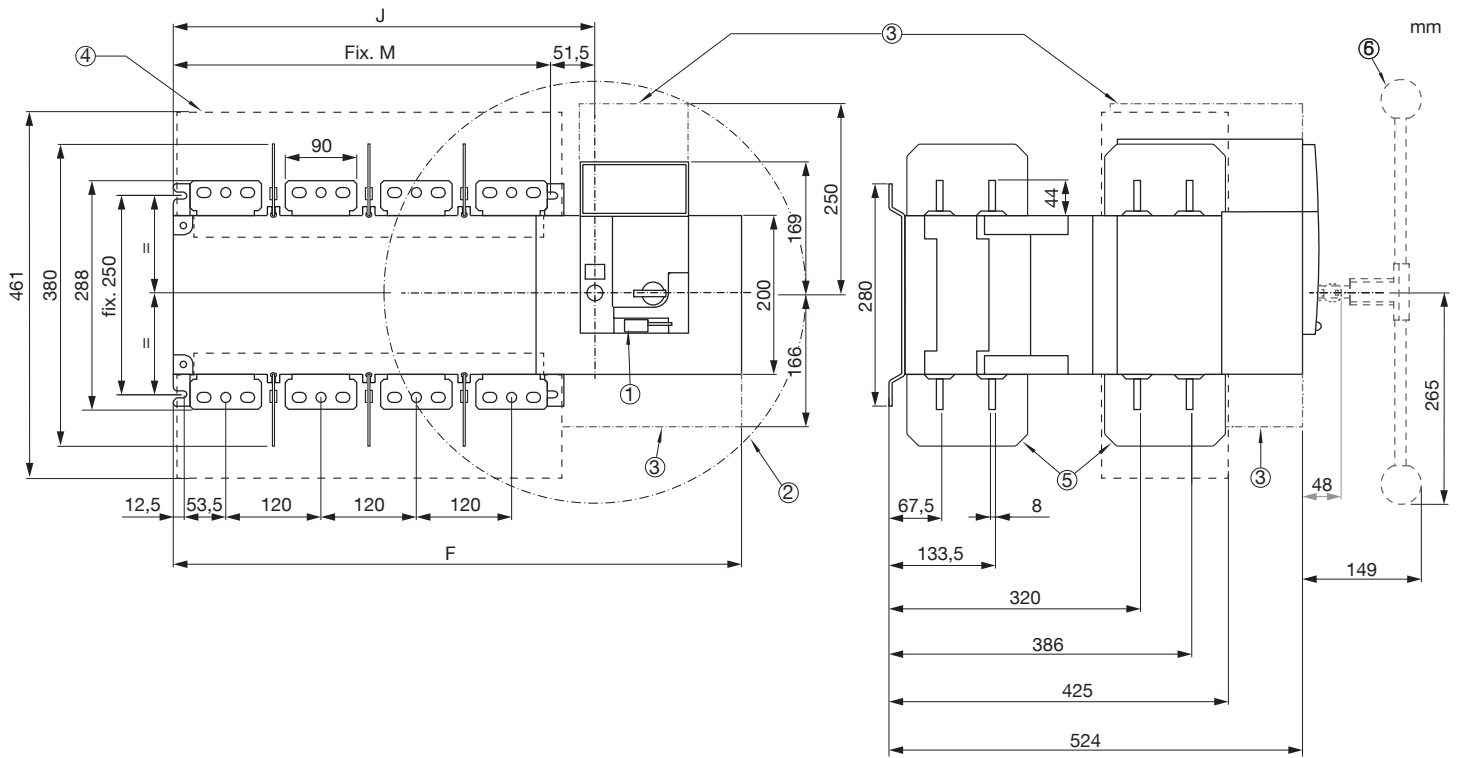

2000 A - 3200 A

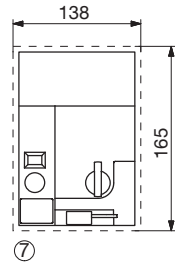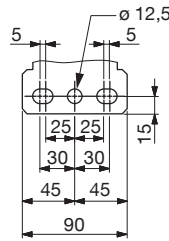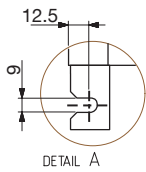





1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 – 8mm
2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°
3. Connection and disconnection area
4. Terminal screens
5. Phase Barriers
6. Emergency removable handle
7. Flush mounting cutout dimensions for front door

|          | 2000 A |       | 3200 A |       |
|----------|--------|-------|--------|-------|
|          | 3P     | 4P    | 3P     | 4P    |
| <b>F</b> | 596    | 716   | 596    | 716   |
| <b>J</b> | 398,5  | 518,5 | 398,5  | 518,5 |
| <b>M</b> | 347    | 467   | 347    | 467   |



**CAUTION !** To consider the space required for manual operation and wiring (when using the ATyS t emergency handle: note 2).

## 6.2. Mounting orientation
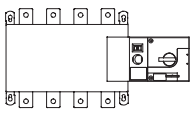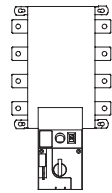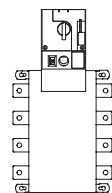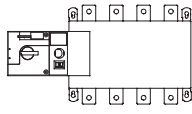
|               |   |   |  |   |
|---------------|---|---|--|---|
|               |  |  |  |  |
| 125A to 630A  | Recommended   | OK  | Not Allowed  | OK  |
| 800A to 3200A | Recommended   | Not Allowed   | OK   | OK  |




**CAUTION !** Always install the product on a flat and rigid surface.

## 6.3. Assembly of customer mounted accessories





**DANGER !** Never handle any customer mounted accessories while there may be the risk of voltage being or becoming present.

### 6.3.1. Clip for emergency handle storage

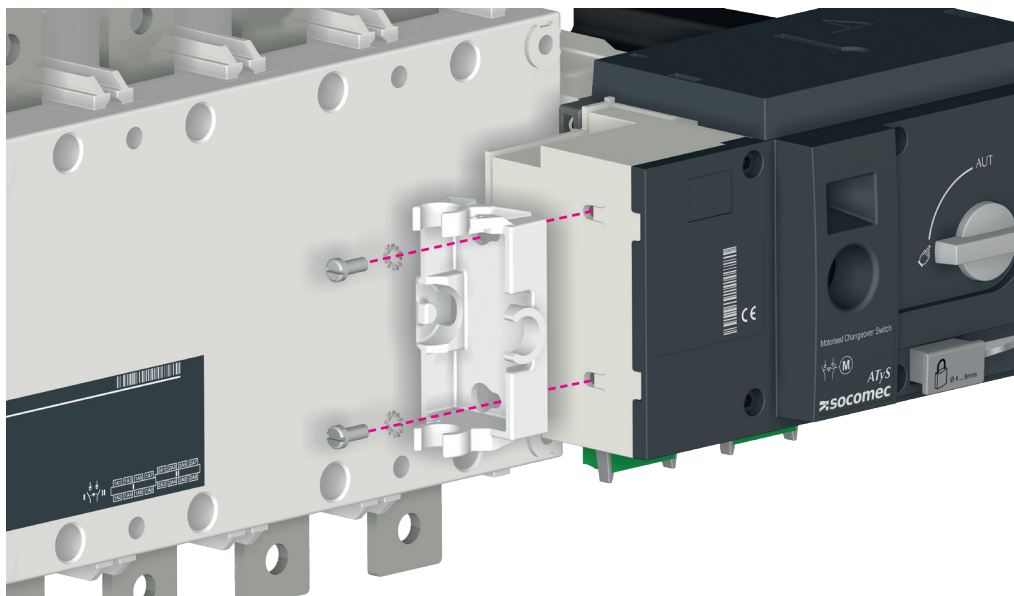

Max tightening torque 2,5 Nm

### 6.3.2. Bridging bar installation

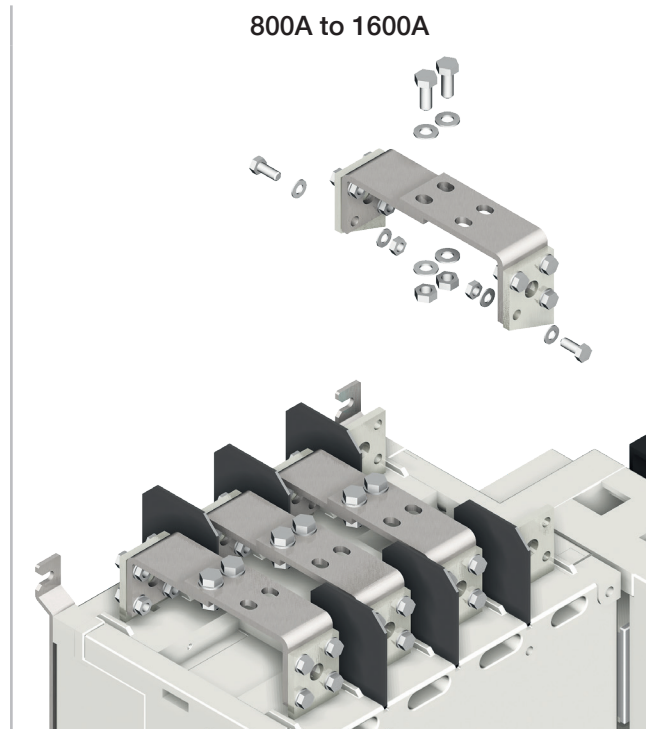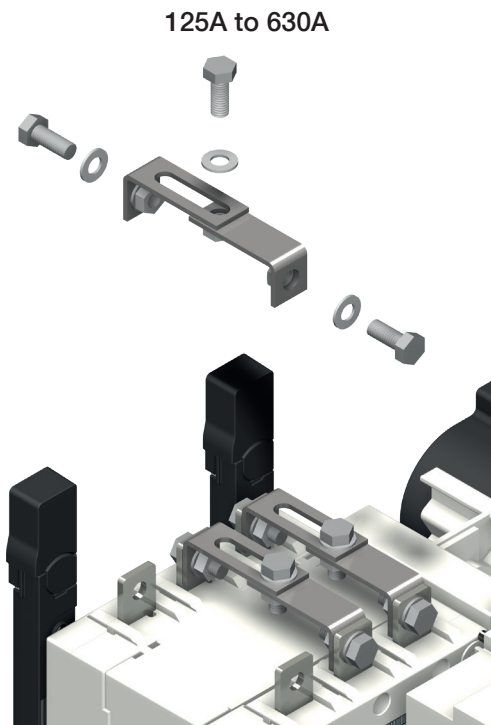

It is possible to mount the bridging bars on either side of the switch

Recommended tightening torque:

M6: 4,5 N.m  
M8: 8,3 N.m  
M10: 20 N.m  
M12: 40 N.m


Maximum tightening torque:

M6: 5,4 N.m  
M8: 13 N.m  
M10: 26 N.m  
M12: 45 N.m

### 6.3.3. Terminal shrouds


Available from 125 A to 630 A  
Frame B3 to Frame B5:

- Upstream, downstream, front or rear mounting.
- When fitted with bridging bars only the front terminal shrouds are to be installed.

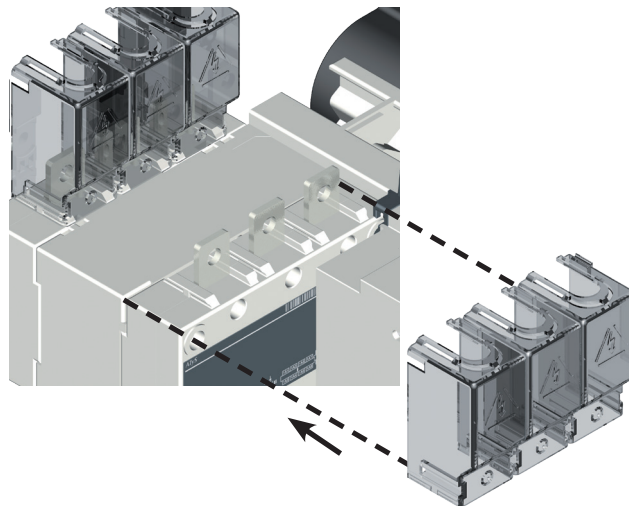


### 6.3.4. Terminal screens


125A to 630A

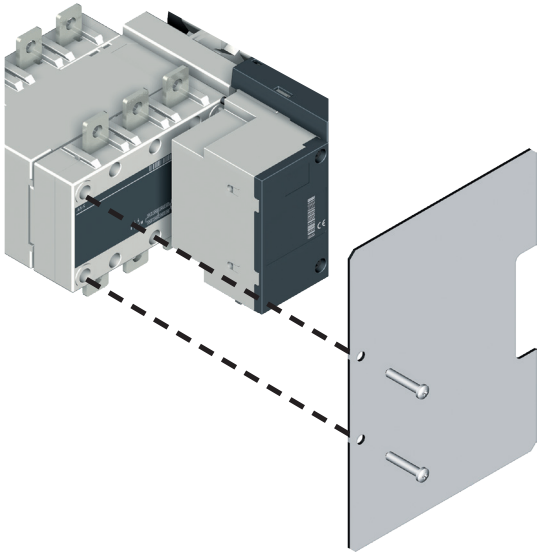

500A to 1600A

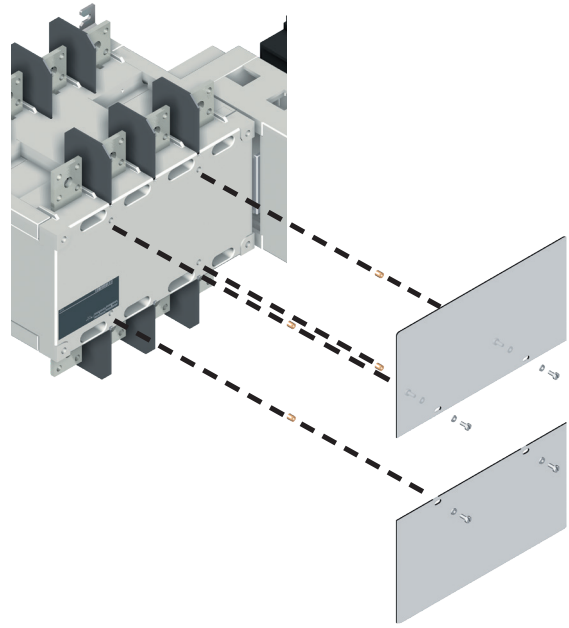


2000A to 3200A

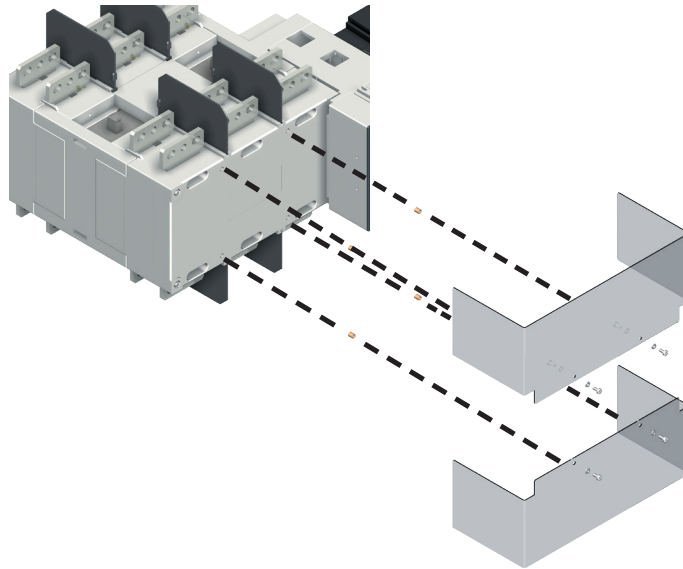



### 6.3.5. Copper bar connection kits (2000A to 3200A : Frame B8)

 Conditions of use of these products may lead to a derating.


 SOCOMEC "Application guide"

 [www.socomec.com](http://www.socomec.com)

**1** I th = 2000 A

3 P


4 P

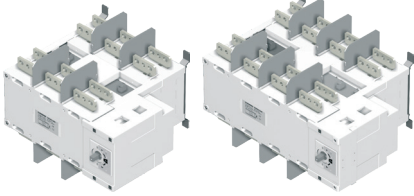

**2** I th = 2500 A

3 P



4 P

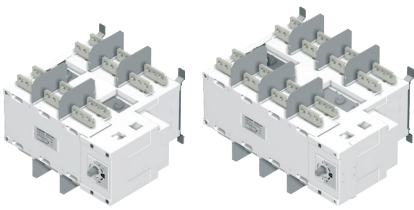

**3** I th = 3200 A

3 P



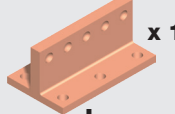


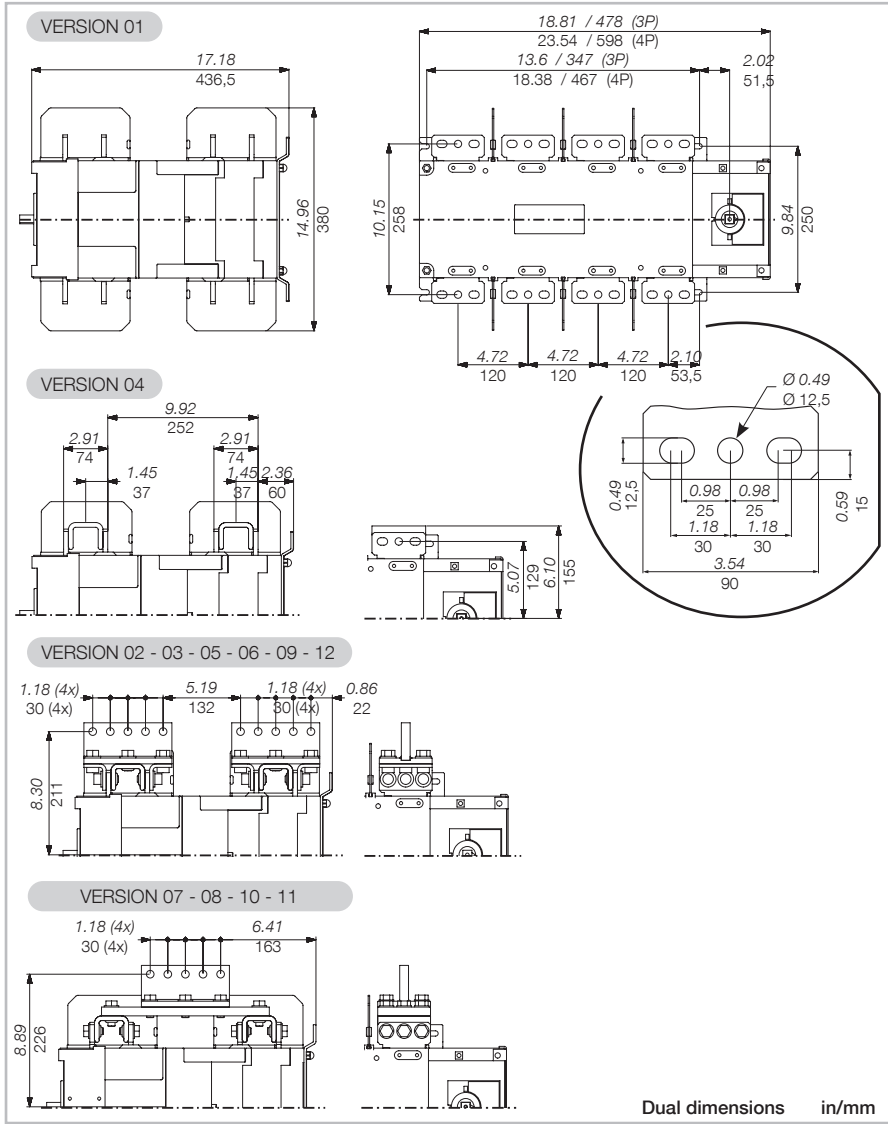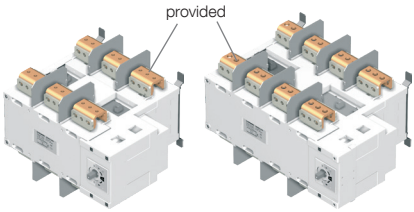
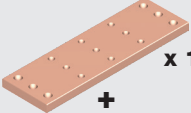

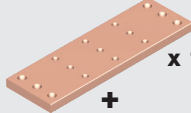

4 P






Data for Bolts, Nuts and Washers for Busbar Connections.

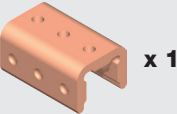 TO BE SUPPLIED BY OTHERS

#### Connection reference numbers and contents:




|   |   |   |
|---|---|---|
|  x 1<br>included with 3200A product as standard<br><b>2619 1200</b>  |  x 6<br>708 lb-in<br>80 Nm<br><b>2699 1200</b><br><b>2699 1201</b>   |  x 1<br>+<br> x 6<br>708 lb-in<br>80 Nm<br><b>2629 1200</b> |
|  x 2<br>+<br> x 6<br>708 lb-in<br>80 Nm<br><b>2639 1200</b> |  x 1<br>+<br> x 6<br>708 lb-in<br>80 Nm<br><b>4109 0250</b> |  x 1<br>+<br> x 6<br>708 lb-in<br>80 Nm<br><b>4109 0320</b> |

| VERSION | 708 lb-in<br>80 Nm  |  |   |
|---------|---|--|---|
|         |  | Rondelle contact<br>MOY. M M12<br>NFE 25 511 |  |
| 01      | H M12-35 6.8 - 6 x  | 12 x   | 6 x   |
| 02      | H M12-55 6.8 - 3 x  | 6 x  | 3 x   |
| 03      | H M12-55 6.8 - 5 x  | 10 x   | 5 x   |
| 04      | <b>A</b> H M12-35 6.8 - 3 x   | 3 x  | -   |
|         | <b>B</b> H M12-45 6.8 - 3 x   | 3 x  | -   |
| 05      | H M12-65 6.8 - 3 x  | 6 x  | 3 x   |
| 06      | H M12-65 6.8 - 5 x  | 10 x   | 5 x   |
| 07      | H M12-55 6.8 - 3 x  | 6 x  | 3 x   |
| 08      | H M12-55 6.8 - 5 x  | 10 x   | 5 x   |
| 09      | H M12-55 6.8 - 10 x   | 20 x   | 10 x  |
| 10      | H M12-65 6.8 - 3 x  | 6 x  | 3 x   |
| 11      | H M12-65 6.8 - 5 x  | 10 x   | 5 x   |
| 12      | H M12-65 6.8 - 10 x   | 20 x   | 10 x  |

 Note: reference numbers and quantity given above and below are for one connection and per pole. For a full set multiply the quantity indicated by the number of poles (3 or 4 pole) and then multiply by 2 (N° of switches).

### 6.3.6. Incoming copper bar connection kit assembly




2000 A – 2500 A (Minimum Cu bar section for lth 2000 A 3x100x5mm; and for lth 2500 A 4x100x5mm)

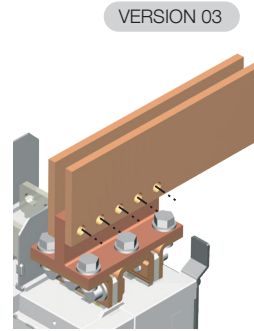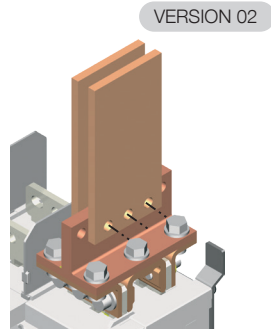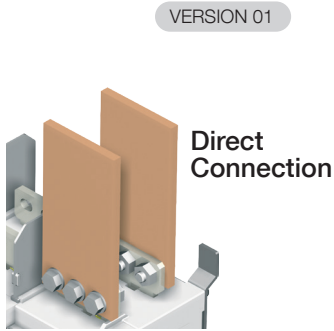

#### V2 & V3

Kit :  
2619 1200 x 1  
2629 1200 x 1  
2639 1200 x 1

3200 A (Minimum Cu bar section 3x100x10mm)

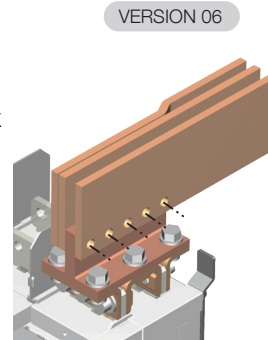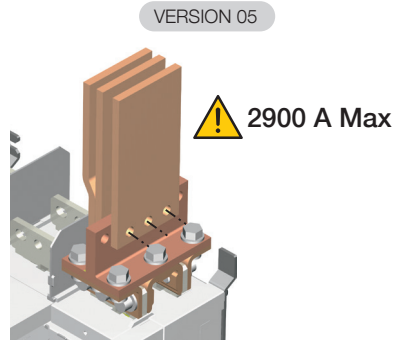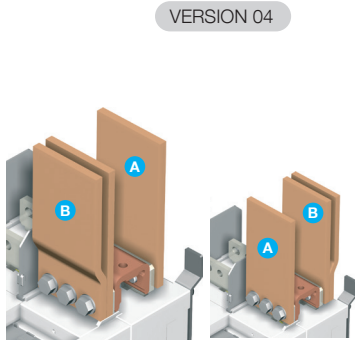

Connection bar 2619 1200 included with 3200 A

#### V4




Kit :  
2699 1200 x 1

#### V5 & V6

Kit :  
2629 1200 x 1  
2639 1200 x 1

### 6.3.7. Outgoing bridge connection assembly

2000 A – 2500 A (Minimum Cu bar section for lth 2000 A 3x100x5mm; for lth 2500 A 4x100x5mm)

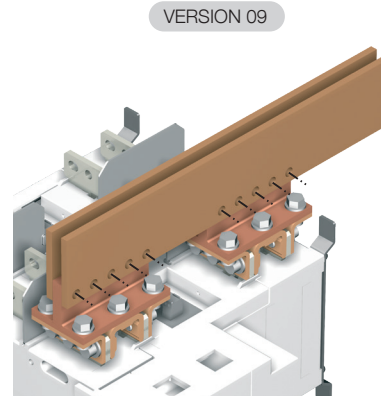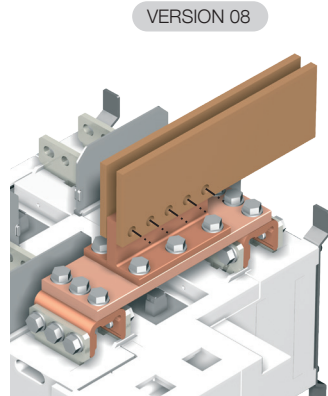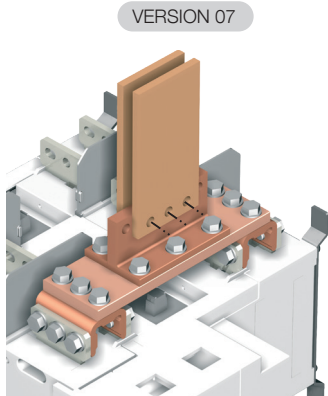




#### V7 & V8

Kit :  
2619 1200 x 2  
2699 1201 x 2  
2629 1200 x 1  
4109 0320 x 1

#### V9

Kit :  
2619 1200 x 2  
2629 1200 x 2  
2639 1200 x 2

3200A (Minimum Cu bar section 3x100x10mm)

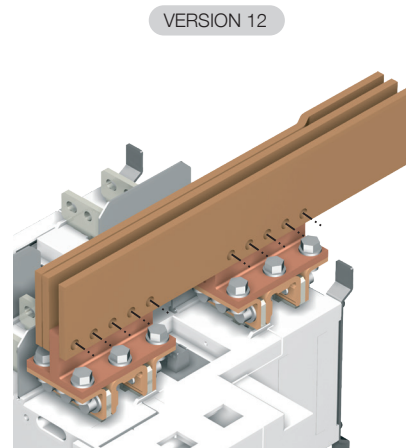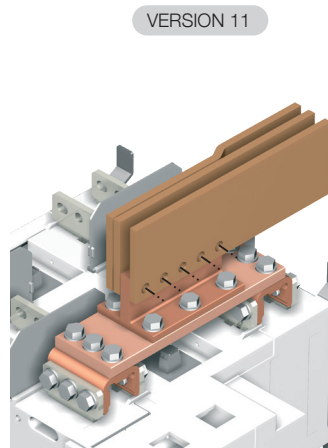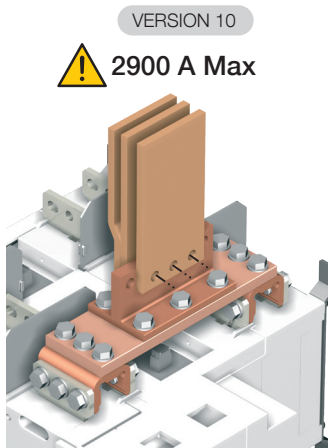

Connection bar 2619 1200 included with 3200 A

#### V10 & V11


Kit :  
2699 1201 x 2  
2629 1200 x 1  
4109 0320 x 1

#### V12

Kit :  
2629 1200 x 2  
2639 1200 x 2

### 6.3.8. Power supply

Power Transformer intended for 400 VAC, Phase to Phase voltage applications that do not provide the availability of a neutral conductor. Transformer data: 400 VAC – 230 VAC: 200 VA. In this case the ATyS t will require 2 transformers to be connected as shown below.

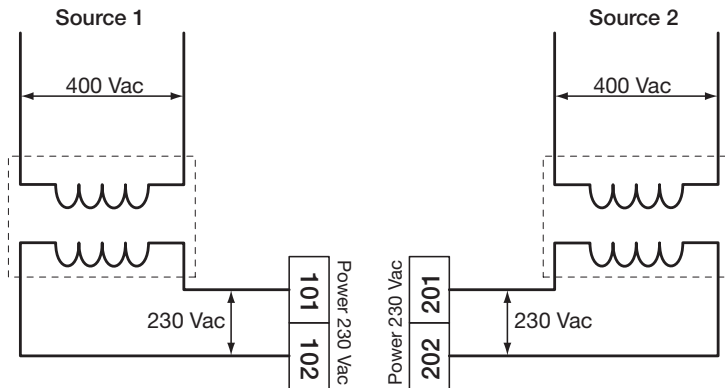


### 6.3.9. Padlocking key interlocks


Intended for locking the electrical control and the backup control in position 0 using a RONIS EL11AP lock. As standard, key locking is in the 0 position.

Optionally and when including the option “padlocking in 3 positions” key locking will be in positions I, 0 or II

125 A to 630 A

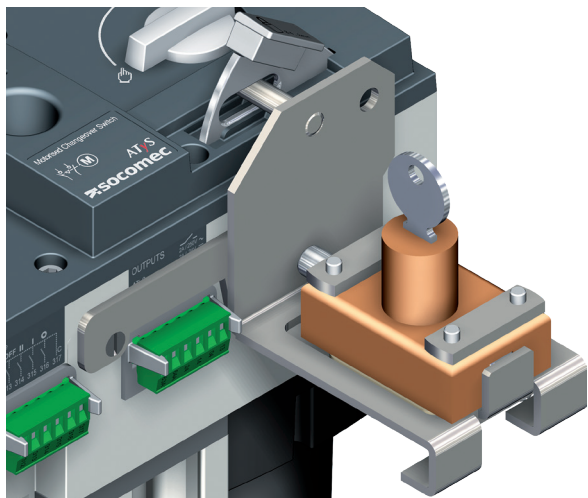

800 A to 3200 A


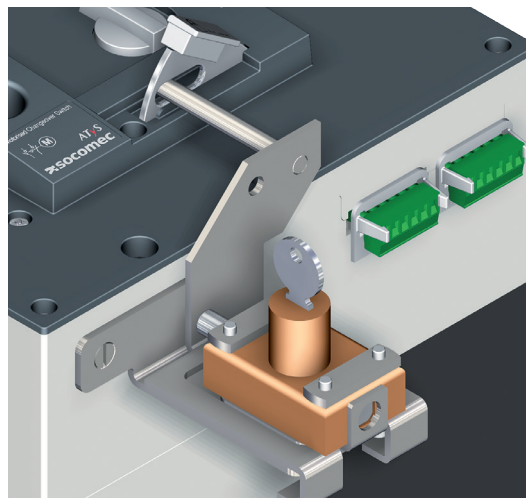


### 6.3.10. Additional auxiliary contacts


Intended for pre breaking and signaling of positions I and II:

A maximum of 2 NO/NC additional auxiliary contacts can be fitted for each position. (Customer assembly may be required.)

125 A to 630 A (Optional)

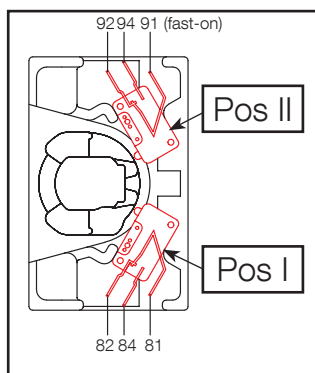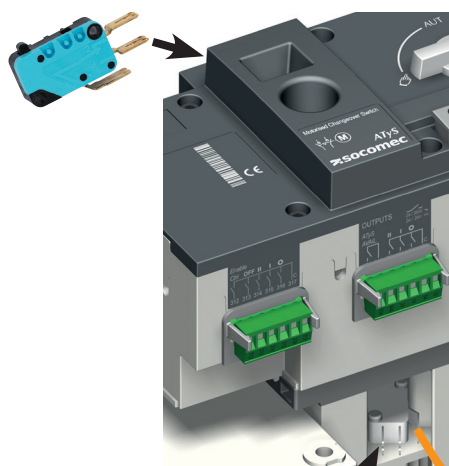

800 A to 1600 A (Optional)  
2000 A to 3200 A (Standard)

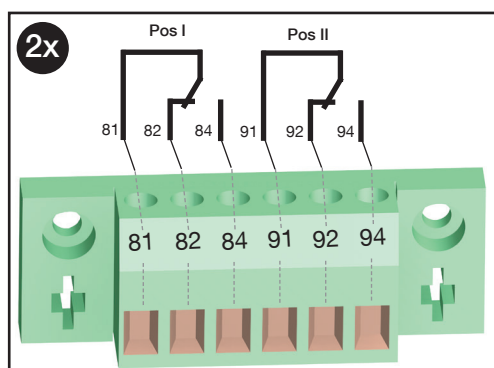



(1) When mounting one auxiliary contact on position I or II, use the short screws provided. When mounting two auxiliary contacts on position I or II, use the long screws provided.

# 7. CONNECTIONS
 
## 7.1. Power circuits

For specific networks and power connection diagram possibilities, please refer to page 40.

### 7.1.1. Cable or bar connections

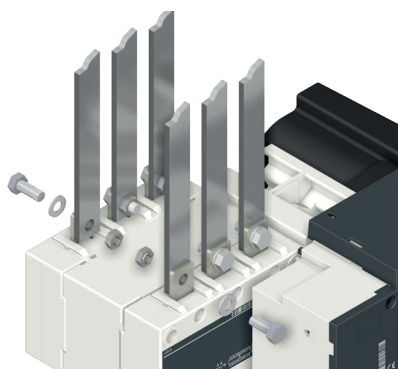

Recommended tightening torque:

M6: 4,5 N.m  
 M8: 8,3 N.m  
 M10: 20 N.m  
 M12: 40 N.m


Maximum tightening torque:

M6: 5,4 N.m  
 M8: 13 N.m  
 M10: 26 N.m  
 M12: 45 N.m

**CAUTION !** - For 125 - 160A ( $U_{imp} = 8kV$ ). Terminations must respect a minimum of 8 mm clearance from live parts to parts intended to be earthed and between poles.  
 - For 200 - 3200 ( $U_{imp} = 12kV$ ). Terminations must respect a minimum of 14 mm clearance from live parts to parts intended to be earthed and between poles.

### 7.1.2. Power connection terminals

125 A to 630 A - Refer to section "Product dimensions", page 26 for power connection terminal details.

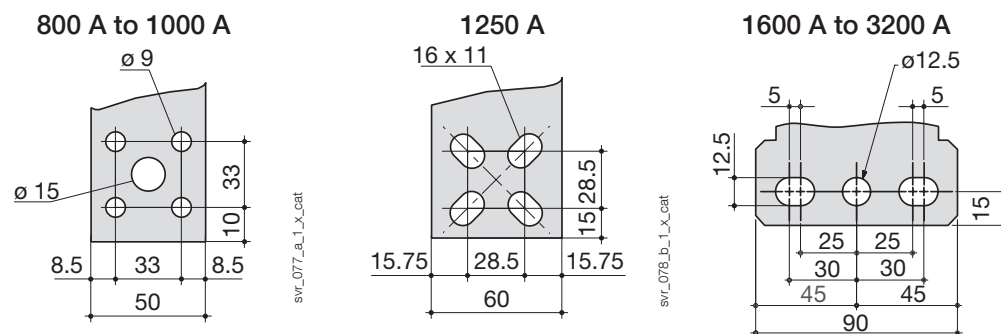

### 7.1.3. Power connection cross-section



|  | B3    |       |       | B4    |       |       | B5         |            | B6         |            |            | B7          | B8          |              |              |
|--|-------|-------|-------|-------|-------|-------|------------|------------|------------|------------|------------|-------------|-------------|--------------|--------------|
|  | 125 A | 160 A | 200 A | 250 A | 315 A | 400 A | 500 A      | 630 A      | 800 A      | 1000 A     | 1250 A     | 1600 A      | 2000 A      | 2500 A       | 3200 A       |
| Minimum cable section Cu (mm <sup>2</sup> )          | 35    | 35    | 50    | 95    | 120   | 185   | 2x95       | 2x120      | 2x185      | -          | -          | -           | -           | -            | -            |
| Recommended cable section Cu (mm <sup>2</sup> ), lth | -     | -     | -     | -     | -     | -     | 2x32<br>x5 | 2x40<br>x5 | 2x50<br>x5 | 2x63<br>x5 | 2x60<br>x7 | 2x100<br>x5 | 3x100<br>x5 | 2x100<br>x10 | 3x100<br>x10 |
| Maximum cables section Cu (mm <sup>2</sup> )         | 50    | 95    | 120   | 150   | 240   | 240   | 2x185      | 2x300      | 2x300      | 4x185      | 4x185      | 6x185       | -           | -            | -            |
| Maximum bars width Cu (mm)                           | 25    | 25    | 25    | 32    | 32    | 32    | 50         | 50         | 63         | 63         | 63         | 100         | 100         | 100          | 100          |

Note for all ratings: Take into account the connection cable lengths and/or others environmental specific operating conditions.

## 7.1.4. Connection

The product is delivered with the following configuration:






- Connectors 101 to 106, I 1/2 to I 7/8, located on the right side of the controller are associated with switch I
- Connectors 201 to 206, II 1/2 to II 7/8, located on the left side of the controller are associated with switch II.

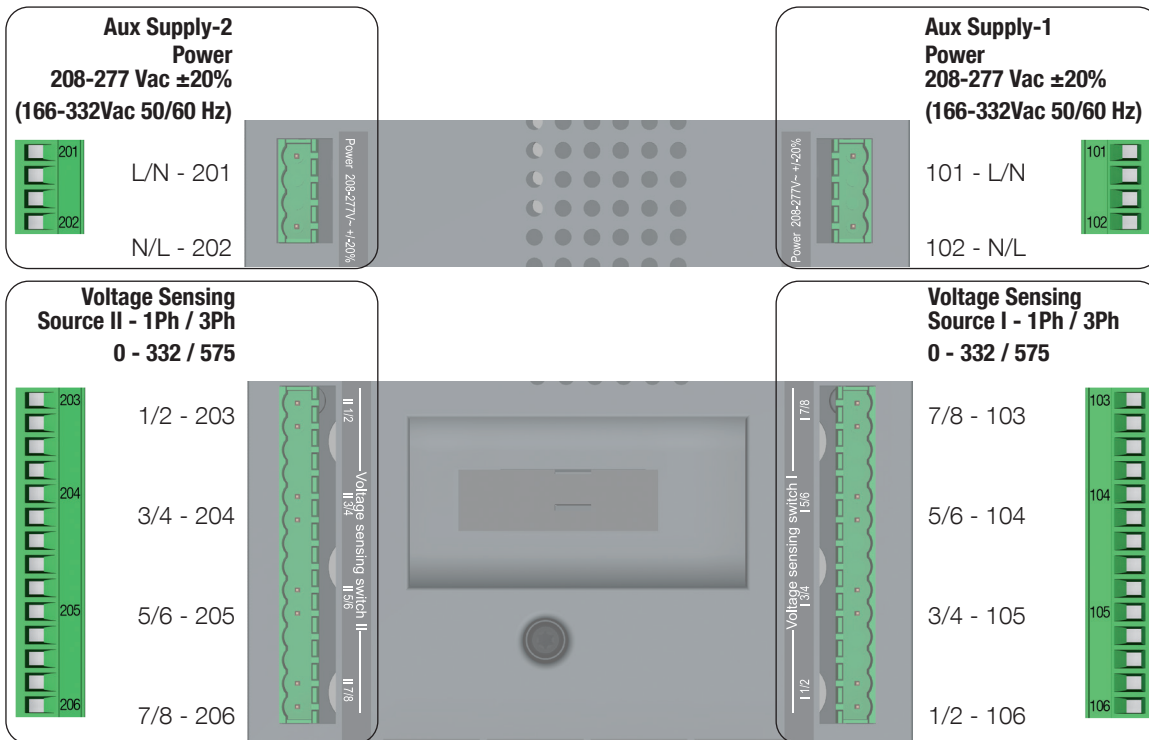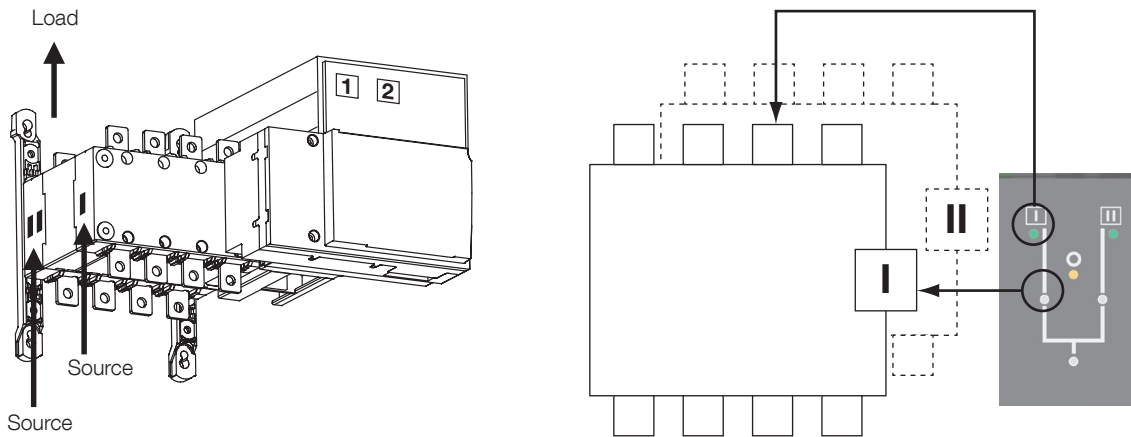

**CAUTION !** It is recommended to connect power and sensing with the ATyS voltage sensing and power supply kit available as an accessory. In this case ensure to mount the kit before connecting the power cables.


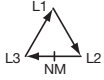
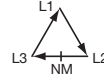
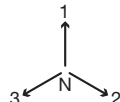
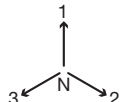





## 7.2. Networks and Power Connection possibilities
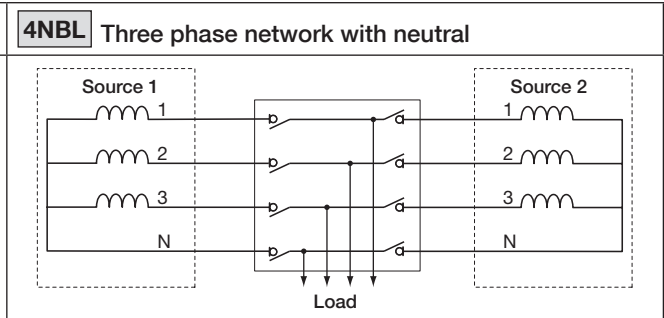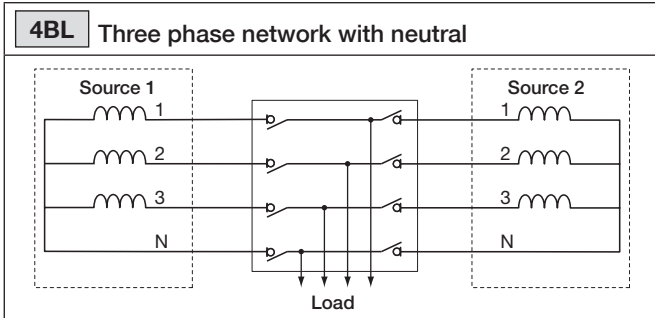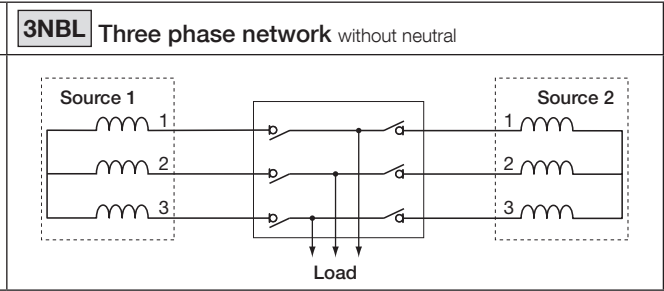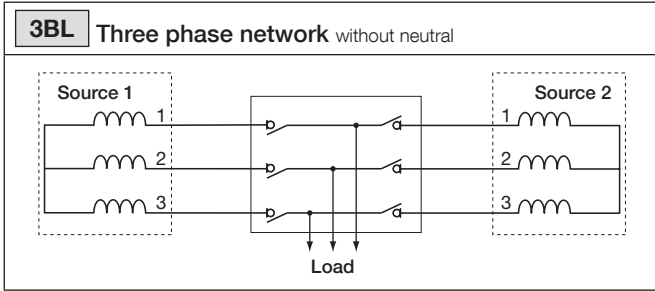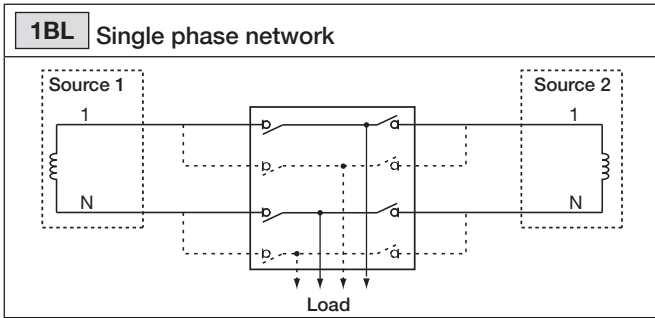
### 7.2.1. Type of networks






## 7.2.2. Sensing details
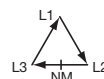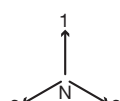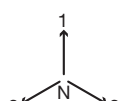
| Network type   |   |   |   |   |   |
|--|---|---|---|---|---|
|  | 1BL   | 3BL   | 3NBL  | 4BL   | 4NBL  |
| Source <span style="border: 1px solid black; padding: 0 2px;">1</span> | 1 phase   | 3 phase   | 3 phase   | 3 phase   | 3 phase   |
| Source <span style="border: 1px solid black; padding: 0 2px;">2</span> | 2 wire  | 3 wire  | 3 wire  | 4 wire  | 4 wire  |
| Source <span style="border: 1px solid black; padding: 0 2px;">1</span> |  |  |  |  |  |
| Source <span style="border: 1px solid black; padding: 0 2px;">2</span> |  |  |  |  |  |
| Voltage sensing  |   |   |   |   |   |
| Source <span style="border: 1px solid black; padding: 0 2px;">1</span> | -<br>V1   | U12, U23, U31   | U12, U23, U31   | U12, U23, U31<br>V1, V2, V3   | U12, U23, U31<br>V1, V2, V3   |
| Source <span style="border: 1px solid black; padding: 0 2px;">2</span> | -<br>V1   | U12, U23, U31<br>-  | U12, U23, U31<br>-  | U12, U23, U31<br>V1, V2, V3   | U12, U23, U31<br>V1, V2, V3   |
| Source presence (source available)                                     | ✓   | ✓   | ✓   | ✓   | ✓   |
| Source in ranges (U, V, F)   | ✓   | ✓   | ✓   | ✓   | ✓   |
| Rotation phase order   | -   | ✓   | ✓   | ✓   | ✓   |
| Neutral position   | -   | -   | -   | ✓   | ✓   |
| Voltage unbalanced is lower than threshold                             | -   | ✓   | ✓   | ✓   | ✓   |

## 7.3. Control circuits

### 7.3.1. Typical ATyS t wiring

Example: Control wiring for a 400VAC application having a 3 phase and neutral supply.

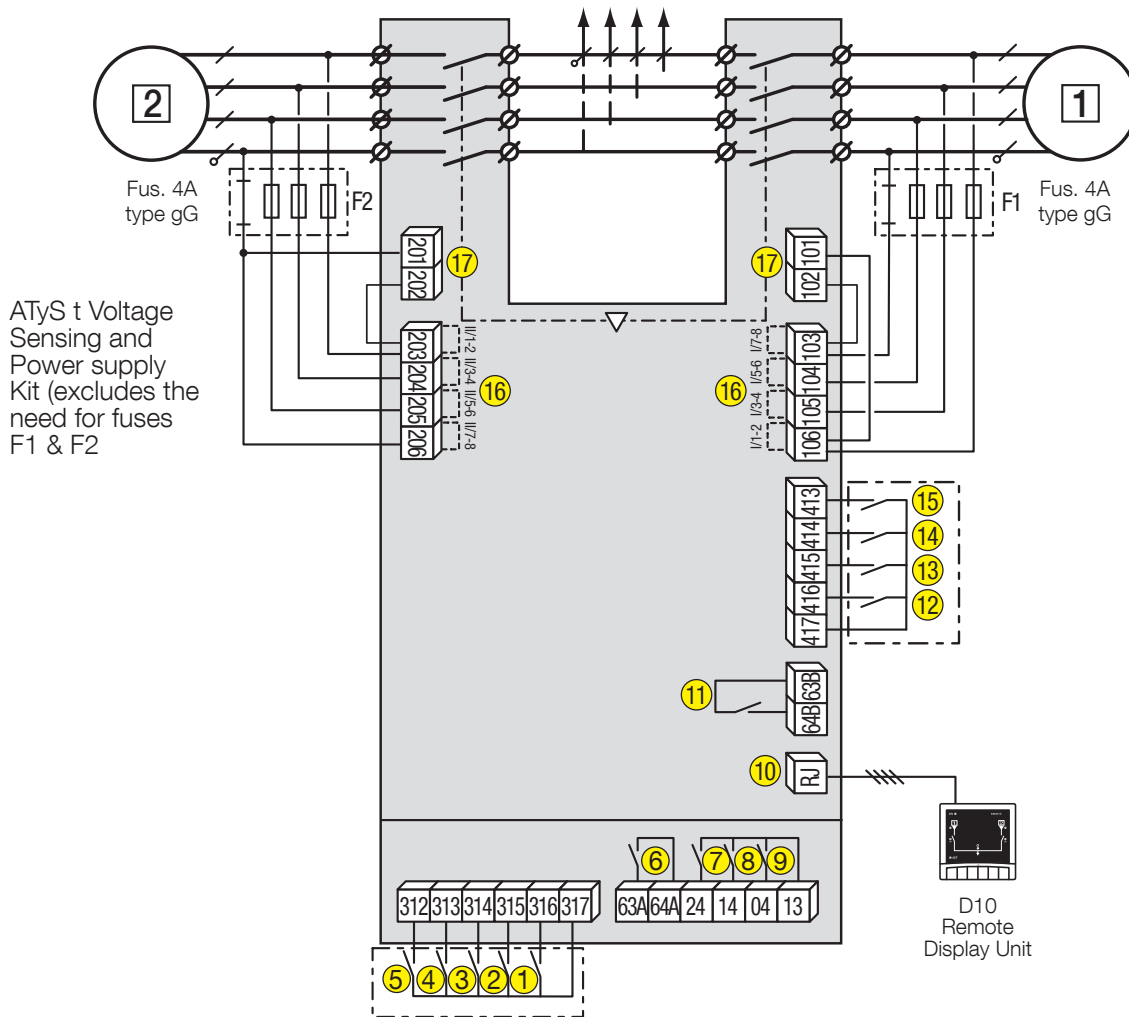

1 preferred source  
2 alternate source

1. Position 0 order
2. Position I order
3. Position II order
4. Zero position priority order
5. Remote Control Enable (Priority over Auto)

6. Product Available output (Motor)

7. Position II aux contact
8. Position I aux contact
9. Position 0 aux contact
10. O/P to D10 remote display
11. Product Available output (ATS)
12. I/P Inhibition of the ATS controls

13. I/P Manual retransfer (RTC)

14. I/P to define the source priority: Source priority set to S2 if closed, S1 if open
15. I/P with/without source priority: no source priority when closed
16. Voltage sensing inputs
17. Power supply inputs




**DANGER ! Do not handle any control or power cables connected to the ATyS when voltage may be present.**



**CAUTION ! Verify that the Auxiliary power supply feeding terminals 101 and 102 / (201 and 202) are within the limits of 208VAC -> 277VAC ±20%**

## 7.3.2. ATyS t input and output contacts


### 7.3.2.1. Motorisation module wiring

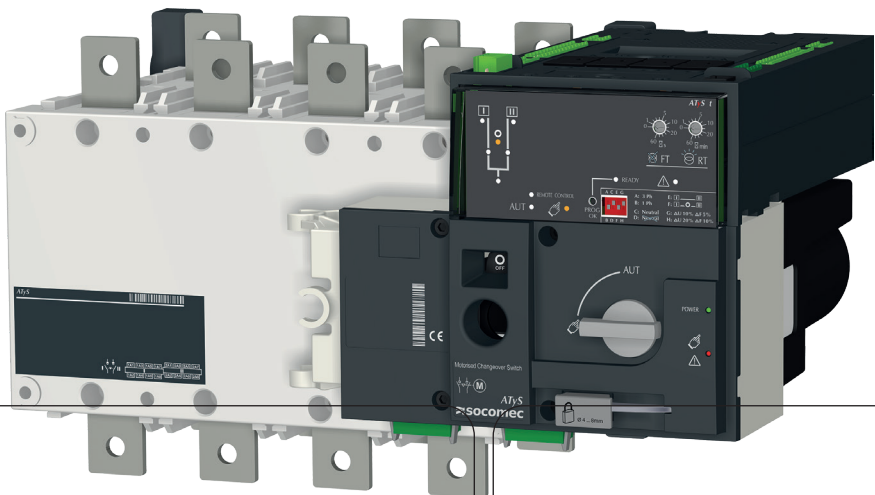


⚠ All pressure on the connector pins is to be avoided during wiring of the auxiliary cables

| CONTROL                 |     | Prod Avail Common   |     | OUTPUTS             |              |
|-------------------------|-----|---------------------|-----|---------------------|--------------|
| Enable                  | 312 | 63A                 | 63A | ATyS AVAIL.         | 2A / 250V ~  |
| Ctrl OFF II I O         | 313 | Prod Avail O/P:     | 64A | II I O              | 2A / 24V --- |
| 312 313 314 315 316 317 | 314 | Pos II Aux Contact: | 24  | 63A 64A 24 14 04 13 |              |
|                         | 315 | Pos I Aux Contact:  | 14  |                     |              |
|                         | 316 | Pos 0 Aux Contact:  | 04  |                     |              |
|                         | 317 | Common:             | 13  |                     |              |


### 7.3.2.2. ATS control module wiring

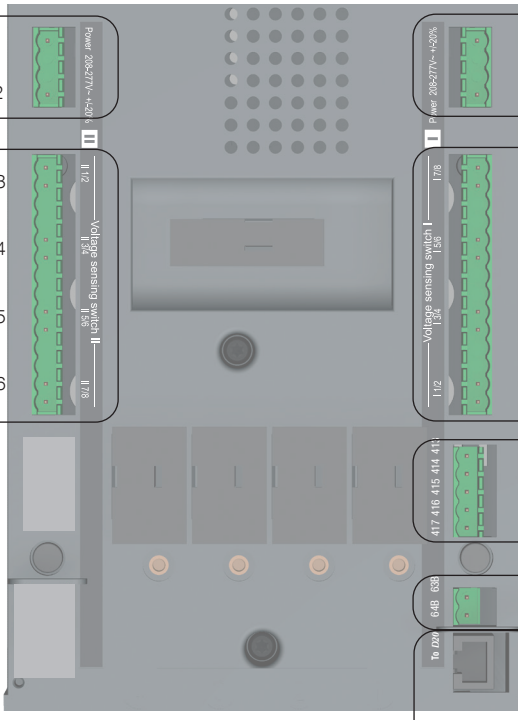

|  |  |
|--|--|
| <b>Aux Supply-2 Power</b><br>L/N - 201<br>208-277 VAC ±20%<br>(166-332Vac 50/60 Hz)<br>N/L - 202                   | <b>Aux Supply-1 Power</b><br>101-L/N<br>102-N/L<br>208-277 VAC ±20%<br>(166-332Vac 50/60 Hz)                       |
| <b>Voltage Sensing Source 2 - 1Ph/3Ph</b><br>(0-332 / 575 VAC)<br>1/2 - 203<br>3/4 - 204<br>5/6 - 205<br>7/8 - 206 | <b>Voltage Sensing Source 1 - 1Ph/3Ph</b><br>(0-332 / 575 VAC)<br>7/8 - 103<br>5/6 - 104<br>3/4 - 105<br>1/2 - 106 |
|  | <b>ATS Module Control Inputs (Fixed) Common</b><br>413<br>414<br>415<br>416<br>417                                 |
|  | <b>Product available</b><br>63B<br>64B   |
|  | <b>RJ45</b><br>               |

**CAUTION**

The RJ45 terminal is not a LAN connection

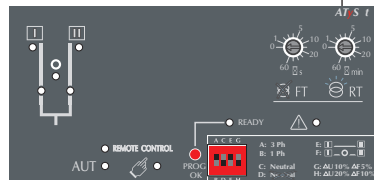

### 7.3.2.3. Terminal denomination, description and characteristics.

| Denomination  | Terminal                                    | Description   | Characteristics  | Recommended Cable Section |
|---|---|---|--|---------------------------|
| Motorisation Module<br>Output Contacts                        | 04  | Aux Contact Position 0 - Normally Open Contact  | Dry Contacts<br>2A AC1 / 250V<br>2A / 24Vdc  | 1.5 – 2.5 mm <sup>2</sup> |
|   | 13  | Common for Aux Contacts positions I - 0 - II  |  |                           |
|   | 14  | Aux Contact position I: Normally Open Contact   |  |                           |
|   | 24  | Aux Contact position II: Normally Open Contact  |  |                           |
|   | 63A<br>64A                                  | Motorisation module available output. Closed when the ATyS t is in Auto mode and motorisation is operational. (No Fault powered and ready to changeover)    |  |                           |
| ATS Output Contact  | 63B<br>64B                                  | ATS control module available output. Closed when the ATyS t is in Auto mode and ATS is operational. (No Fault, powered and ready for a changeover sequence) | Dry Contacts<br>2A AC1 / 250V  | 1.5 – 2.5 mm <sup>2</sup> |
|   | 81  | Common for Aux Contacts positions I   |  |                           |
| Additional Aux Contact<br><br>Included with<br>2000A to 3200A | 82  | Aux Contact position I : Normally Closed Contact  |  |                           |
|   | 84  | Aux Contact position I : Normally Open Contact  |  |                           |
|   | 91  | Common for Aux Contacts positions II  |  |                           |
|   | 92  | Aux Contact position II : Normally Closed Contact   |  |                           |
|   | 94  | Aux Contact position II : Normally Open Contact   |  |                           |
| ATS Power supply Input I                                      | 101 - L/N<br>102 - N/L                      | Power supply I – L/N<br>Power supply I – N/L  | 208 - 277Vac ±<br>20% : 50/60Hz  | 1.5 – 2.5 mm <sup>2</sup> |
|   | ATS Voltage Sensing Input*<br><br>Switch I  | 103 - 7/8   |  |                           |
| 104 - 5/6   |   | Phase connected on power contact 5 or 6 of Switch I   |  |                           |
| 105 - 3/4   |   | Phase connected on power contact 3 or 4 of Switch I   |  |                           |
| 106 - 1/2   |   | Phase or neutral connected on power contact 1 or 2 of Switch I  |  |                           |
| ATS Power supply Input II                                     | 201 - L/N<br>202 - N/L                      | Power supply II – L/N<br>Power supply II – N/L  | 208 - 277Vac ±<br>20% : 50/60Hz  | 1.5 – 2.5 mm <sup>2</sup> |
|   | ATS Voltage Sensing Input*<br><br>Switch II | 203 - 1/2   |  |                           |
| 204 - 3/4   |   | Phase connected on power contact 3 or 4 of Switch II  |  |                           |
| 205 - 5/6   |   | Phase connected on power contact 5 or 6 of Switch II  |  |                           |
| 206 - 7/8   |   | Phase or neutral connected on power contact 7 or 8 of Switch II   |  |                           |
| Motorisation Module<br><br>Control Inputs                     | 312   | Remote Control Mode Enable when closed with 317   | Attn:<br>Do not connect to<br>any Power supply<br><br>Max cable length<br>100m                               | 1.5 – 2.5 mm <sup>2</sup> |
|   | 313   | Position 0 order if closed with 317. (Priority order input forcing the product to remote control mode and 0 position)                                       |  |                           |
|   | 314   | Position II order if closed with 317  |  |                           |
|   | 315   | Position I order if closed with 317   |  |                           |
|   | 316   | Position 0 order if closed with 317   |  |                           |
|   | 317   | Common control terminal for 312 - 316 ATyS (Specific Voltage Supply)  |  |                           |
| ATS Module Control Inputs                                     | 413   | Input I1 : PRI - Activate source supply priority when closed with 417. (Set source priority to network when closed)   | Do not connect to<br>any power supply.<br><br>Attn:<br>To be used with dry<br>contacts fed from<br>417 ONLY. | 1.5 – 2.5 mm <sup>2</sup> |
|   | 414   | Input I2: Set priority source supply as SI or SII. (Set as : SI when open and SII when closed with 417)   |  |                           |
|   | 415   | Input I3: RTC – Manual retransfer order when closed with 417. (Open to validate the retransfer)   |  |                           |
|   | 416   | Input I4: Inhibition of the ATS control automation when closed with 417   |  |                           |
|   | 417   | Common supply for inputs 1 to 4 (413 - 416)   |  |                           |
| Remote Interface  | RJ  | Output to D10 remote display module   | Up to 3m   | RJ 45 straight cable      |

\*For metering and sensing details, please refer to page 41.

 **DANGER ! Do not handle any control or power cables connected to the ATyS when voltage may be present.**




**CAUTION !** Do not connect terminals 312 to 317, 413 to 417 to any power supply. These order inputs are powered through terminal 317 (or 417 respectively) and external dry contacts ONLY.


## 7.4. Voltage sensing and power supply kit

The ATyS t voltage sensing kit is available as an accessory and is designed to tap directly of the power section on Switch I and Switch II terminals without the need to add protection fuses. The sensing kit is designed with optimised cable lengths and utilises silicon conductors held safely in an isolated mechanical support.

Frame B3 - B5 - 125 A - 630 A

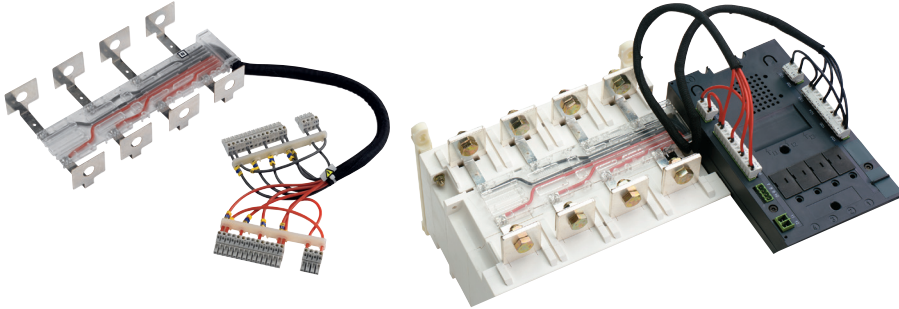

Frame B6 - B8 - 800 A - 3200 A

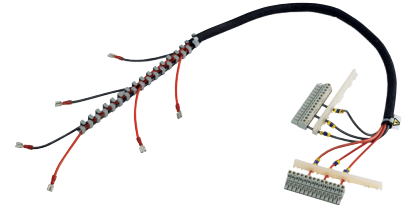


**CAUTION !** Ensure to mount the kit onto the product before connecting the power cables. Be careful not to damage the contacts during kit mounting and during power cables connections (Tighten the cables carefully).

### 7.4.1. Standard configuration

The sensing and power supply kit may be ordered in 3 phases network 4 wires or 3 wires.

It can be used with top or bottom cables entry. The only connection to respect is that measures of the source on Switch I must be connected to the inputs located on the right of the electronic module and the measures of the source on Switch II must be connected to the inputs located on the left of the electronic module.

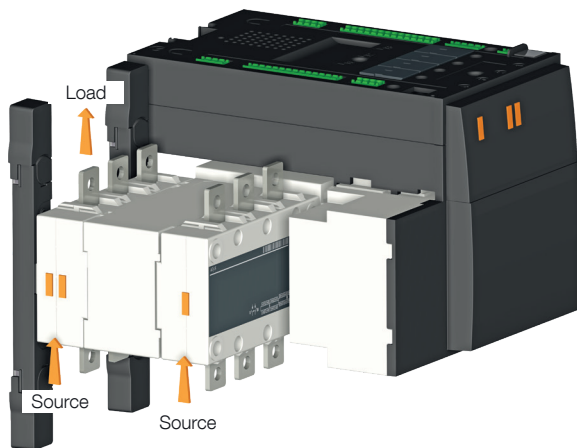

### CAUTION !

Pay attention when wiring the power cables (Respect to the sensing kit legend).  
3 wire kits (those without a neutral) do not include for the power supply to terminals (101-102 and 201 – 202).  
Ensure that you have ordered the correct reference prior to installation.  
(Refer to the accessory section for details).

## 7.4.2. Sensing kit wiring diagram

### Bottom incoming with Top Outgoing

- Black Wires -> Switch I
- Red Wires -> Switch II

### Top Incoming with Bottom Outgoing


- Black Wires -> Switch II
- Red Wires -> Switch I

### Wiring numbers:

Wire numbering has been determined in accordance to the power switch terminals

### Example:


Black and red wire numbers 1-2 are always connected to terminals 1 or 2 from switch I or II

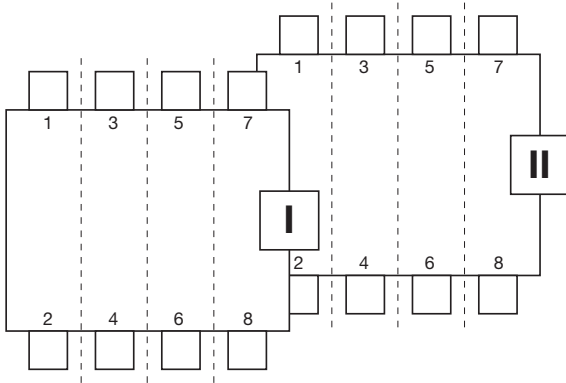

**CAUTION !** Verify kit orientation before mounting the kit.  
Kit output cables always on the right hand side (control module side).

≤ 630 A Bottom view

≥ 800 A Bottom view

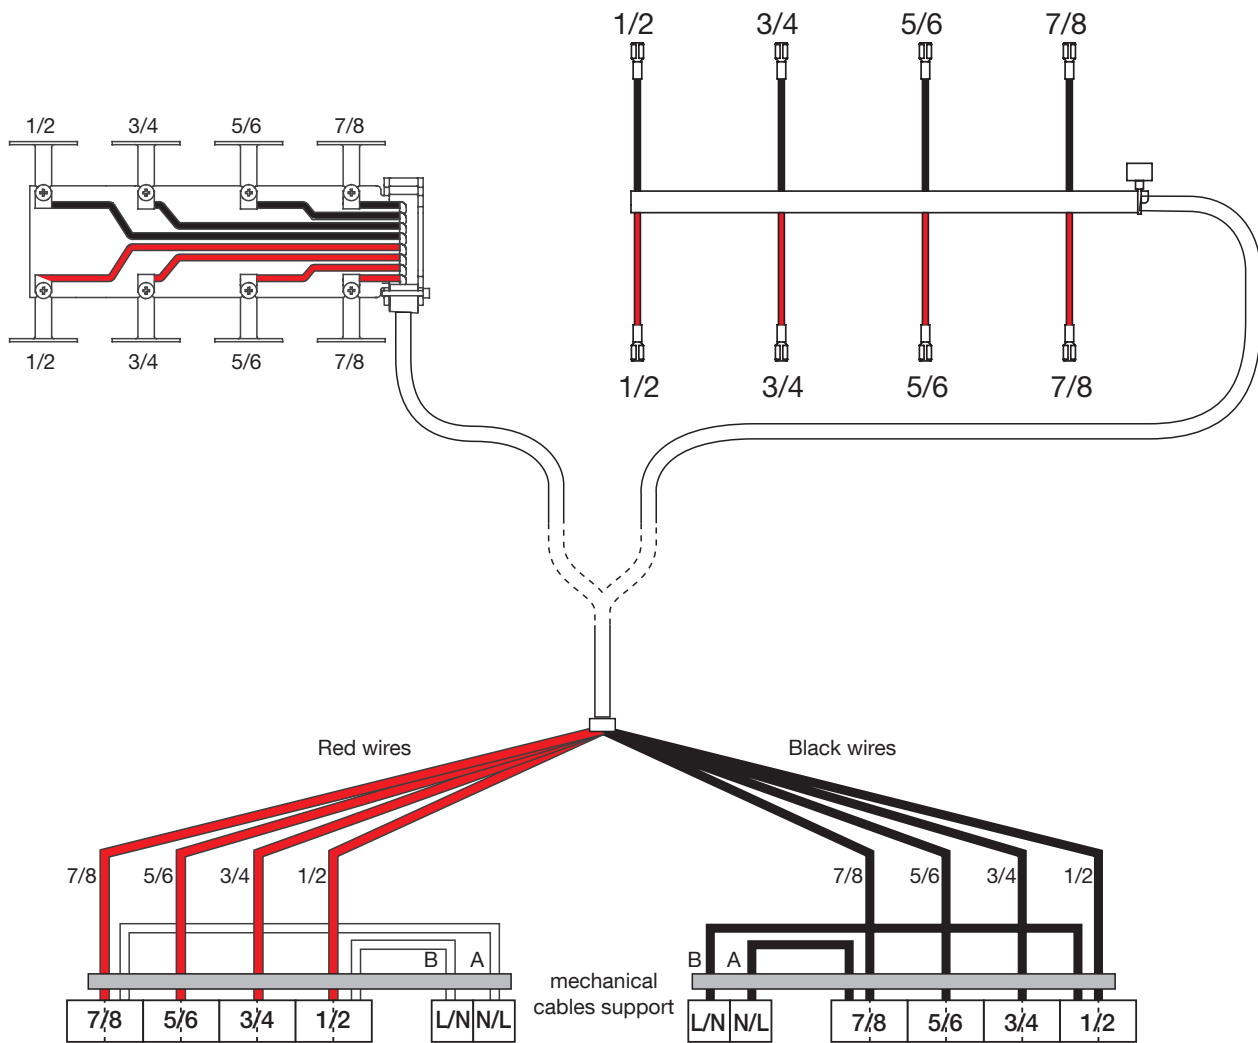

### 7.4.3. Network


Power inputs (terminals 101-102 & 201-202) are 220/240/277 VAC (208 - 277 VAC) ± 20%. It is necessary to adapt the power input cable connections according to the network configuration. (Power supply to be taken between phase to phase or between phase and neutral).



**CAUTION !** Verify that the power supply between terminals 101 – 102 and 201 – 202 (nominal auxiliary voltage supply) is within 208-277 VAC ± 20%


- Standard kit:

Network 380/415 VAC ± 20% with neutral conductor (no kit modification required):

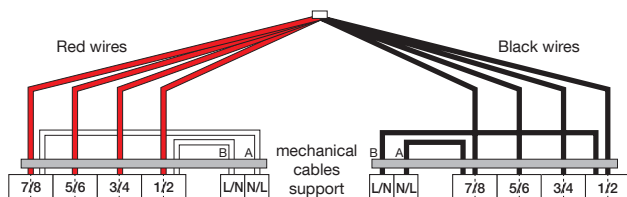

- Kit Modification:

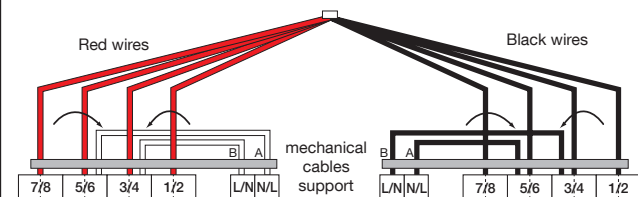



 




For network 220/240 VAC ± 20%, power supply cables A-B to connect between phases




## 8. ATYS T OPERATING MODES AND SEQUENCES

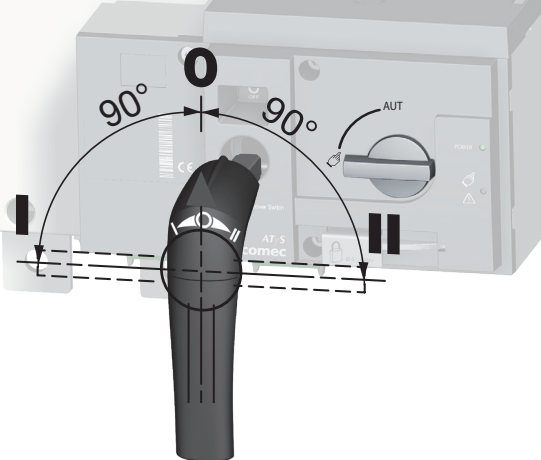The ATYS t includes 3 safe and distinct operating modes through a selector switch located on the front of the product. As standard the ATYS t is delivered with a selector switch however a key lock type selector switch is available as an accessory. The modes of operation are as follows:

- Auto Mode: “Remotely operated transfer switching”
- Manual Mode: “Local emergency manual operation”
- Locked Mode: “Secure locked padlocking facility”

|   |   |  |
|---|---|--|
| <p><b>AUT</b><br/>MODE</p>  |    | <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"><b>AUT</b></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"></div> </div> <p><b>AUTO MODE:</b></p> <ul style="list-style-type: none"> <li>• Activates the remote control inputs and the ATS controller automation.</li> <li>• Inhibits the padlocking facility</li> <li>• Inhibits the insertion of the manual operation handle when in AUT Mode</li> </ul> <p>AUTO Mode position is inhibited when padlocked or when the handle for manual operation is inserted into the ATYS p.</p>  |
| <p><br/>MODE</p>   |   | <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"><del>AUT</del></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"><del></del></div> </div> <p><b>MANUAL MODE: (Not Padlocked)</b></p> <ul style="list-style-type: none"> <li>• Inhibits the control inputs.</li> <li>• Allows to insert the handle for emergency manual operation.</li> <li>• Allows padlocking in O Position. <i>(With the handle for manual operation removed)</i></li> </ul> <p>Turning the selector switch to  from AUT and back to AUT resets a fault state.</p>  |
| <p><br/><br/>MODE</p> |  | <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"><del>AUT</del></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"></div> </div> <p><b>MANUAL MODE: (Padlocked)</b></p> <ul style="list-style-type: none"> <li>• Inhibits the control inputs.</li> <li>• Inhibits insertion of the emergency handle.</li> <li>• Allows padlocking when in O Position.</li> </ul> <p>  POS 0</p> <p>Padlocking in position I - O and II is possible when the optional function is included in the ATYS p. (Refer to product catalogue)</p> |

 **WARNING !** Depending on the state of the ATYS p the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.




## 8.1. Manual operation

### 8.1.1. Emergency manual operation

The ATyS t can be manually operated as a “Manual Transfer Switch Equipment – MTSE” whilst retaining the electrical characteristics and performance of the power switching function. This function is usually used in case of emergencies or during maintenance.

To operate the ATyS t manually ensure that no live parts are accessible, turn the front selector switch into the manual position (see page 18) and insert the handle (see page 18) into the emergency handle shaft location hole provided (see page 19).

Turn the handle 90° clockwise or anti-clockwise (depending on the position to be reached) for each consecutive change in position. I -> O -> II -> O -> I.

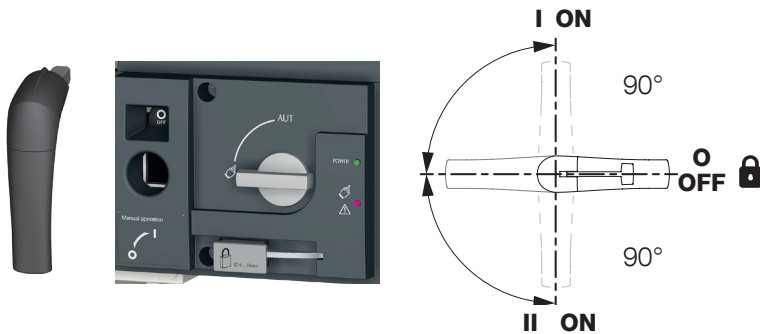

**CAUTION !**

Ensure to verify the product position and direction of rotation before effecting manual operation.  
Ensure to remove the handle from the product before changing the selector switch back to AUT position.

### 8.1.2. Padlocking

The ATyS t can be padlocked in the O position as standard whilst padlocking in positions I, O or II is available as a factory fitted option.

To padlock the ATyS t first ensure that the ATyS t mode selector switch is on Manual then ensure that the emergency manual operation handle is not inserted into the location hole. (Remove if inserted).

Pull the padlocking mechanism outwards to reveal the slot for inserting up to 3x dia. 4 - 8mm padlocks.

Padlock the device with approved quality padlocks of minimum diameter 4mm and maximum diameter of 8mm. A maximum of 3x 8mm padlocks may be padlocked onto the ATyS t to padlocking mechanism.



**CAUTION !** As standard, padlocking is only made possible in the “O position”, when in manual mode and with the emergency handle not inserted.

## 8.2. Electrical operation


### 8.2.1. Dual power supply

The ATyS t includes a dual power supply and is to be powered between terminals 101 - 102 and 201 - 202 (2 different supplies - main & alternative) within the limits of:  $2 \times 208 - 277 \text{VAC} \pm 20\%$  /  $(166 - 332 \text{VAC}) / 50/60 \text{Hz} \pm 10\%$ .

Current Input: 100mA (Standby mode) / 15A max (Switching mode)

Surge Protection :  $V_{in\_sg}$ : 4.8KV - 1.2/50 $\mu$ s according to IEC 61010-1

Terminal connectors: Minimum 1.5mm<sup>2</sup> / Maximum 2.5mm<sup>2</sup>

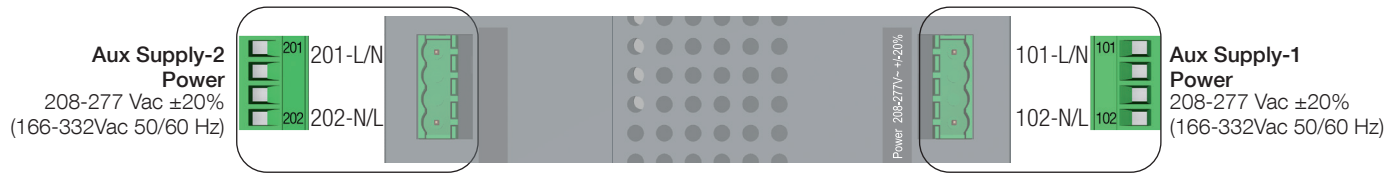

### 8.2.2. Voltage sensing inputs

The ATyS t includes dual single phase and three phase voltage sensing (terminals 103 - 106 and 203 - 206) designed to monitor 1Phase (L-N) supplies of up to 332Vac and 3 phase (L-L) of up to 575/600Vac.

The ATyS t is designed to handle single phase, three phase with neutral as well as three phase without neutral networks. Simply define the correct configuration of single or three phase and with or without neutral using dip switches (positions A/B, C/D) on the front of the ATS controller.


Sensing connections are usually tapped directly off the ATyS t power terminals using the ATyS sensing kit available as an accessory. Sensing kits are available with the neutral on the left or neutral on the right to match the network configuration where the ATyS will be operating. Refer to the ATyS accessory section for more details.

Sensing values measured will have a direct influence on determining the availability of the main and the alternative supplies as well as the ATyS t automation.

The parameters monitored through sensing are the following:

- **Phase rotation / imbalance (3 phase networks)**  
Phase imbalance in the ATyS t is relative to the nominal voltage configured with auto conf together with the hysteresis set in position G/H (10/20%) with dip switch 4.
- **Frequency within set limits**  
This will depend on the nominal frequency configured using auto conf together with the hysteresis set in position G/H (5/10%) with dip switch 4.
- **Loss of Neutral**  
When used on three phase + neutral applications (configured with dip switch 1 set on position A and dip switch 2 set on position C, the loss of neutral will be detected for most unbalanced loads. Detection will be done when the load is on.
- **Loss of the main or alternative supply.**  
Loss of supply depends on the nominal voltage and frequency configured using auto conf together with the hysteresis set in position G/H (10/20% for  $\Delta U$  and 5/10% for  $\Delta F$ ) with dip switch 4. The supply will be considered as failed after the failure timer (set through potentiometer FT on the ATS controller) has elapsed. The FT setting is adjustable from 0 - 60 seconds.
- **Return of main and / or alternative supply.**  
Return of supply depends on the nominal voltage and frequency configured using auto conf together with the hysteresis set in position G/H (10/20% for  $\Delta U$  and 5/10% for  $\Delta F$ ) with dip switch 4. The supply will be considered as returned after the return timer (set through potentiometer RT on the ATS controller) has elapsed. The RT setting is adjustable from 0 - 60 minutes.

Measurement accuracy: Frequency: 0.1% - Voltage: 1%

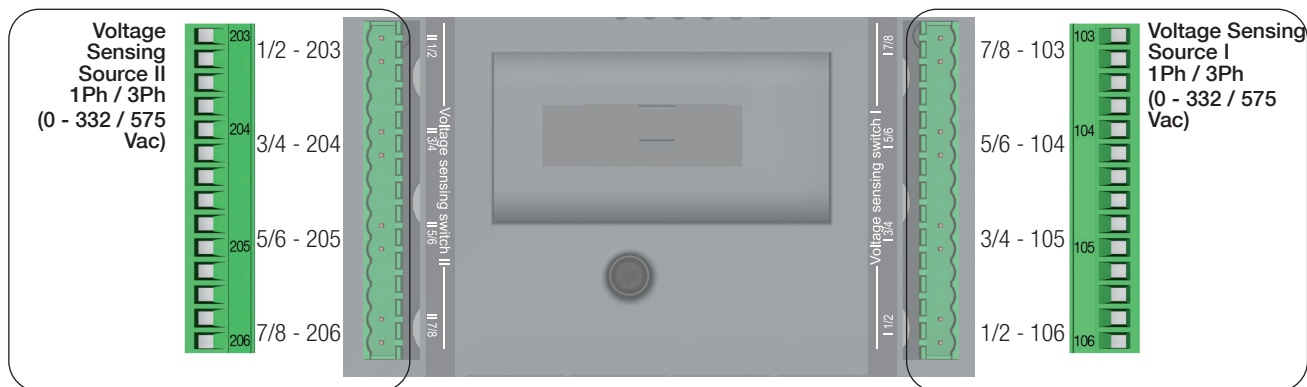


## 8.2.3. Fixed inputs

### 8.2.3.1. Description

The ATyS t includes for 5 off inputs through a 6 pin connector installed on the motorisation module. No additional power supply should be used on these contacts as the inputs **MUST** be used with the common supply taken from terminal 317.

The ATyS t also includes 4 additional inputs on the ATS Control Module. Again no additional power supply should be used on these contacts as the inputs **MUST** be used with the common supply taken from terminal 417. At least one of the ATyS t aux power supplies (101 – 102 or 201 - 202) must be available to activate inputs 312 to 317 and 413 to 417.

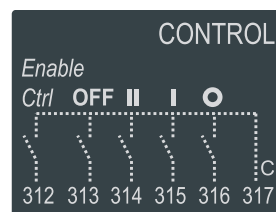

Pulse duration for activation of contact inputs:  $\geq 60$ ms.

- Pin 312:** Remote Control Mode Enable when closed with 317.  
 This contact must be closed with 317 so as to activate all control inputs except for 313 that takes priority and is active immaterial of the state of input 312. Enabling remote control through 312 activates the remote control inputs whilst inhibiting the ATS module automation.
- Pin 313:** Position 0 order if closed with 317 when in AUTO. (Force the switch to the OFF Position)  
 This is a “Priority Order Input” meaning that when closed with 317 it takes priority over all other electrical commands. The ATyS t will remain in 0 position as long as the contact 313 – 317 remains closed. Once the contact is open the ATyS t is ready to receive new orders. This contact order is independent of other inputs and is also enabled without 312 connected to 317. Impulse duration to activate and start switching to position O is a minimum of 60ms. The product state will be unavailable.
- Pin 314:** Position II order if closed with 317.  
 This contact is active with the ATyS t in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position II is a minimum of 60ms.
- Pin 315:** Position I order if closed with 317  
 This contact is active with the ATyS t in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position I is a minimum of 60ms.
- Pin 316:** Position 0 order if closed with 317  
 This contact is active with the ATyS t in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position O is a minimum of 60ms. For contactor logic maintain contacts on between terminal 316 and 317.
- Pin 317:** Common  
 Common supply for inputs 312 to 316
- Pin 413:** Input I1, With / Without Priority  
 PRI - Activate / deactivate source supply priority when closed or opened with 417. With the contact open the ATyS t will by default set the ATS logic as operation with priority. When closed with 417 the ATyS t will operate without priority. The priority by default is SI however this may be set to SII by the user by closing 414 - 417.
- Pin 414:** Input I2 , Set Priority Source Supply  
 This input contact is used to set the priority source supply to SI or to SII. By default and with contacts 414-417 open the priority supply is set to SI. When 414 is closed with 417 priority is set to SII.  
 Attn: this input is active with contacts 413 – 417 open.

- **Pin 415:** Input I3, Manual Retransfer  
RTC – Manual retransfer inhibits the “with priority” configuration order when closed with 417. This allows to control the retransfer back to the priority supply at a specific (less consequent) moment. This input is useful when using the “with priority” function.
- **Pin 416:** Input I4, Inhibition  
This input contact inhibits the ATS automation when closed with 417 without activating any other operating modes. With inhibition active, the ATyS t may be operated in manual mode (with the direct handle) or in remote control mode with contacts 312 – 317 closed.
- **Pin 417:** Common  
Common supply for fixed inputs 1 – 4 on terminals 413 to 416.

### 8.2.3.2. Technical data

|                                     | Motorisation Module                                 | ATS Control Module                                  |
|-------------------------------------|---|---|
| Input Qty                           | 5   | 6   |
| Direct Current lin                  | 0.35 to 0.5mA                                       | 1 to 2.5mA  |
| Line resistance                     | 1kΩ   | 1kΩ   |
| Line length                         | 100m (Min. wire 1.5mm <sup>2</sup> #16AWG)          | 100m (Min. wire 1.5mm <sup>2</sup> #16AWG)          |
| Pulse duration                      | 60ms  | 60ms  |
| Power per Input                     | 0.06VA  | 0.03VA  |
| Surge protection Vin_sg             | 4.8kV (1.2/50μs surge)                              | 2.4kV (1.2/50μs surge)                              |
| ESD withstand voltage (Contact/air) | 2/4kV   | 2/4kV   |
| Insulation (Common mode)            | 4.8kVAC<br>(Between I/P and all common parts)       | 4.8kVAC<br>(Between I/P and all common parts)       |
| Terminal connector                  | 1.5mm <sup>2</sup> minimum / 2.5mm <sup>2</sup> max | 1.5mm <sup>2</sup> minimum / 2.5mm <sup>2</sup> max |



### 8.2.3.3. Remote control logic

Remote switching operation can be driven in AUT mode by external volt free contacts as described above using input contacts 312 to 317.

Depending on the wiring configuration there are two types of logic that may be applied to the ATyS t.

- Impulse logic or
- Contactor logic.

In remote control, the ATyS t inputs give priority to orders I and II over 0 therefore contactor logic can be implemented by simply bridging terminals 316 and 317.

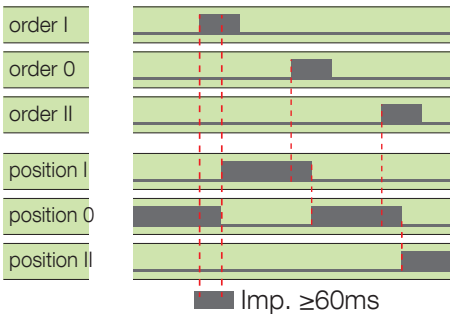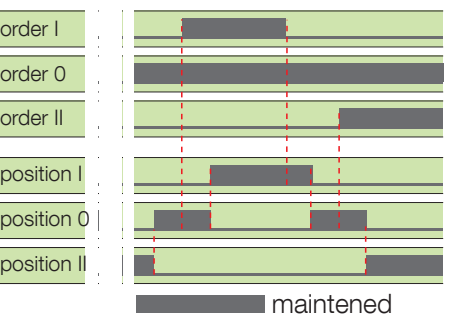
|  |  |
|--|--|
| <p><b>Impulse logic:</b></p> <p>The ATyS t is driven to a stable position (I – O – II) after receiving an impulse order.</p> <ul style="list-style-type: none"> <li>• A switching command of at least 60 ms is necessary to initiate the switching operation.</li> <li>• Orders I and II have priority over order 0.</li> </ul> <p>Note: The logic diagrams exclude the transfer times.</p>  | <p style="text-align: center;"><b>Impulse logic</b></p>  <p style="text-align: center;">■ Imp. ≥60ms</p> <p>(Note : Excludes position switching delays)</p>    |
| <p><b>Contactor Logic :</b></p> <p>The ATyS t is driven to a specific position (I or II) for as long as the order is maintained.</p> <ul style="list-style-type: none"> <li>• Order O is maintained. (Bridge 316 – 317)</li> <li>• Orders I and II have priority over order 0.</li> <li>• Orders I and II have equal priority.<br/><i>(1st order received is held until no longer maintained).</i></li> <li>• If order I or II disappears, the device returns to zero position. <i>(With the power supply available).</i></li> </ul> | <p style="text-align: center;"><b>Contactor logic</b></p>  <p style="text-align: center;">■ maintained</p> <p>(Note : Excludes position switching delays)</p> |

## 8.2.4. Fixed outputs - Dry contacts

### 8.2.4.1. Description

As standard, the ATyS t is equipped with four fixed outputs located on the motorisation module.

(Dry contacts to be powered by the user).

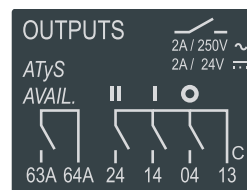

### 8.2.4.2. Position auxiliary contact

The ATyS t is equipped with integrated position (I – O – II) auxiliary contact outputs through 3 off micro switches.

#### Pins 13, 04, 14, 24

(Normally Open contacts with pin 13 as common)

### 8.2.4.3. ATyS t Product available output (motorisation)

#### Pin 63A – 64A

(Normally Open contact that is held closed when the motorisation is available).

This contact gives constant feedback about the product's availability and it's capacity to transfer from the main supply to the alternative. The feedback given is relative to the motorisation module excluding the ATS controller that may be monitored separately.

The ATyS t performs a self diagnostics test on the motorisation module at startup, when put from Manual -> Auto and then every 5 minutes. This test ensures that the ATyS t is operational in terms of control inputs. Should one of the tests fail, a second test is performed to reconfirm the error state.

Should the ATyS t motorisation module become unavailable, contact 63A – 64A are opened, the power/ready LED's are switched off, and the fault LED is activated. The fault LED will remain active for as long as sufficient power is available and the fault condition is not reset. The fault is reset when the product is switched from AUT -> Manual -> Auto mode.

ATyS t (Motorisation) Product Available / Unavailable Watchdog relay will open for any of the following reasons below: For added security, "Product Availability" is informative and does not necessarily inhibit motor operation.

| Product Unavailable + Warning LED Condition:           | Inhibition |
|--|------------|
| Product in manual mode                                 | Yes        |
| Motor not detected (Autotest)                          | No         |
| Control voltage out of range                           | Yes        |
| Operating factor fault active (N° of operations / min) | Yes        |
| Powerfail active                                       | Yes        |
| Customer input autotest failed                         | No         |
| Invalid product customisation                          | No         |
| Abnormal switching when not in manual mode             | Yes        |
| Requested position not reached                         | Yes        |
| Locked mode active when not in manual mode             | Yes        |
| External Fault -> User input                           | No         |
| Unexpected current flowing through the motor when idle | Yes        |

*Sampling rate for the above is every 10 ms*


*Exception: motor detection sampling rate is every 5 min*

#### Pin 63B – 64B

ATyS t Product Available Output (ATS module)

(Normally Open contact that is held closed when the ATS is available)

The above contacts may be used separately for precise monitoring of the state of each module or wired in series to monitor the availability of the ATS and motorisation modules as a complete unit.

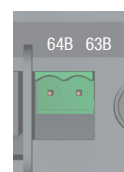

## 8.2.4.4. Technical data

|                                      |   |
|--------------------------------------|---|
| Auxiliary Contact Quantity           | 4   |
| Configuration                        | NO  |
| Mechanical Endurance                 | 100 000 cycles  |
| Response Time                        | 5 – 10 ms   |
| Startup duration                     | 200ms   |
| Rated Voltage / Switching Voltage    | 250VAC  |
| Rated Current                        | 2A  |
| Surge protection $V_{in\_sg}$ :      | 4.8kV (1.2/50 $\mu$ s surge)                            |
| ESD withstand voltage (Contact/air): | 2/4kV   |
| Dielectric Strength contact/parts:   | 4.8kVAC (Reinforced Insulation)                         |
| Insulation:                          | 4.8KVAC   |
| Output Terminal:                     | 1.5mm <sup>2</sup> minimum / 2.5mm <sup>2</sup> maximum |

## 8.3. Operating Sequences

The given times are: operating transfer time, product opening time and contact transfer time. The definitions of these times are given below:

### 1. Operating transfer time (OTT) – IEC 60947-6-1 §3.2.6

This time is measured from the instant the monitored supply deviates (not considered as available anymore) to the closing of main contacts on an available alternative supply source, exclusive of any purposely introduced time delay. In other words, this is the global transfer time, excluding all programmable delays (timers configured to 0).


If the supply deviation is not monitored by the product itself, but by an external controller, OTT time starts when the order is received by the product.

### 2. Product opening time I-0 or II-0 (POT)

This time is measured from the instant that the monitored supply is not considered as available to the opening of the main contacts, exclusive of any purposely introduced time delay. If the product is controlled via external orders, this time is measured from the moment when the order is received to the opening of the main contacts.

### 3. Contact transfer time (CTT) – IEC 60947-6-1 §3.2.5

This time is measured from the parting of one set of main contacts from one power supply to the closing of a second set of main contacts on an alternative power supply; this is the duration between the opening of the contacts on the initial position and the closing of the contacts on the position reached, in other words, it is the time in 0 (disconnection time).

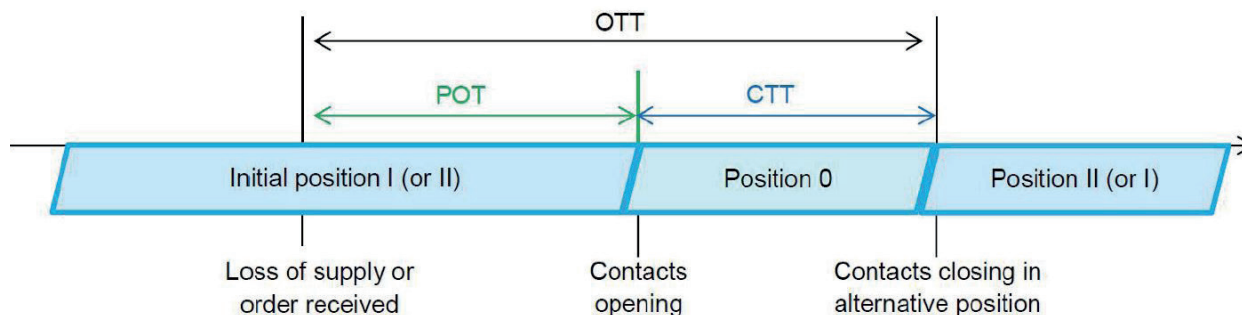


Mean switching times at nominal voltage and frequency – 25°C:

|   | 125 A<br>160 A<br>200 A | 250 A<br>315 A<br>400 A | 500 A<br>630 A | 800 A<br>1000 A<br>1250 A | 1600 A | 2000 A<br>2500 A<br>3200 A |
|---|-------------------------|-------------------------|----------------|---------------------------|--------|----------------------------|
| Contact transfer time ("electrical blackout") I-II - CTT                      | 0.4s                    | 0.4s                    | 0.4s           | 1.4s                      | 1.4s   | 1.1s                       |
| I-0 or II-0 following an order - POT  | 0.54s                   | 0.56s                   | 0.56s          | 1.4s                      | 1.4s   | 1.3s                       |
| Operating transfer time I-II or II-I, following an order - OTT                | 0.94s                   | 0.96s                   | 0.96s          | 2.8s                      | 2.8s   | 2.4s                       |
| I-0 or II-0 following source's loss or return - POT                           | 0.75s                   | 0.73s                   | 0.74s          | 1.7s                      | 1.5s   | 1.5s                       |
| Operating transfer time I-II or II-I, following source's loss or return - OTT | 1.1s                    | 1.1s                    | 1.1s           | 3.1s                      | 2.9s   | 2.6s                       |


# 9. PROGRAMMING

The ATyS t is to be programmed after wiring verification tests through the front of the ATS Controller.

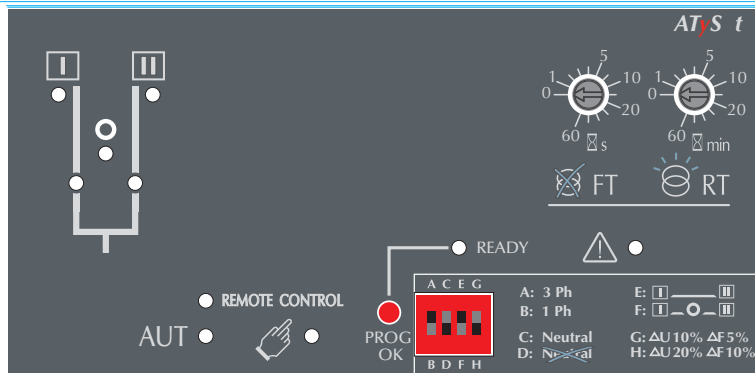


Front of ATS Controller

Programming is carried out in 5 easy steps :

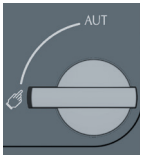

**Note:** Ensure that the ATyS t is in “Manual Mode” with the auxiliary and network supplies available.

- **STEP 1: SET** the Dip Switch positions from “A to H” as required. (4 Dip Switches for configuration settings). *Note: The READY LED will Flash.*
- **STEP 2: SET** the potentiometers paying attention to the arrow indication (2 Potentiometers with 14 stable positions. FT, RT: Failure / Return Timers)
- **STEP 3: Only if Auto Conf is selected.**  
**READ** the network voltage and frequency. (Press the PROG OK button for >2 seconds to read the network values)
- **STEP 4: SAVE** all the configured setting values. (Potentiometers, Dipswitches and Auto Conf. (Press the PROG OK button momentarily to save: <60ms) *Note: The READY LED will stop flashing (OFF).*
- **STEP 5:** To put the unit in service Switch the ATyS t to AUT mode after STEP 4.  
*Note: The READY LED should turn to a Steady Green light.*

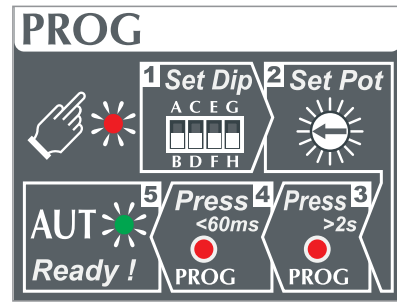

Programming cycle: 5 steps.

Attn: As a safety measure the READY LED will flash when any of the settings shown on the controller are different to those that are saved. To return to the steady READY LED revert to the saved setting values or switch to manual mode and save the displayed value by pressing the PROG OK button briefly. (This is intended as a visual alarm in case one has changed the configuration settings but has not yet saved the new values in the product)

### For added security:

The ATyS t may be equipped with a sealable cover so as to limit access to the configuration settings.

Refer to the product accessory section for details.





### 9.3.1. Step 1: ATyS t DIP switches setting options

Ensure that the product is in manual mode and SET the 4 Dip Switches using a small screw driver. Possible variants vary from positions “A to H” as described in the table below. For convenience, the position functions are also described on the front of the ATS controller adjacent to the dip switches.

**Note:** The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.




| Dip Switch Setting Options |   |   |
|----------------------------|---|---|
| Dipswitch 1<br>A / B       | A | Three Phase Network   |
|                            | B | Single Phase Network<br>(Attn : Dipswitch 2 is inactive in this position)                                   |
| Dipswitch 2<br>C / D       | C | Three Phase 4 wire Network (Including Neutral)<br>(Allows to detect a loss of neutral for unbalanced loads) |
|                            | D | Three Phase 3 wire Network (Without Neutral)  |
| Dipswitch 3<br>E / F       | E | Load supply down time of 0 second (ODT = 0 sec)   |
|                            | F | Load supply down time of 2 seconds (ODT = 2 sec)  |
| Dipswitch 4<br>G / H       | G | Threshold Delta U : 10% / Delta F : 5%  |
|                            | H | Threshold Delta U : 20% / Delta F : 10%   |

When a transfer is initiated after a loss of source, the 2s time delay is counted down from the loss of source.

### 9.3.2. Step 2: ATyS t potentiometer setting options

Ensure that the product is in manual mode and SET the 2 potentiometers using a small screw driver paying attention to the arrow indicating the position. There are a total of 14 time setting positions for which the specific settings are described in the table below.

**Note:** The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.

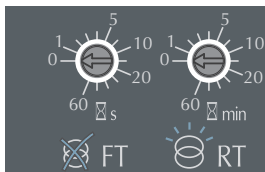


| Functional Description |    |   |
|------------------------|----|---|
| Potentiometer 1        | FT | Supply Source Failure time : 0 to 60s   |
| Potentiometer 2        | RT | Supply Source Return Time : 0 to 60 min |

| Position Setting Identification |   |   |   |   |   |   |   |    |    |    |    |    |    |    |
|---------------------------------|---|---|---|---|---|---|---|----|----|----|----|----|----|----|
| FT (sec)                        | 0 | 1 | 2 | 3 | 4 | 5 | 8 | 10 | 15 | 20 | 30 | 40 | 50 | 60 |
| RT (min)                        | 0 | 1 | 2 | 3 | 4 | 5 | 8 | 10 | 15 | 20 | 30 | 40 | 50 | 60 |

### 9.3.3. Step 3: ATyS t Auto configuration

The ATyS t includes an “Auto Configuration feature to detect the mains voltage, phase rotation, neutral position and frequency nominal values and save them in the ATS controller.

Before configuring the nominal values ensure that the product is properly wired, verified and ready for commissioning. It is imperative that the network supply (208 – 277 Vac ± 20%) is available and that the wiring to the ATyS t voltage sensing terminals 103 – 106 has been done. It is preferable to use the ATyS sensing kit that may be provided as an accessory.

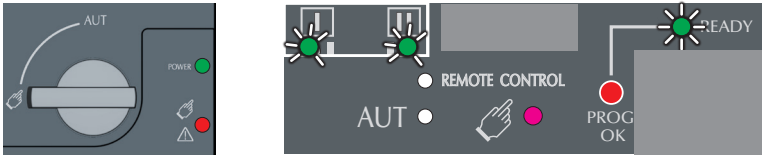

- Ensure that the product is in manual mode.
- Press and hold the Red “PROG OK” button for >2s to measure the supply voltage, frequency, phase rotation and neutral position.

**Note:** The READY LED will flash green (on and off) as soon as settings are measured and until these settings have been saved by pressing the PROG OK button a second time momentarily. (Refer to STEP 4).

### 9.3.4. Step 4: Saving the configured values

To SAVE the recorded setting configuration press the PROG OK button momentarily: <60ms.


**Note:** The flashing READY LED goes off once the values are saved in the ATS controller.



### 9.3.5. Step 5: Putting the ATyS t into auto operation

After following Steps 1 to 4, and once ready to put the ATyS t into AUTO operation turn the mode selector switch to Auto.

**Note:** When the product is powered and properly configured, after switching the product from Manual Mode to Auto Mode the POWER and READY light should be a steady Green light.

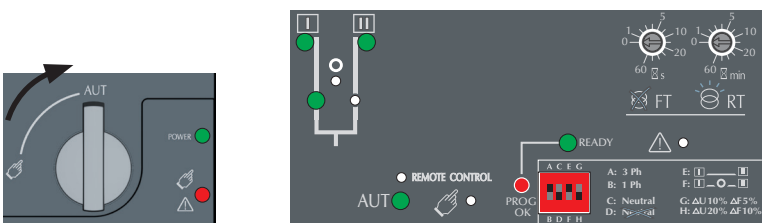

**! WARNING !** Depending on the state of the ATyS t the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.



# 10. CHARACTERISTICS

Characteristics according to IEC 60947-3 and IEC 60947-6-1

125 to 630 A

| Thermal current $I_{th}$ to 40°C                                 | 125 A     | 160 A     | 200 A     | 250 A     | 315 A     | 400 A     | 500 A     | 630 A     |
|--|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| <b>Frame size</b>  | <b>B3</b> | <b>B3</b> | <b>B3</b> | <b>B4</b> | <b>B4</b> | <b>B4</b> | <b>B5</b> | <b>B5</b> |
| Rated insulation voltage $U_i$ (V) (power circuit)               | 800       | 800       | 800       | 1000      | 1000      | 1000      | 1000      | 1000      |
| Rated impulse withstand voltage $U_{imp}$ (kV) (power circuit)   | 8         | 8         | 8         | 12        | 12        | 12        | 12        | 12        |
| Rated insulation voltage $U_i$ (V) (control circuit)             | 300       | 300       | 300       | 300       | 300       | 300       | 300       | 300       |
| Rated impulse withstand voltage $U_{imp}$ (kV) (control circuit) | 4         | 4         | 4         | 4         | 4         | 4         | 4         | 4         |

Rated operational currents  $I_e$  (A) according to IEC 60947-3

| Rated voltage          | Utilisation category | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> |
|------------------------|----------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|
| 415 VAC                | AC-21 A / AC-21 B    | 125/125            | 160/160            | 200/200            | 250/250            | 315/315            | 400/400            | 500/500            | 630/630            |
| 415 VAC                | AC-22 A / AC-22 B    | 125/125            | 160/160            | 200/200            | 250/250            | 315/315            | 400/400            | 500/500            | 630/630            |
| 415 VAC                | AC-23 A / AC-23 B    | 125/125            | 160/160            | 200/200            | 200/200            | 315/315            | 400/400            | 500/500            | 500/630            |
| 500 VAC                | AC-21 A / AC-21 B    | 125/125            | 160/160            | 200/200            | 250/250            | 315/315            | 400/400            | 500/500            | 630/630            |
| 500 VAC                | AC-22 A / AC-22 B    | 125/125            | 160/160            | 200/200            | 200/250            | 200/315            | 200/400            | 500/500            | 500/500            |
| 500 VAC                | AC-23 A / AC-23 B    | 80/80              | 80/80              | 80/80              | 200/200            | 200/200            | 200/200            | 400/400            | 400/400            |
| 690 VAC <sup>(3)</sup> | AC-21 A / AC-21 B    | 125/125            | 160/160            | 200/200            | 200/200            | 200/200            | 200/200            | 500/500            | 500/500            |
| 690 VAC <sup>(3)</sup> | AC-22 A / AC-22 B    | 125/125            | 125/125            | 125/125            | 160/160            | 160/160            | 160/160            | 400/400            | 400/400            |
| 690 VAC <sup>(3)</sup> | AC-23 A / AC-23 B    | 63/80              | 63/80              | 63/80              | 125/125            | 125/125            | 125/125            | 400/400            | 400/400            |
| 220 VDC                | DC-21 A / DC-21 B    | 125/125            | 160/160            | 200/200            | 250/250            | 250/250            | 250/250            | 500/500            | 630/630            |
| 220 VDC                | DC-22 A / DC-22 B    | 125/125            | 160/160            | 200/200            | 250/250            | 250/250            | 250/250            | 500/500            | 630/630            |
| 220 VDC                | DC-23 A / DC-23 B    | 125/125            | 125/125            | 125/125            | 200/200            | 200/200            | 200/200            | 500/500            | 630/630            |
| 440 VDC <sup>(2)</sup> | DC-21 A / DC-21 B    | 125/125            | 125/125            | 125/125            | 200/200            | 200/200            | 200/200            | 500/500            | 630/630            |
| 440 VDC <sup>(2)</sup> | DC-22 A / DC-22 B    | 125/125            | 125/125            | 125/125            | 200/200            | 200/200            | 200/200            | 500/500            | 630/630            |
| 440 VDC <sup>(2)</sup> | DC-23 A / DC-23 B    | 125/125            | 125/125            | 125/125            | 200/200            | 200/200            | 200/200            | 500/500            | 630/630            |

Rated operational currents  $I_e$  (A) according to IEC 60947-6-1

| Rated voltage | Utilisation category |     |     |     |     |     |     |     |     |
|---------------|----------------------|-----|-----|-----|-----|-----|-----|-----|-----|
| 415 VAC       | AC-31 B              | 125 | 160 | 200 | 250 | 315 | 400 | 500 | 630 |
| 415 VAC       | AC-32 B              |     |     |     | 200 | 315 | 400 | 500 | 500 |
| 415 VAC       | AC-33 B              |     |     |     | 200 | 200 | 200 | 400 | 400 |

Current rated as conditional short-circuit with fuse gG DIN, according to IEC 60947-3

|   |     |     |     |     |     |     |     |     |     |
|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Prospective fuse protected short-circuit withstand at 415 VAC(6)      | 100 | 100 | 50  | 50  | 50  | 50  | 50  | 50  | 50  |
| Prospective fuse protected short-circuit withstand at 690 VAC(kA rms) |     |     |     | 50  | 50  | 50  | 50  | 50  | 50  |
| Associated fuse rating (A)  | 125 | 160 | 200 | 250 | 315 | 400 | 500 | 630 | 630 |

Short-circuit withstand without protection as per IEC 60947-3

|  |    |    |    |                   |                   |                   |                   |                   |                   |
|--|----|----|----|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| Rated short-time withstand current 0.3s $I_{cw}$ at 415 VAC (kA rms) | 12 | 12 | 12 | 15 <sup>(4)</sup> | 15 <sup>(4)</sup> | 15 <sup>(4)</sup> | 17 <sup>(4)</sup> | 17 <sup>(4)</sup> | 17 <sup>(4)</sup> |
| Rated short-time withstand current 1s $I_{cw}$ at 415 VAC (kA rms)   | 7  | 7  | 7  | 8 <sup>(4)</sup>  | 8 <sup>(4)</sup>  | 8 <sup>(4)</sup>  | 11 <sup>(4)</sup> | 10 <sup>(4)</sup> | 10 <sup>(4)</sup> |
| Rated peak withstand current at 415 VAC (kA peak)                    | 20 | 20 | 20 | 30                | 30                | 30                | 45                | 45                | 45                |

Short-circuit withstand without protection as per IEC 60947-6-1

|   |    |    |    |    |    |    |    |      |  |
|---|----|----|----|----|----|----|----|------|--|
| Rated short-time withstand current 30 ms $I_{cw}$ at 415 VAC (kA rms) | 10 | 10 | 10 | 10 | 10 | 10 |    |      |  |
| Rated short-time withstand current 60 ms $I_{cw}$ at 415 VAC (kA rms) |    |    |    |    |    |    | 10 | 12.6 |  |

Connection

|  |      |      |      |       |       |       |            |            |
|--|------|------|------|-------|-------|-------|------------|------------|
| Minimum Cu cable cross-section as per IEC 60947-1 (mm <sup>2</sup> ) | 35   | 35   | 50   | 95    | 120   | 185   | 2 x 95     | 2 x 120    |
| Recommended Cu busbar cross-section (mm <sup>2</sup> )               |      |      |      |       |       |       | 2 x 32 x 5 | 2 x 40 x 5 |
| Maximum Cu cable cross-section (mm <sup>2</sup> )                    | 50   | 95   | 120  | 150   | 240   | 240   | 2 x 185    | 2 x 300    |
| Maximum Cu busbar width (mm)   | 25   | 25   | 25   | 32    | 32    | 32    | 50         | 50         |
| Min./max. tightening torque (Nm)                                     | 9/13 | 9/13 | 9/13 | 20/26 | 20/26 | 20/26 | 40/45      | 40/45      |

Switching time (rated voltage, after receiving command)

|  |      |      |      |     |     |     |      |      |
|--|------|------|------|-----|-----|-----|------|------|
| Transfer time I-II or II-I (s)                       | 0.85 | 0.85 | 0.85 | 0.9 | 0.9 | 0.9 | 0.95 | 0.95 |
| I-0 or II-0 (s)                                      | 0.55 | 0.55 | 0.55 | 0.5 | 0.5 | 0.5 | 0.55 | 0.55 |
| Contact transfer time ("black-out" I-II) minimum (s) | 0.3  | 0.3  | 0.3  | 0.4 | 0.4 | 0.4 | 0.4  | 0.4  |

Power supply

|                       |         |         |         |         |         |         |         |         |
|-----------------------|---------|---------|---------|---------|---------|---------|---------|---------|
| Min./max. power (VAC) | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 |
|-----------------------|---------|---------|---------|---------|---------|---------|---------|---------|

Control supply power demand

|  |         |         |         |         |         |         |         |         |
|--|---------|---------|---------|---------|---------|---------|---------|---------|
| Demand/rated power (VA) - ATyS r, ATyS d | 184/92  | 184/92  | 184/92  | 276/115 | 276/115 | 276/115 | 276/150 | 276/150 |
| Demand/rated power (VA) - ATyS t, g, p   | 206/114 | 206/114 | 206/114 | 298/137 | 298/137 | 298/137 | 298/172 | 298/172 |

Mechanical specifications

|   |          |          |          |          |          |          |            |            |
|---|----------|----------|----------|----------|----------|----------|------------|------------|
| Durability (number of operating cycles) | 10,000   | 10,000   | 10,000   | 8,000    | 8,000    | 8,000    | 5,000      | 5,000      |
| Weight ATyS r 3 P / 4 P (kg)            | 5.7/ 6.9 | 5.7/ 6.9 | 5.7/ 6.9 | 6.6/ 7.4 | 6.7/ 7.8 | 6.7/ 7.8 | 11.4/ 13.3 | 11.9/ 14.0 |
| Weight ATyS d 3 P / 4 P (kg)            | 6.3/ 7.5 | 6.3/ 7.5 | 6.3/ 7.5 | 7.2/ 8.0 | 7.3/ 8.4 | 7.3/ 8.4 | 12.0/ 13.9 | 12.5/ 14.6 |
| Weight ATyS t, g, p 3 P / 4 P (kg)      | 6.8/ 8.0 | 6.8/ 8.0 | 6.8/ 8.0 | 7.7/ 8.5 | 7.8/ 8.9 | 7.8/ 8.9 | 12.5/ 14.4 | 13.0/ 15.1 |

(1) Category with index A = frequent operation - Category with index B = infrequent operation.

(2) 3-pole device with 2 pole in series for the "+" and 1 pole for the "-".

4-pole device with 2 poles in series by polarity.

(3) Interphase barriers must be installed on the products.

(4) Values given at 690 VAC.

## 800 to 3200 A

| Thermal current $I_{th}$ at 40°C                                 | 800 A     | 1000 A    | 1250 A    | 1600 A    | 2000 A    | 2500 A    | 3200 A    |
|--|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| <b>Frame size</b>  | <b>B6</b> | <b>B6</b> | <b>B6</b> | <b>B7</b> | <b>B8</b> | <b>B8</b> | <b>B8</b> |
| Rated insulation voltage $U_i$ (V) (power circuit)               | 1000      | 1000      | 1000      | 1000      | 1000      | 1000      | 1000      |
| Rated impulse withstand voltage $U_{imp}$ (kV) (power circuit)   | 12        | 12        | 12        | 12        | 12        | 12        | 12        |
| Rated insulation voltage $U_i$ (V) (control circuit)             | 300       | 300       | 300       | 300       | 300       | 300       | 300       |
| Rated impulse withstand voltage $U_{imp}$ (kV) (control circuit) | 4         | 4         | 4         | 4         | 4         | 4         | 4         |

### Rated operational currents $I_e$ (A) according to IEC 60947-3

| Rated voltage          | Utilisation category | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> | A/B <sup>(1)</sup> |
|------------------------|----------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|
| 415 VAC                | AC-21 A / AC-21 B    | 800/800            | 1000/1000          | 1250/1250          | 1600/1600          | -/2000             | -/2500             | -/3200             |
| 415 VAC                | AC-22 A / AC-22 B    | 800/800            | 1000/1000          | 1250/1250          | 1600/1600          | -/2000             | -/2500             | -/3200             |
| 415 VAC                | AC-23 A / AC-23 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          | -/1600             | -/1600             | -/1600             |
| 500 VAC                | AC-21 A / AC-21 B    | 800/800            | 1000/1000          | 1250/1250          | 1600/1600          | -/2000             | -/2000             | -/2000             |
| 500 VAC                | AC-22 A / AC-22 B    | 630/630            | 800/800            | 1000/1000          | 1600/1600          |                    |                    |                    |
| 500 VAC                | AC-23 A / AC-23 B    | 630/630            | 630/630            | 800/800            | 1000/1000          |                    |                    |                    |
| 690 VAC <sup>(3)</sup> | AC-21 A / AC-21 B    | 800/800            | 1000/1000          | 1250/1250          | 1600/1600          | -/2000             | -/2000             | -/2000             |
| 690 VAC <sup>(3)</sup> | AC-22 A / AC-22 B    | 630/630            | 800/800            | 1000/1000          | 1000/1000          |                    |                    |                    |
| 690 VAC <sup>(3)</sup> | AC-23 A / AC-23 B    | 630/630            | 630/630            | 800/800            | 800/800            |                    |                    |                    |
| 220 VDC                | DC-21 A / DC-21 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          |                    |                    |                    |
| 220 VDC                | DC-22 A / DC-22 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          |                    |                    |                    |
| 220 VDC                | DC-23 A / DC-23 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          |                    |                    |                    |
| 440 VDC <sup>(2)</sup> | DC-21 A / DC-21 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          |                    |                    |                    |
| 440 VDC <sup>(2)</sup> | DC-22 A / DC-22 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          |                    |                    |                    |
| 440 VDC <sup>(2)</sup> | DC-23 A / DC-23 B    | 800/800            | 1000/1000          | 1250/1250          | 1250/1250          |                    |                    |                    |

### Rated operational currents $I_e$ (A) according to IEC 60947-6-1

| Rated voltage | Utilisation category |     |      |      |      |      |      |      |
|---------------|----------------------|-----|------|------|------|------|------|------|
| 415 VAC       | AC-31 B              | 800 | 1000 | 1250 | 1600 | 2000 | 2500 | 3200 |
| 415 VAC       | AC-32 B              | 800 | 1000 | 1250 | 1250 | 2000 | 2000 | 2000 |
| 415 VAC       | AC-33 B              | 800 | 1000 | 1000 | 1000 | 1250 | 1250 | 1250 |

### Current rated as conditional short-circuit with fuse gG DIN, according to IEC 60947-3

|  |     |      |      |       |  |  |  |  |
|--|-----|------|------|-------|--|--|--|--|
| Prospective fuse protected short-circuit withstand at 415 VAC (kA rms) | 50  | 50   | 100  | 100   |  |  |  |  |
| Prospective fuse protected short-circuit withstand at 690 VAC (kA rms) | 50  | 50   | 50   |       |  |  |  |  |
| Associated fuse rating (A)   | 800 | 1000 | 1250 | 2x800 |  |  |  |  |

### Short-circuit withstand without protection as per IEC 60947-3

|  |    |    |    |     |     |     |     |     |
|--|----|----|----|-----|-----|-----|-----|-----|
| Rated short-time withstand current $0.3s I_{cw}$ at 415 VAC (kA rms) | 64 | 64 | 64 | 78  | 78  | 78  | 78  | 78  |
| Rated short-time withstand current $1s I_{cw}$ at 415 VAC (kA rms)   | 35 | 35 | 35 | 50  | 50  | 50  | 50  | 50  |
| Rated peak withstand current at 415 VAC (kA peak)                    | 55 | 55 | 80 | 110 | 120 | 120 | 120 | 120 |

### Short-circuit withstand without protection as per IEC 60947-6-1

|  |    |    |    |    |    |    |    |    |
|--|----|----|----|----|----|----|----|----|
| Rated short-time withstand current $30ms I_{cw}$ at 415 VAC (kA rms) |    |    |    |    |    |    |    |    |
| Rated short-time withstand current $60ms I_{cw}$ at 415 VAC (kA rms) | 20 | 20 | 25 | 32 | 50 | 50 | 50 | 50 |

### Connection

|  |            |            |            |             |             |              |              |  |
|--|------------|------------|------------|-------------|-------------|--------------|--------------|--|
| Minimum Cu cable cross-section as per IEC 60947-1 (mm <sup>2</sup> ) | 2 x 185    |            |            |             |             |              |              |  |
| Recommended Cu busbar cross-section (mm <sup>2</sup> )               | 2 x 50 x 5 | 2 x 63 x 5 | 2 x 60 x 7 | 2 x 100 x 5 | 3 x 100 x 5 | 2 x 100 x 10 | 3 x 100 x 10 |  |
| Maximum Cu cable cross-section (mm <sup>2</sup> )                    | 4 x 185    | 4 x 185    | 4 x 185    | 6 x 185     |             |              |              |  |
| Maximum Cu busbar width (mm)   | 63         | 63         | 63         | 100         | 100         | 100          | 100          |  |
| Min./max. tightening torque (Nm)                                     | 9/13       | 9/13       | 20/26      | 40/45       | 40/45       | 40/45        | 40/45        |  |

### Switching time (rated voltage, after receiving command)

|  |     |     |     |     |     |     |     |     |
|--|-----|-----|-----|-----|-----|-----|-----|-----|
| Transfer time I-II or II-I (s)                       | 2.8 | 2.8 | 2.8 | 2.9 | 2.8 | 2.8 | 2.8 | 2.8 |
| I-0 or II-0 (s)                                      | 1.4 | 1.4 | 1.4 | 1.4 | 1.8 | 1.8 | 1.8 | 1.8 |
| Contact transfer time ("black-out" I-II) minimum (s) | 1.4 | 1.4 | 1.4 | 1.5 | 1   | 1   | 1   | 1   |

### Power supply

|                       |         |         |         |         |         |         |         |         |
|-----------------------|---------|---------|---------|---------|---------|---------|---------|---------|
| Min./max. power (VAC) | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 | 166/332 |
|-----------------------|---------|---------|---------|---------|---------|---------|---------|---------|

### Control supply power demand

|  |         |         |         |         |         |         |         |         |
|--|---------|---------|---------|---------|---------|---------|---------|---------|
| Demand/rated power (VA) - ATyS r, ATyS d | 460/184 | 460/184 | 460/184 | 460/230 | 812/322 | 812/322 | 812/322 | 812/322 |
| Demand/rated power (VA) - ATyS t, g, p   | 482/206 | 482/206 | 482/206 | 482/252 | 834/344 | 834/344 | 834/344 | 834/344 |

### Mechanical specifications

|   |            |            |            |            |            |            |            |       |
|---|------------|------------|------------|------------|------------|------------|------------|-------|
| Durability (number of operating cycles) | 4,000      | 4,000      | 4,000      | 3,000      | 3,000      | 3,000      | 3,000      | 3,000 |
| Weight ATyS r 3 P / 4 P (kg)            | 27.9/ 32.2 | 28.4/ 32.9 | 28.9/ 33.6 | 33.1/ 39.4 | 50.7/ 61.6 | 50.7/ 61.6 | 61.0/ 75.3 |       |
| Weight ATyS d 3 P / 4 P (kg)            | 28.5/ 32.8 | 29.0/ 33.5 | 29.5/ 34.2 | 33.7/ 40.0 | 51.3/ 62.2 | 51.3/ 62.2 | 61.6/ 75.9 |       |
| Weight ATyS t, g, p 3 P / 4 P (kg)      | 29.0/ 33.3 | 29.5/ 34.0 | 30.0/ 34.7 | 34.2/ 40.5 | 51.8/ 62.7 | 51.8/ 62.7 | 62.1/ 76.4 |       |

(1) Category with index A = frequent operation - Category with index B = infrequent operation.

(3) Interphase barriers must be installed on the products.

(2) 3-pole device with 2 pole in series for the "+" an 1 pole for the "-".

(4) Values given at 690 VAC.

4-pole device with 2 poles in series by polarity.

# 11. PREVENTIVE MAINTENANCE

It is recommended to verify at least once a year:

- Review event log (ATyS p).
- Check number of operations and other switch status figures (ATyS p).
- Visual inspection for damage.
- Temperature measurement of terminals is within expected range.
- Test transfer of load : operate the product in a full operating cycle (I – 0 – II – 0 – I: Auto and Manual).
- Observe voltage levels of both sources within expected range.



Note: Maintenance should be planned carefully and carried out by qualified and authorised personnel. Consideration of the critical level and application where the product is installed should form an essential and integral part of the maintenance plan. Good engineering practice is imperative whilst all necessary precautions must be taken to ensure that the intervention (whether directly or indirectly) remains safe in all aspects.



**WARNING ! The use Megohmmeter when the motor or electronic modules are connected is prohibited on this product as the connection terminals are intrinsically connected to the sensing circuit.**

## 12. TROUBLE SHOOTING GUIDE

|  |   |
|--|---|
| <p>The ATyS t does not operate electrically</p>                          | <ul style="list-style-type: none"> <li>• Verify the power supply on terminals 101-102 and 201-202: 208 - 277 Vac <math>\pm</math>20 %</li> <li>• Verify that the front selector switch is in position (AUT)</li> <li>• Verify that contacts 313 and 317 are open.</li> <li>• Verify that the power LED (Green) is On whilst the fault LED (RED) is off.</li> <li>• Verify that the Ready light on the ATS controller is a steady Green light.</li> <li>• Verify presence of at least one green LED on the source supply available LED's .</li> <li>• Verify that the product is available with contacts 63A / 64A and 63B / 64B closed.</li> <li>• Verify whether the problem is limited to the ATS controls + the motorisation module or just the ATS controls.</li> </ul> <p><b>Note:</b> To isolate the fault to the ATS controller or the complete unit, close contacts 312 with 317 whilst ensuring that 313 and 317 remain open. This will force the ATyS t into remote control which will bypass the ATS controller and accept position orders from contacts 314 to 317.</p> |
| <p>It is not possible to manually operate the switch</p>                 | <ul style="list-style-type: none"> <li>• Verify that the front selector switch position is on the Manual position.</li> <li>• Make sure that the product is not padlocked</li> <li>• Verify the rotation direction of the handle</li> <li>• Apply a sufficient progressive action in the direction as indicated on the handle</li> </ul>  |
| <p>Electrical operation does not correspond to external order I,O,II</p> | <ul style="list-style-type: none"> <li>• Verify the selected control logic wiring (impulse or contactor)</li> <li>• Verify the connector connections.</li> </ul>  |
| <p>Impossible to padlock</p>   | <ul style="list-style-type: none"> <li>• Verify that the front selector switch is in manual position</li> <li>• Verify that the emergency handle for manual operation is not inserted into the ATyS manual slot.</li> <li>• Verify that the ATyS is in 0 position</li> <li>• (Padlocking is only possible in 0 position for standard products)</li> </ul>   |
| <p>The ready light remains flashing</p>                                  | <ul style="list-style-type: none"> <li>• The Ready light flashes so as to indicate that the saved configuration is not identical to what is displayed on the ATS controller. This could be due to a user not yet having saved the configuration settings or that the potentiometer setting was changed and has not been saved. To get a steady READY light either revert to the settings in the ATyS t or save the new settings. To save put into manual mode and press the PROG OK button momentarily.</li> </ul>  |
| <p>The AUT light is flashing</p>   | <ul style="list-style-type: none"> <li>• The AUT LED will be steady green when in AUTO Mode and will be flashing green when the ATyS t has timers running.</li> <li>• This is usually a normal indication.</li> </ul>   |
| <p>The fault LED is ON (Motorisation)</p>                                | <ul style="list-style-type: none"> <li>• The FAULT / MANUAL LED on the motorisation module is on when in manual mode (this is normal) and in AUT Mode when there is an internal fault in the ATyS t. To reset a fault condition switch the ATyS t from AUT to Manu and back to AUT. Should the fault LED remain on you will need to localize and clear the fault prior to reset.</li> <li>• The FAULT / Manual LED will also be on when contact 313 is closed with 317. (Force the ATyS to off position). This is a normal condition.</li> <li>• The FAULT LED will also illuminate when the aux power supply is present but out of range.</li> <li>• Should the Fault LED remain on abnormally, contact SOCOMEC.</li> </ul>  |
| <p>The fault LED is on (ATS Controller)</p>                              | <ul style="list-style-type: none"> <li>• Switch the ATyS t from AUT to Manual and back to AUT. Should the fault condition remain contact SOCOMEC)</li> </ul>  |
| <p>Sources availability LEDs and fault LED are blinking</p>              | <ul style="list-style-type: none"> <li>• Check phase rotation consistency between both sources.</li> <li>• Check neutral position consistency between both sources.</li> </ul>  |

# 13. ACCESSORIES

## 13.1. Terminal shrouds


### Use

IP2X protection against direct contact with terminals or connecting parts.

### Advantages

Perforations allow remote thermographic inspection without the need to remove the shrouds.

| Rating (A)  | Frame size | No. of poles | Position                             | Reference                          |
|-------------|------------|--------------|--------------------------------------|------------------------------------|
| 125 ... 200 | B3         | 3 P          | top / bottom / front (I) / rear (II) | 2694 <b>3014</b> <sup>(1)(2)</sup> |
| 125 ... 200 | B3         | 4 P          | top / bottom / front (I) / rear (II) | 2694 <b>4014</b> <sup>(1)(2)</sup> |
| 250 ... 400 | B4         | 3 P          | top / bottom / front (I) / rear (II) | 2694 <b>3021</b> <sup>(1)(2)</sup> |
| 250 ... 400 | B4         | 4 P          | top / bottom / front (I) / rear (II) | 2694 <b>4021</b> <sup>(1)(2)</sup> |
| 500 ... 630 | B5         | 3 P          | top / bottom / front (I) / rear (II) | 2694 <b>3051</b> <sup>(1)(2)</sup> |
| 500 ... 630 | B5         | 4 P          | top / bottom / front (I) / rear (II) | 2694 <b>4051</b> <sup>(1)(2)</sup> |

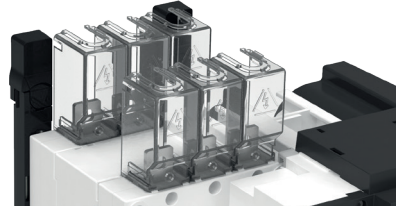

(1) To shroud front switch top and bottom 2 references required.

(2) To fully shroud front, rear, top and bottom 4 references required.


## 13.2. Terminal screens

### Use

Top and bottom protection against direct contact with terminals or connection parts.

For upstream and downstream protection, order the reference once.

| Rating (A)    | Frame size | No. of poles | Position     | Reference        |
|---------------|------------|--------------|--------------|------------------|
| 125 ... 200   | B3         | 3 P          | top / bottom | 1509 <b>3012</b> |
| 125 ... 200   | B3         | 4 P          | top / bottom | 1509 <b>4012</b> |
| 250 ... 400   | B4         | 3 P          | top / bottom | 1509 <b>3025</b> |
| 250 ... 400   | B4         | 4 P          | top / bottom | 1509 <b>4025</b> |
| 500 ... 630   | B5         | 3 P          | top / bottom | 1509 <b>3063</b> |
| 500 ... 630   | B5         | 4 P          | top / bottom | 1509 <b>4063</b> |
| 800 ... 1250  | B6         | 3 P          | top / bottom | 1509 <b>3080</b> |
| 800 ... 1250  | B6         | 4 P          | top / bottom | 1509 <b>4080</b> |
| 1600          | B7         | 3 P          | top / bottom | 1509 <b>3160</b> |
| 1600          | B7         | 4 P          | top / bottom | 1509 <b>4160</b> |
| 2000 ... 3200 | B8         | 3 P          | top / bottom | 1509 <b>3200</b> |
| 2000 ... 3200 | B8         | 4 P          | top / bottom | 1509 <b>4200</b> |

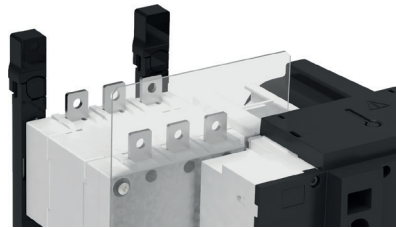

## 13.3. Inter-phase barrier

### Use

Safe isolation between the terminals, essential for use at 690 VAC or in a polluted or dusty atmosphere.

| Rating (A)   | Frame size | No. of poles | Reference        |
|--------------|------------|--------------|------------------|
| 125 ... 200  | B3         | 3 P          | 2998 <b>0033</b> |
| 125 ... 200  | B3         | 4 P          | 2998 <b>0034</b> |
| 250 ... 400  | B4         | 3 P          | 2998 <b>0023</b> |
| 250 ... 400  | B4         | 4 P          | 2998 <b>0024</b> |
| 500 ... 630  | B5         | 3 P          | 2998 <b>0013</b> |
| 500 ... 630  | B5         | 4 P          | 2998 <b>0014</b> |
| 800 ... 3200 | B6 ... B8  | 3/4 P        | included         |




## 13.4. Bridging bars

### Use

For bridging power terminals on the top or bottom side of the switch.  
One piece required per pole.

| Rating (A)   | Frame size | No. of poles | Section (mm) | Reference |
|--------------|------------|--------------|--------------|-----------|
| 125 ... 200  | B3         | 3 P          | 20 x 2.5     | 4109 3019 |
| 125 ... 200  | B3         | 4 P          | 20 x 2.5     | 4109 4019 |
| 250          | B4         | 3 P          | 25 x 2.5     | 4109 3025 |
| 250          | B4         | 4 P          | 25 x 2.5     | 4109 4025 |
| 315 ... 400  | B4         | 3 P          | 32 x 5       | 4109 3039 |
| 315 ... 400  | B4         | 4 P          | 32 x 5       | 4109 4039 |
| 500          | B5         | 3 P          | 32 x 5       | 4109 3050 |
| 500          | B5         | 4 P          | 32 x 5       | 4109 4050 |
| 630          | B5         | 3 P          | 50 x 5       | 4109 3063 |
| 630          | B5         | 4 P          | 50 x 5       | 4109 4063 |
| 800 ... 1000 | B6         | 3 P          | 50 x 6       | 4109 3080 |
| 800 ... 1000 | B6         | 4 P          | 50 x 6       | 4109 4080 |
| 1250         | B6         | 3 P          | 60 x 8       | 4109 3120 |
| 1250         | B6         | 4 P          | 60 x 8       | 4109 4120 |
| 1600         | B7         | 3 P          | 90 x 10      | 4109 3160 |
| 1600         | B7         | 4 P          | 90 x 10      | 4109 4160 |

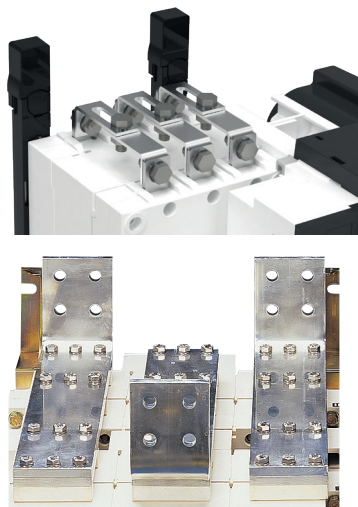

## 13.5. Copper bar connection kits

### Use

Enables:

- connection between the two power terminals of the same pole for 2000 to 3200 A ratings (Fig. 1 and Fig 2)
- up or downstream bridging connection (Fig. 3).

For 3200 A rating, the connection pieces (part A) are delivered bridged from factory. Bolt sets must be ordered separately.

Further details for these specific accessories are available in the user guide downloadable from [www.socomec.com](http://www.socomec.com).

The numbers given in the table below refer to the contact connection.

|                            | Part number | 2000 – 2500 A    |        |                        | 3200 A           |          |                        |
|----------------------------|-------------|------------------|--------|------------------------|------------------|----------|------------------------|
|                            |             | Fig. 1           | Fig. 2 | Fig. 3                 | Fig. 1           | Fig. 2   | Fig. 3                 |
|                            |             | Connection       |        | Outage bridge I and II | Connection       |          | Outage bridge I and II |
| Flat                       | Onsite      | Flat             | Onsite |                        |                  |          |                        |
| Connection part A          | 2619 1200   | 1                | 1      | 2 <sup>(2)</sup>       | included         | included | included               |
| Screw kit 35 mm part B     | 2699 1201   | 1 <sup>(1)</sup> |        | 2 <sup>(2)</sup>       | 1 <sup>(1)</sup> |          | 2 <sup>(2)</sup>       |
| Screw kit 45 mm part B     | 2699 1200   | 1 <sup>(1)</sup> |        |                        | 1 <sup>(1)</sup> |          |                        |
| T + screw kit part C       | 2629 1200   |                  | 1      | 1                      |                  | 1        | 1                      |
| Bracket + screw kit part D | 2639 1200   |                  | 1      |                        |                  | 1        |                        |
| Bar + screw kit part E     | 4109 0320   |                  |        | 1                      |                  |          | 1                      |

Then multiply the quantity by the number of contacts you need.

<sup>(1)</sup> Choose the right length according to the width of the bars in place. If more than 20 mm, use 45 mm screws.

<sup>(2)</sup> For the bridging setup you need 2 parts for each pole as the contacts of units I and II are connected.

For example, for a 4 P 2500 A with onsite upstream connection (Fig. 2) and downstream bridging (Fig. 3), please order

16 x 2619 1200    12 x 2629 1200  
8 x 2699 1201    4 x 4109 0320  
8 x 2639 1200

Fig. 1

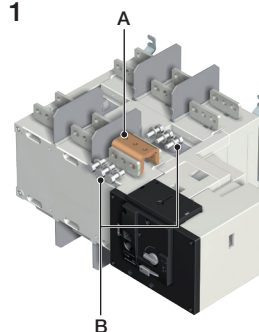


Fig. 2


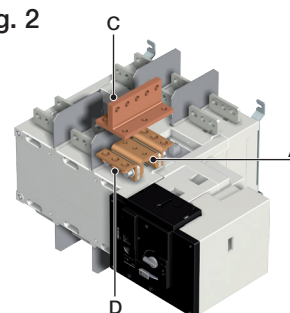


Fig. 3

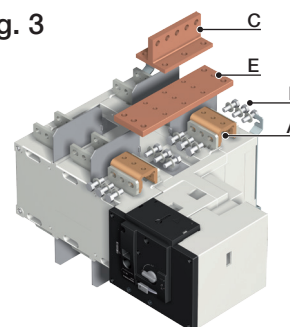

## 13.6. Solid neutral

### Use

The connection kit enables the connection between the input and output neutrals, without any need to switch the neutral.

| Rating (A)   | Frame size | Reference |
|--------------|------------|-----------|
| 125 ... 200  | B3         | 9509 0012 |
| 200 ... 315  | B4         | 9509 0025 |
| 400          | B4         | 9509 0040 |
| 500 ... 630  | B5         | 9509 0063 |
| 800 ... 1000 | B6         | 9509 0080 |
| 1250         | B6         | 9509 0120 |
| 1600         | B7         | 9509 0160 |

## 13.7. Autotransformer 400/230 VAC

### Use

For applications without neutral, this autotransformer provides the 230 VAC required to power these ATyS products.

| Rating (A)   | Frame size | Reference |
|--------------|------------|-----------|
| 125 ... 3200 | B3 ... B8  | 1599 4064 |

## 13.8. DC power supply

### Use

Allows an ATyS to be supplied from a 12, 24 or 48 VDC source. To be positioned as close as possible to the DC power supply source.

| Rating (A)   | Frame size | Operating voltage | Reference |
|--------------|------------|-------------------|-----------|
| 125 ... 3200 | B3 ... B8  | 12 VDC / 230 VAC  | 1599 5012 |
| 125 ... 3200 | B3 ... B8  | 24 VDC / 230 VAC  | 1599 5112 |
| 125 ... 1600 | B3 ... B7  | 48 VDC / 230 VAC  | 1599 5212 |

## 13.9. Voltage sensing and power supply kit

### Use


For power supply and voltage measurement (4 wire, three-phase) for the ATyS t, g and p.

Routing of the conductors is controlled, which means that no specific protective device is necessary for these connections.


The kit can be fitted on the top or bottom of the switch.

**Note: the 3-pole version does not integrate the power supply.**

From 125 to 630 A

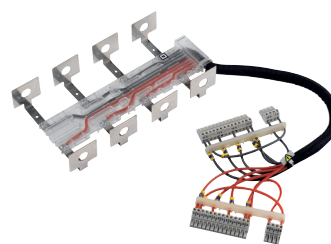

From 800 to 3200 A

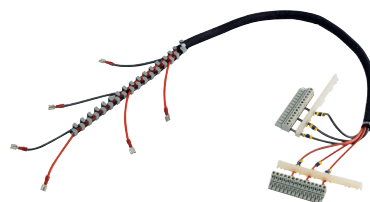

| For ATyS t, g and p - 3 poles |            |           |
|-------------------------------|------------|-----------|
| Rating (A)                    | Frame size | Reference |
| 125 ... 200                   | B3         | 1559 3012 |
| 250                           | B4         | 1559 3025 |
| 315 ... 400                   | B4         | 1559 3040 |
| 500 ... 630                   | B5         | 1559 3063 |
| 800 ... 1000                  | B6         | 1559 3080 |
| 1250                          | B6         | 1559 3120 |
| 1600                          | B7         | 1559 3160 |
| 2000 ... 3200                 | B8         | 1559 3200 |

| For ATyS t, g and p - 4 poles |            |           |
|-------------------------------|------------|-----------|
| Rating (A)                    | Frame size | Reference |
| 125 ... 200                   | B3         | 1559 4012 |
| 250                           | B4         | 1559 4025 |
| 315 ... 400                   | B4         | 1559 4040 |
| 500 ... 630                   | B5         | 1559 4063 |
| 800 ... 1000                  | B6         | 1559 4080 |
| 1250                          | B6         | 1559 4120 |
| 1600                          | B7         | 1559 4160 |
| 2000 ... 3200                 | B8         | 1559 4200 |

## 13.10. Voltage relay

### Use

The ATyS DS is a voltage relay for monitoring a three-phase power supply source.

The fault relay will close as soon as a fault is detected on the supply being monitored.

| Rating (A) | Reference |
|------------|-----------|
| DS         | 192X 0056 |




## 13.11. Door protective surround

### Use

When direct access to the ATyS front face (mode selection, manual operation, display...) is required, the door surround can be utilised to provide a clean and safe finish to the panel's cut-out.

| For ATyS r   |            |                  |
|--------------|------------|------------------|
| Rating (A)   | Frame size | Reference        |
| 125 ... 630  | B3 ... B5  | 1529 <b>0012</b> |
| 800 ... 3200 | B6 ... B8  | 1529 <b>0080</b> |

| For ATyS d, t, g and p |            |                  |
|------------------------|------------|------------------|
| Rating (A)             | Frame size | Reference        |
| 125 ... 630            | B3 ... B5  | 1539 <b>0012</b> |
| 800 ... 3200           | B6 ... B8  | 1539 <b>0080</b> |

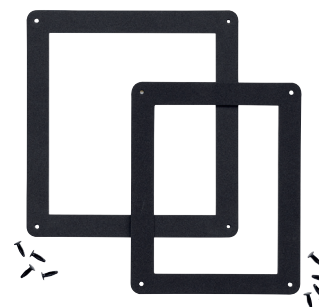

## 13.12. Auxiliary contacts (additional)

### Use


Pre breaking and signalling of positions I and II: each reference provides a single factory or customer fitted NO/NC contacts for both positions.

Low level auxiliary contacts: please consult us.

| Rating (A)   | Frame size | Nominal current (A) | Operating current I <sub>o</sub> (A) |               |              |              |
|--------------|------------|---------------------|--------------------------------------|---------------|--------------|--------------|
|              |            |                     | 250 VAC AC-13                        | 400 VAC AC-13 | 24 VDC DC-13 | 48 VDC DC-13 |
| 125 ... 3200 | B3 ... B8  | 16                  | 12                                   | 8             | 14           | 6            |

| Rating (A)    | Frame size | Type of mounting | Reference                      |
|---------------|------------|------------------|--------------------------------|
| 125 ... 630   | B3 ... B5  | Customer fitted  | 1599 <b>0502<sup>(1)</sup></b> |
| 800 ... 1600  | B6 ... B7  | Customer fitted  | 1599 <b>0532<sup>(1)</sup></b> |
| 2000 ... 3200 | B8         | -                | included                       |

(1) Up to 2 auxiliary contacts can be ordered.

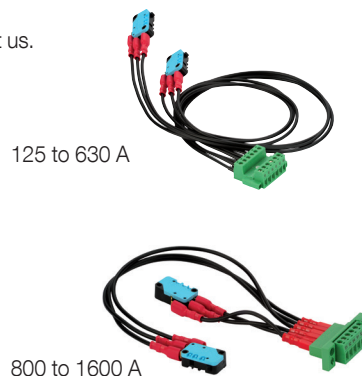

## 13.13. 3 position padlocking (I - 0 - II)

### Use

Enables the ATyS to be padlocked in the 3 positions 0, I and II (factory fitted).

| Rating (A)   | Frame size | Reference        |
|--------------|------------|------------------|
| 125 ... 630  | B3 ... B5  | 9599 <b>0003</b> |
| 800 ... 3200 | B6 ... B8  | 9599 <b>0004</b> |



## 13.14. RONIS Key interlocking system

### Use

With the product in manual mode, it enables locking in position 0 using a RONIS EL11AP lock (factory fitted).

As standard, locking in position 0.

Optional padlocking in 3 positions: locking in position I, 0 or II.

| Rating (A)   | Frame size | Reference        |
|--------------|------------|------------------|
| 125 ... 630  | B3 ... B5  | 9599 <b>1006</b> |
| 800 ... 3200 | B6 ... B8  | 9599 <b>1004</b> |



## 13.15. Remote interface

### Use

To remotely display source availability and position indication typically used on the front of a panel when the product is enclosed. Interfaces are powered from the ATyS transfer switch via the RJ45 connection cable. Maximum cable length: 3 m.

### D10 - for ATyS d, t and g

To display source availability and position indication on the front panel of an enclosure. Protection degree: IP21.

### D20 - for ATyS p

In addition to the functions of the ATyS D10, the D20 displays measurements and enables control and configuration from the front of a panel. Protection degree: IP21.


### Door mounting

2 holes Ø 22.5. ATyS transfer switch connection via RJ45 cable, not isolated. Cable available as an accessory.



Interfaces are powered from the ATyS

Drillings

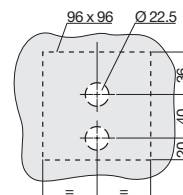

| Description of accessories | Reference |
|----------------------------|-----------|
| D10                        | 9599 2010 |
| D20                        | 9599 2020 |



## 13.16. Connection cable for remote interface

### Use

To connect between a remote interface (type D10 or D20) and an ATyS transfer switch (ATyS d, t, g or p).

RJ45 8 wire straight-through, non isolated cable. Length 3m.

### Characteristics

| For ATyS d, t, g and p |        |           |
|------------------------|--------|-----------|
| Type                   | Length | Reference |
| RJ45 cable             | 3 m    | 1599 2009 |



access\_209\_a\_2\_cat

## 13.17. Sealable cover

### Use - for ATyS t and g

Prevents access to the ATyS t and g configuration potentiometers and DIP switches (seals supplied).

| Rating (A)   | Frame size | Reference |
|--------------|------------|-----------|
| 125 ... 3200 | B3 ... B8  | 9599 0000 |



atyS\_b70\_a

## 13.18. Auto/Manual key selector

### Use

Replaces the standard Auto/Manual selector knob with a key selector, providing added security by preventing unauthorised use of product. Customer assembly required.

| Rating (A)   | Frame size | Reference |
|--------------|------------|-----------|
| 125 ... 3200 | B3 ... B8  | 9599 1007 |



atyS\_b69\_a

# 14. SPARE PARTS

## 14.1. Electronic module

The electronic module of ATyS d, t, g and p can be easily replaced in case of problems, even when the load is supplied. Provided with required connectors.

| Product model | References |
|---------------|------------|
| ATyS d        | 9539 2001  |
| ATyS t        | 9549 2001  |
| ATyS g        | 9559 2001  |
| ATyS p        | 9579 2001  |



## 14.2. Motorisation module


The motorisation module of ATyS r, d, t, g and p can be easily replaced in case of problems, even when the load is supplied. Provided with required connectors.

| Rating          | References |
|-----------------|------------|
| 125 ... 200 A   | 9509 5020  |
| 250 ... 400 A   | 9509 5040  |
| 500 ... 630 A   | 9509 5063  |
| 800 ... 1250 A  | 9509 5120  |
| 1600 A          | 9509 5160  |
| 2000 ... 3200 A | 9509 5320  |



## 14.3. Power section


References to be used for replacing the switching module of ATyS r, d, t, g or p. Please contact SOCOMEC.

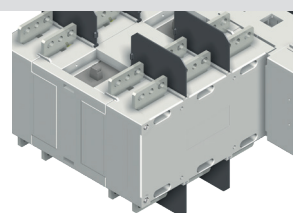

## 14.4. Kit of connectors

The kit contains all connectors need to be replaced or missing for ATyS r, d, t, g or p.


| Connectors Kit for | Reference |
|--------------------|-----------|
| ATyS r, d, t, g, p | 1609 0597 |

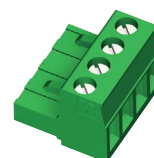

## 14.5. Metal mounting brackets

This accessory may also be used to replace the original metal mounting brackets. Composed of 2 metal mounting brackets and 4 plastic covers.

| Rating (A)  | Frame size | Reference |
|-------------|------------|-----------|
| 125 ... 630 | B3 ... B5  | 1509 0003 |

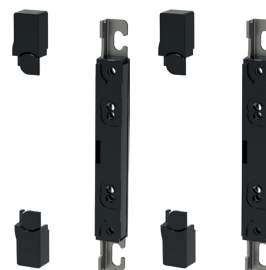

# 15. ATYS FAMILY: ORDERING INFORMATION


The following is an ordering guide for ATYS Motorised Transfer Switches delivered inclusive of the emergency handle and storage clip. This guide is intended so as to explain the logic behind SOCOMEC ATYS reference numbers.

When ordering please consult the latest SOCOMEC catalogue.

## Typical UL 1008 (Optional Standby Power) ATYS reference



**97 2 3 4 0 1 0**

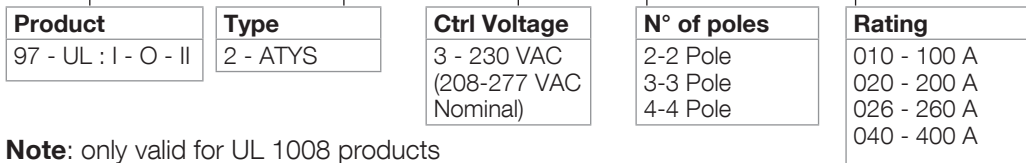


**Note:** only valid for UL 1008 products

## Typical IEC 60947-6-1 ATYS reference



**95 2 3 4 063**

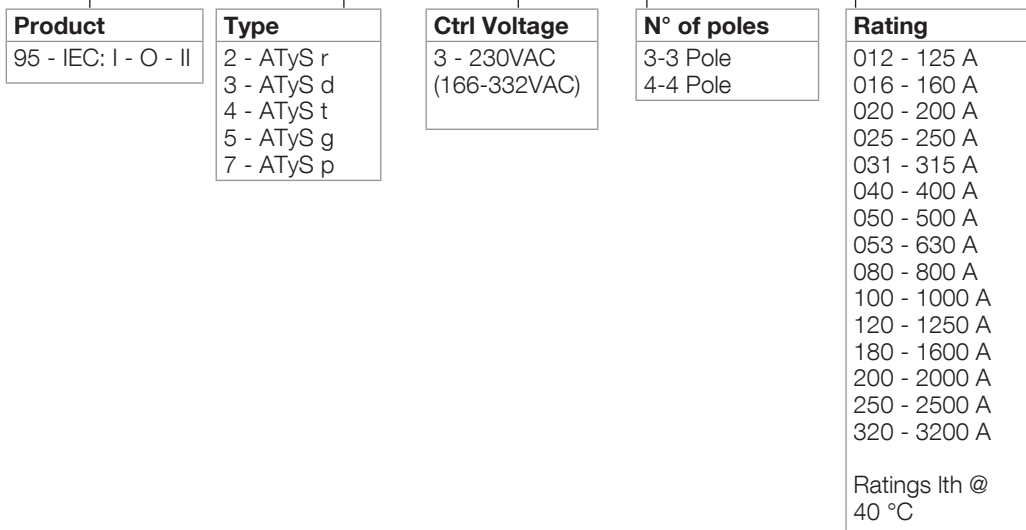



---

CORPORATE HQ CONTACT:  
SOCOMEC SAS  
1-4 RUE DE WESTHOUSE  
67235 BENFELD, FRANCE

---

[www.socomec.com](http://www.socomec.com)



541995D

 **socomec**  
Innovative Power Solutions